

# ASSEMBLY INSTRUCTIONS

## Quadro Square Counter Frame

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**


Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate




### Sizes:

1000x1000  
1200x700  
1200x1200  
1400x700  
1600x700  
1800x700  
2000x700  
2400x1200

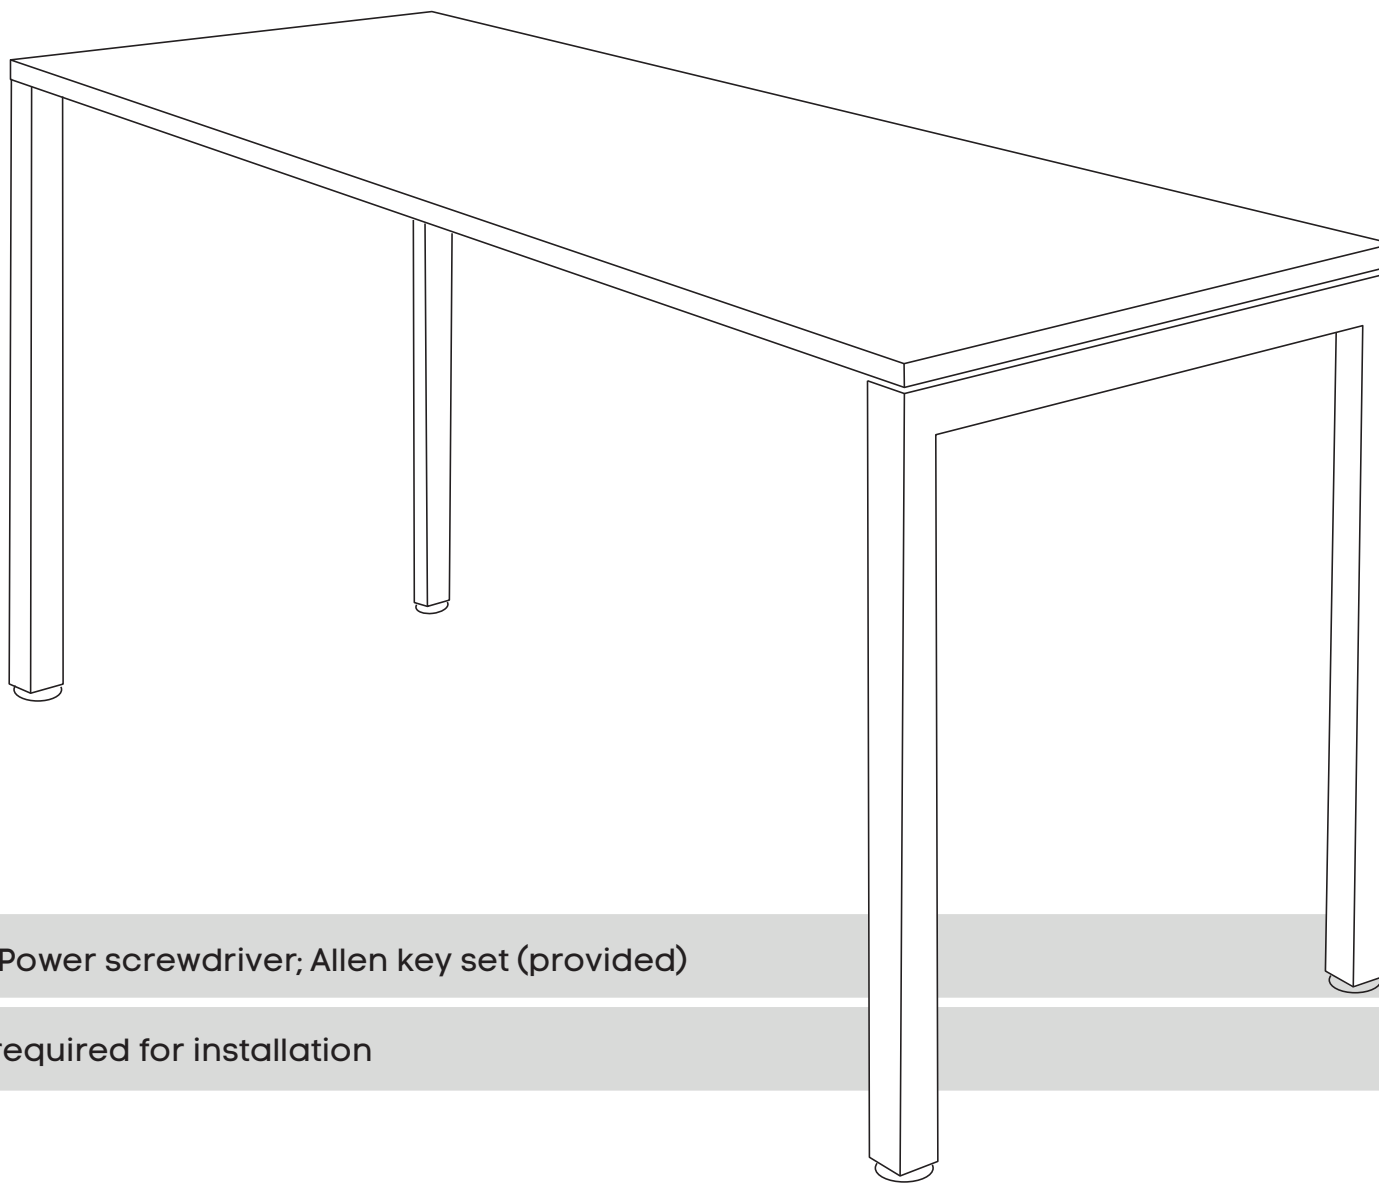

**Tools Required:** Power screwdriver; Allen key set (provided)

 2 persons required for installation

# ASSEMBLY INSTRUCTIONS


## Quadro Square Counter Frame

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

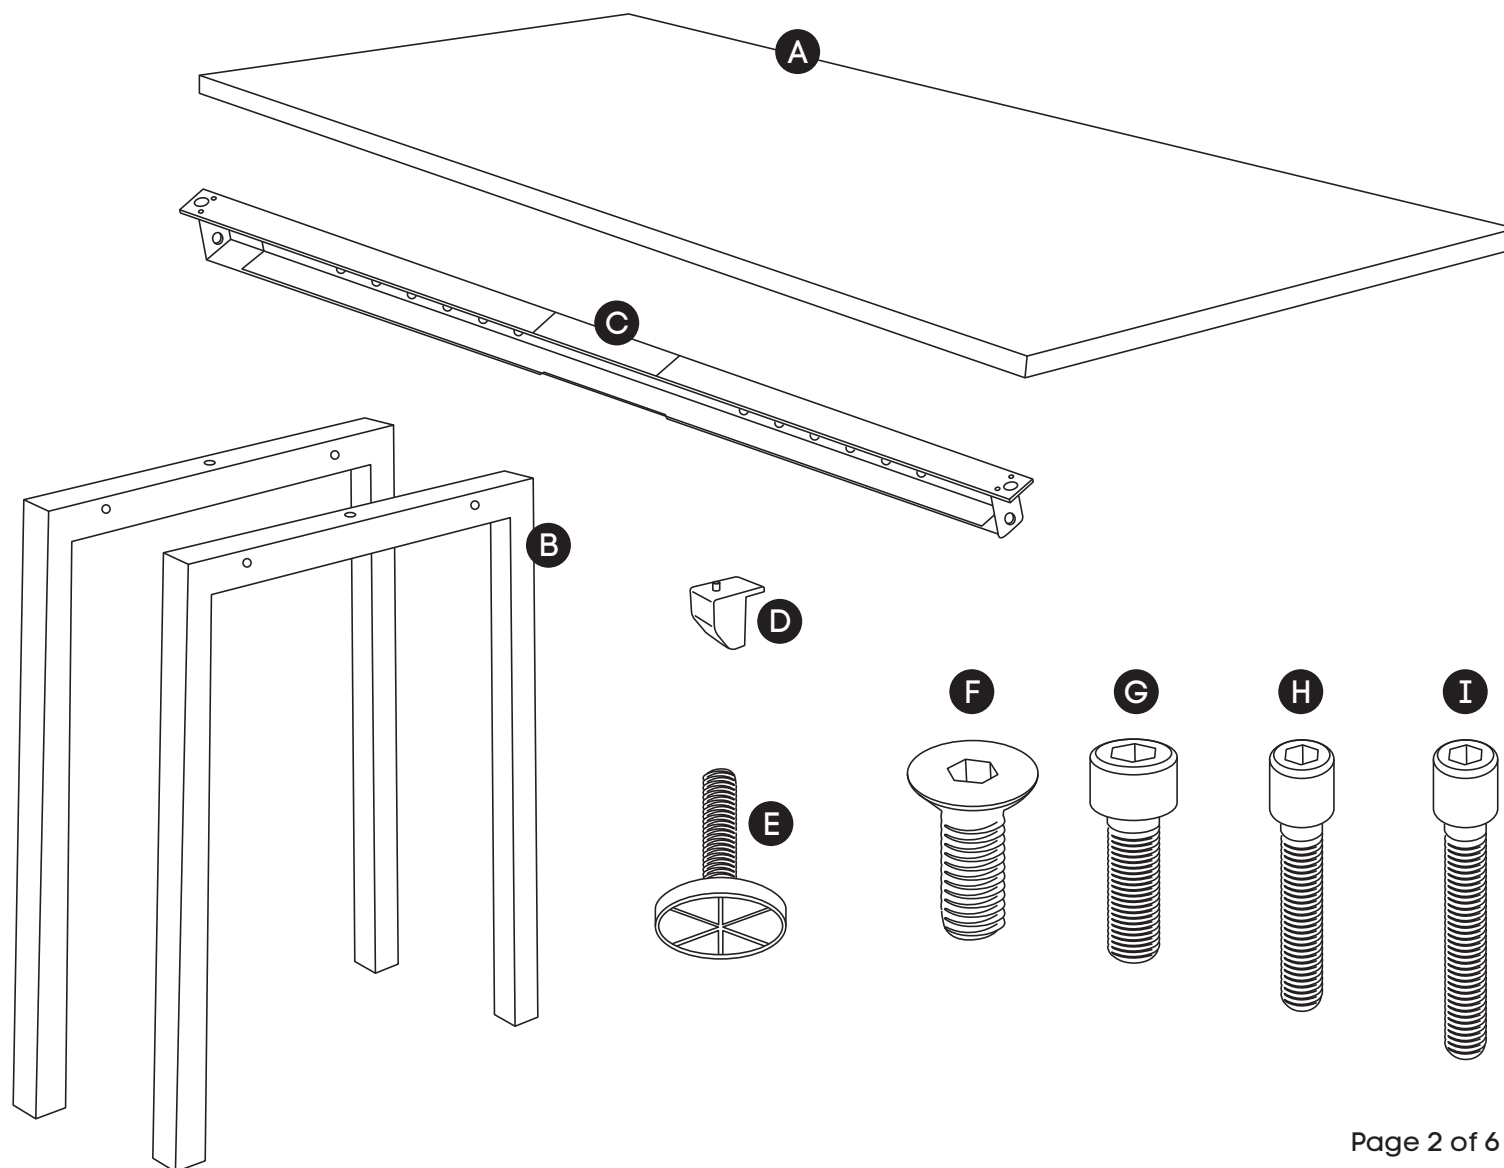

### COMPONENTS

- A Table top x1
- B Legs Quadro Square x2
- C Beam x1
- D Plastic bracket x4
- E Feet x4

### SCREWS

- F M8x20MM CSK x2
- G M8x20MM Socket head x2
- H M6x20MM Socket head x4
- I M6x30MM Socket head x4

- J Allen key x2

# ASSEMBLY INSTRUCTIONS


## Quadro Square Counter Frame

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

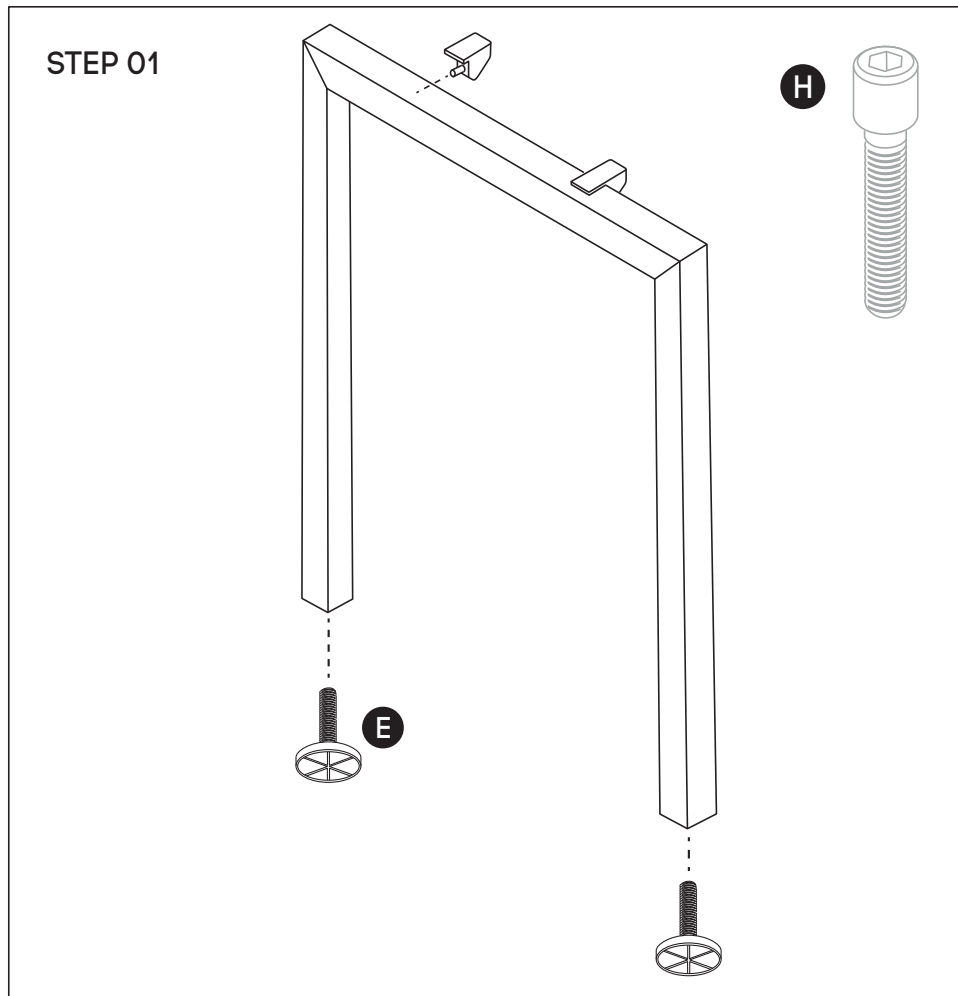

Using Allen Key provided, attach 2 plastic brackets per leg (D) (as per picture above) using M6x20MM (H) Socket head screw. Screw the feet (E) to the bottom of each leg (B)

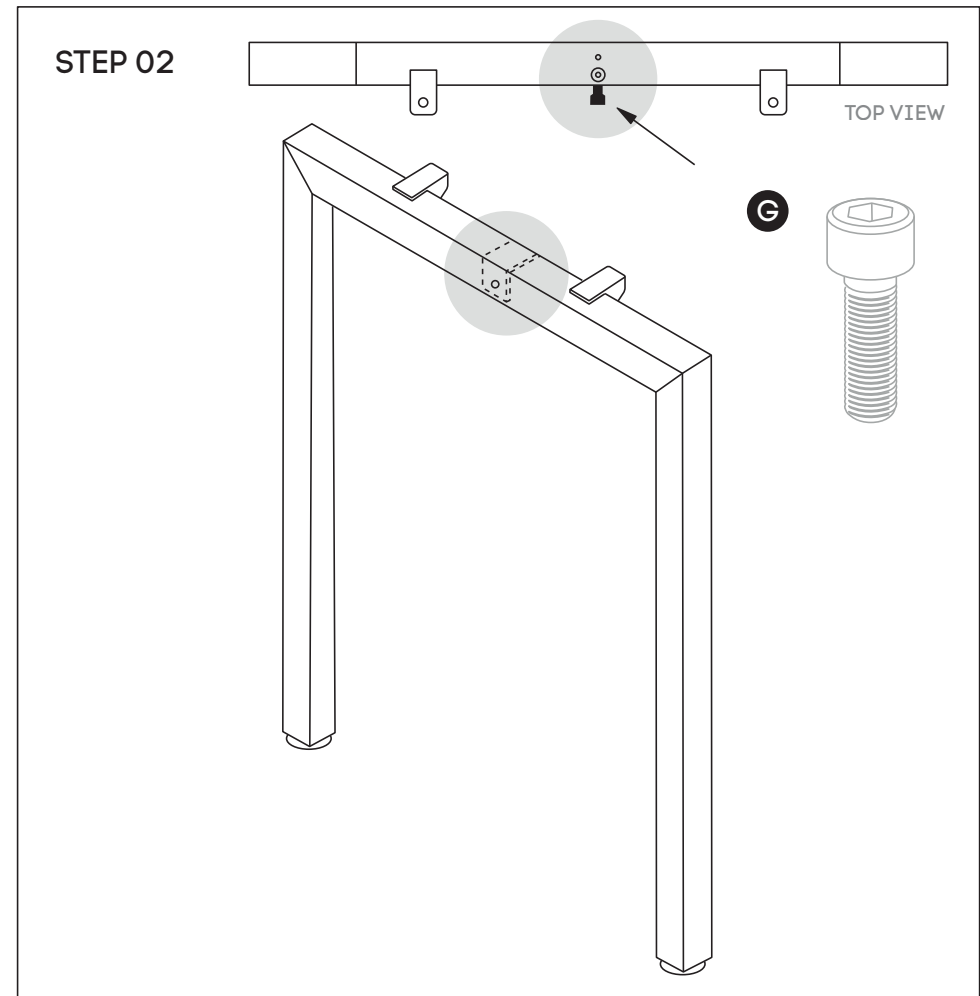

Using Allen Key provided, attach M8x20MM Socket head (G)-screw socket half way into leg for both legs (B)

ASSEMBLY INSTRUCTIONS

# Quadro Square Counter Frame

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**



Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate



**STEP 03**

Adjust extendable beam **(c)** to desired length using markers and secure beam at that length using screws provided

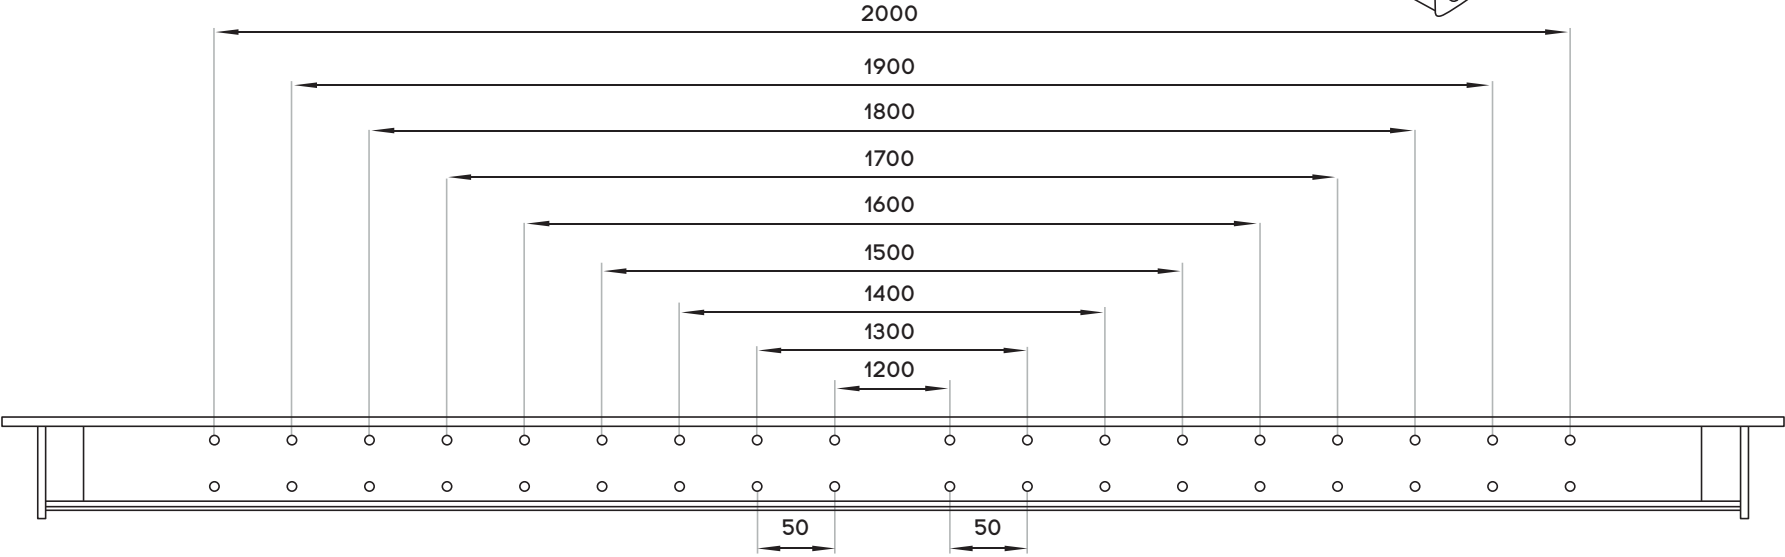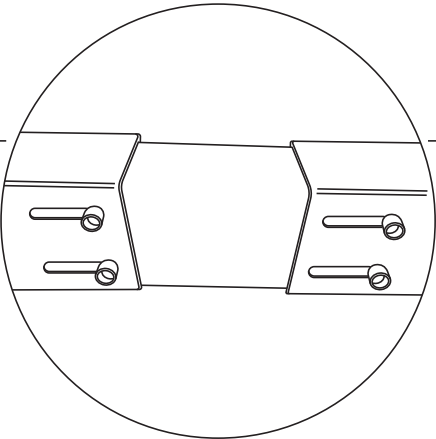

# ASSEMBLY INSTRUCTIONS



## Quadro Square Counter Frame

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

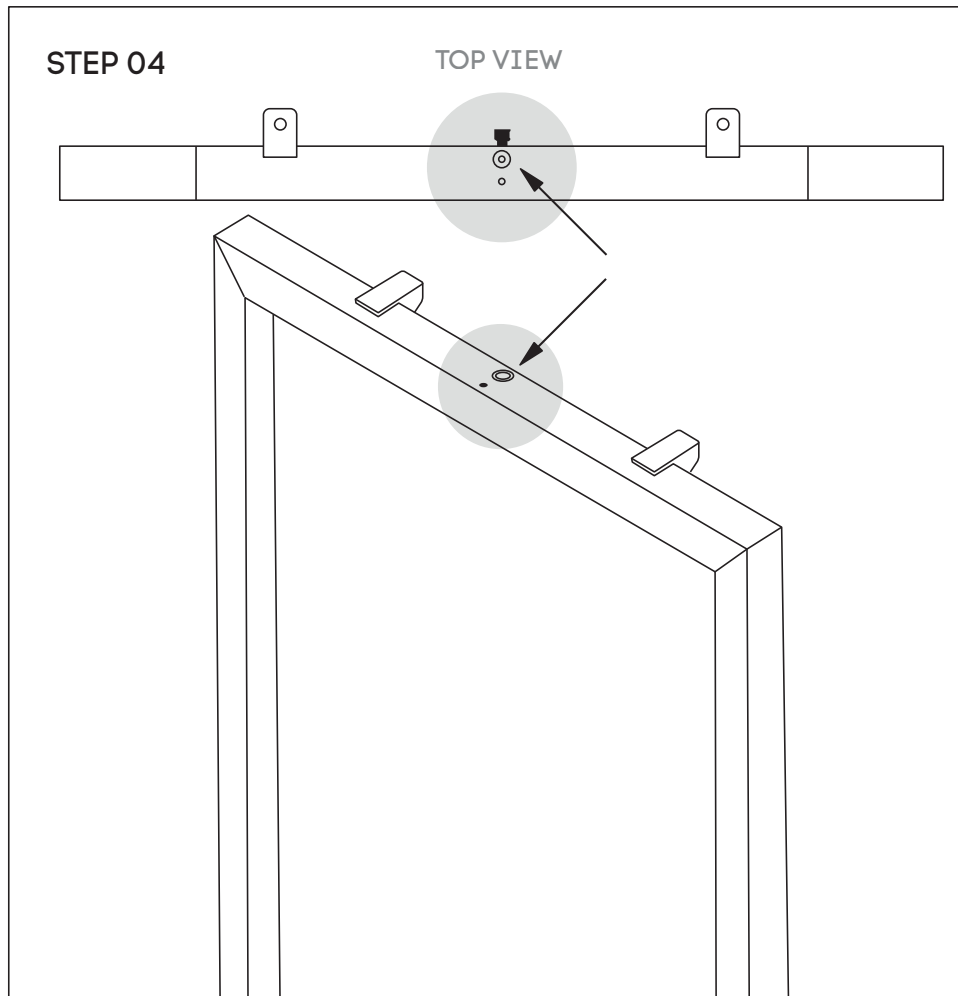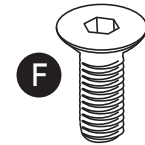

Attach beam **(C)** to legs **(B)** using nut insert in legs.  
See point attached

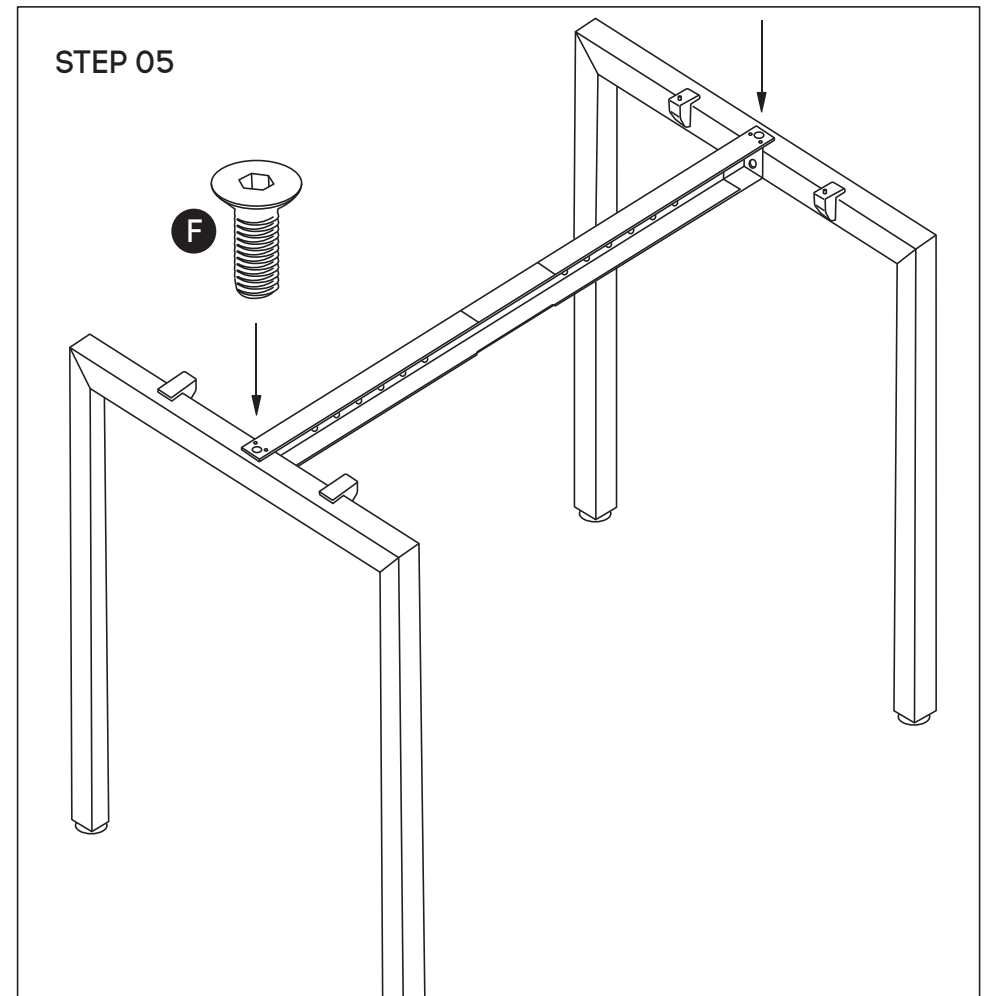

Frame looks like this. Using Allen Key, attach beam **(C)** with Socket **(F)**

# ASSEMBLY INSTRUCTIONS


## Quadro Square Counter Frame

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

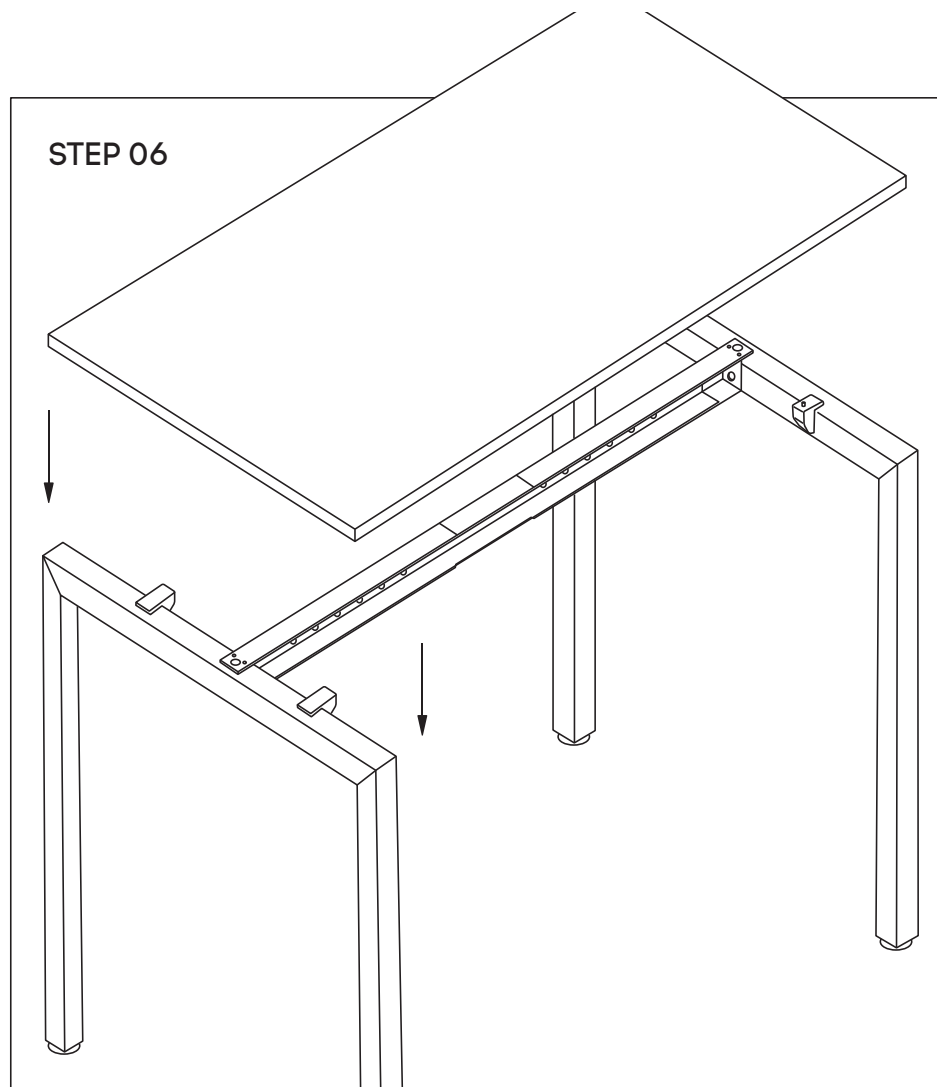

Place desktop on top of frame. Wood Screws to be drilled into the underneath Top.