

ASSEMBLY INSTRUCTIONS

Quadro Wood A Boardroom Frame

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate




Sizes:


2400 x 1200

3000 x 1200

3600 x 1200

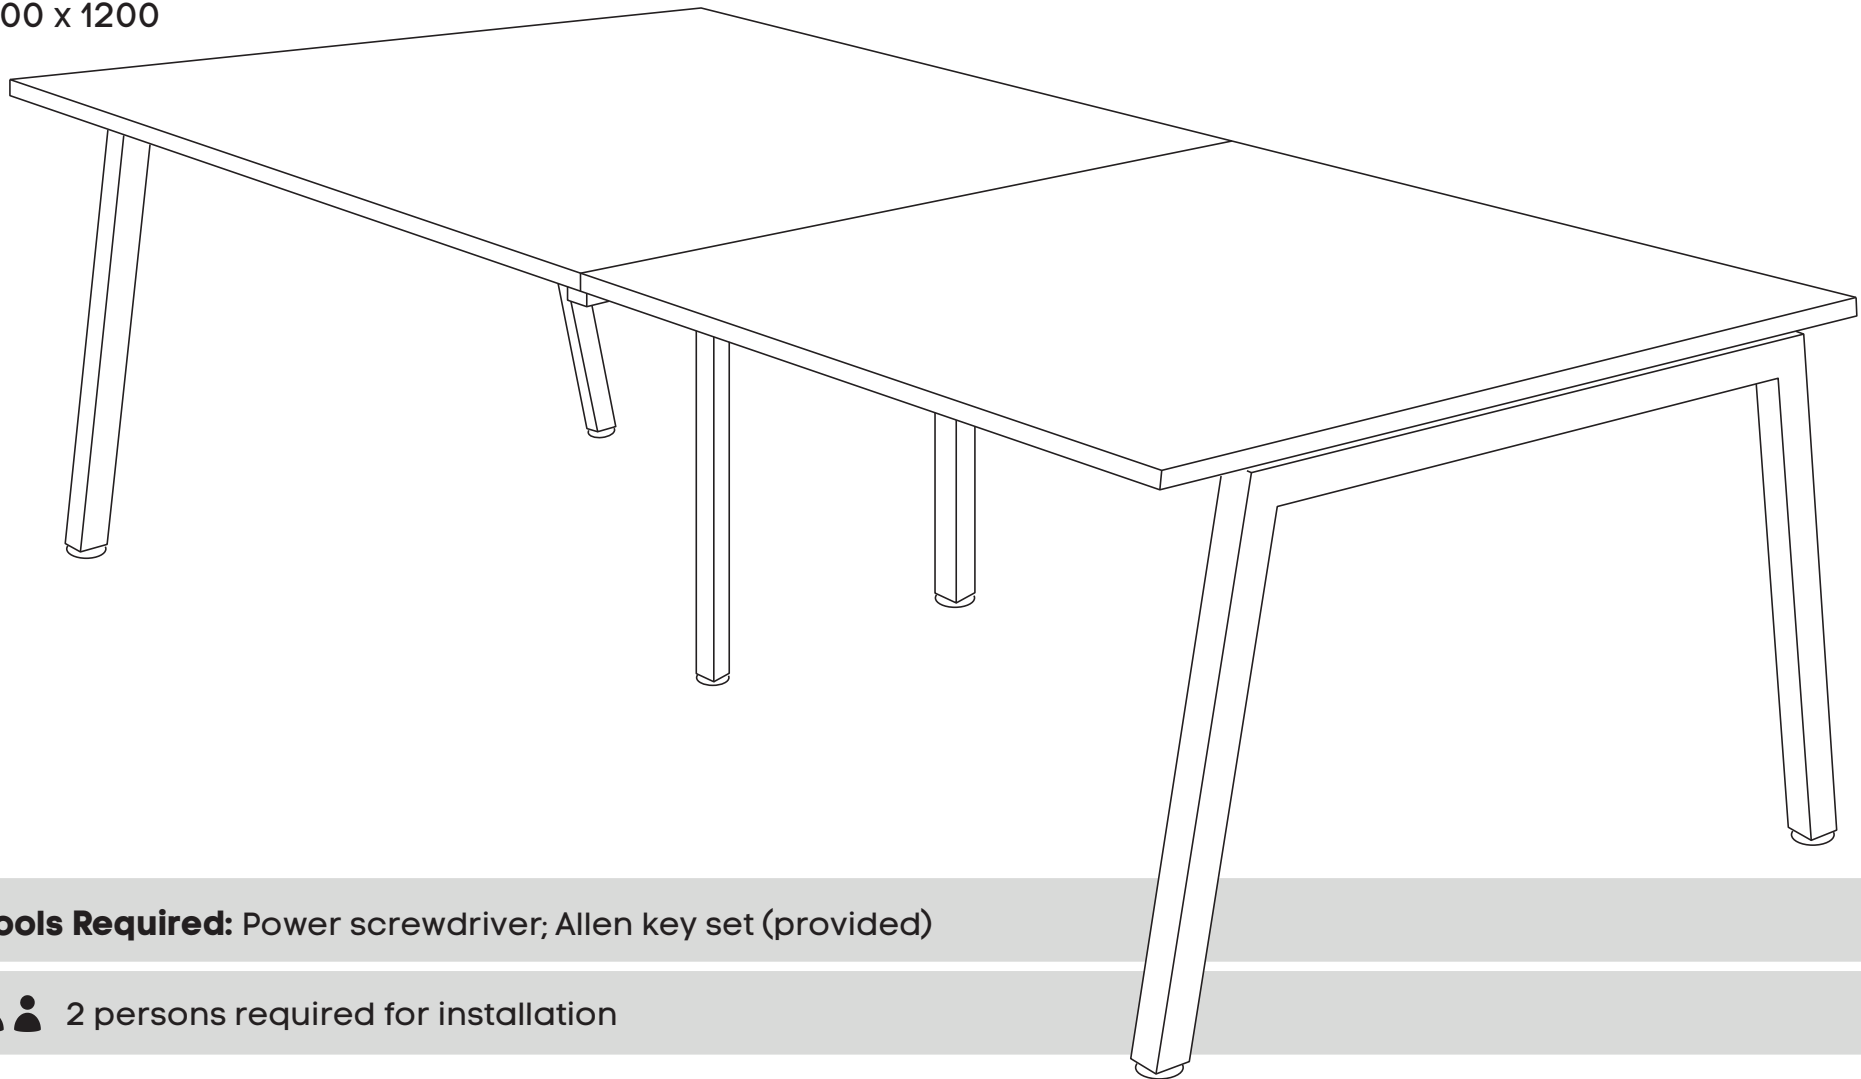

Tools Required: Power screwdriver; Allen key set (provided)

 2 persons required for installation

ASSEMBLY INSTRUCTIONS


Quadro Wood A Boardroom Frame

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

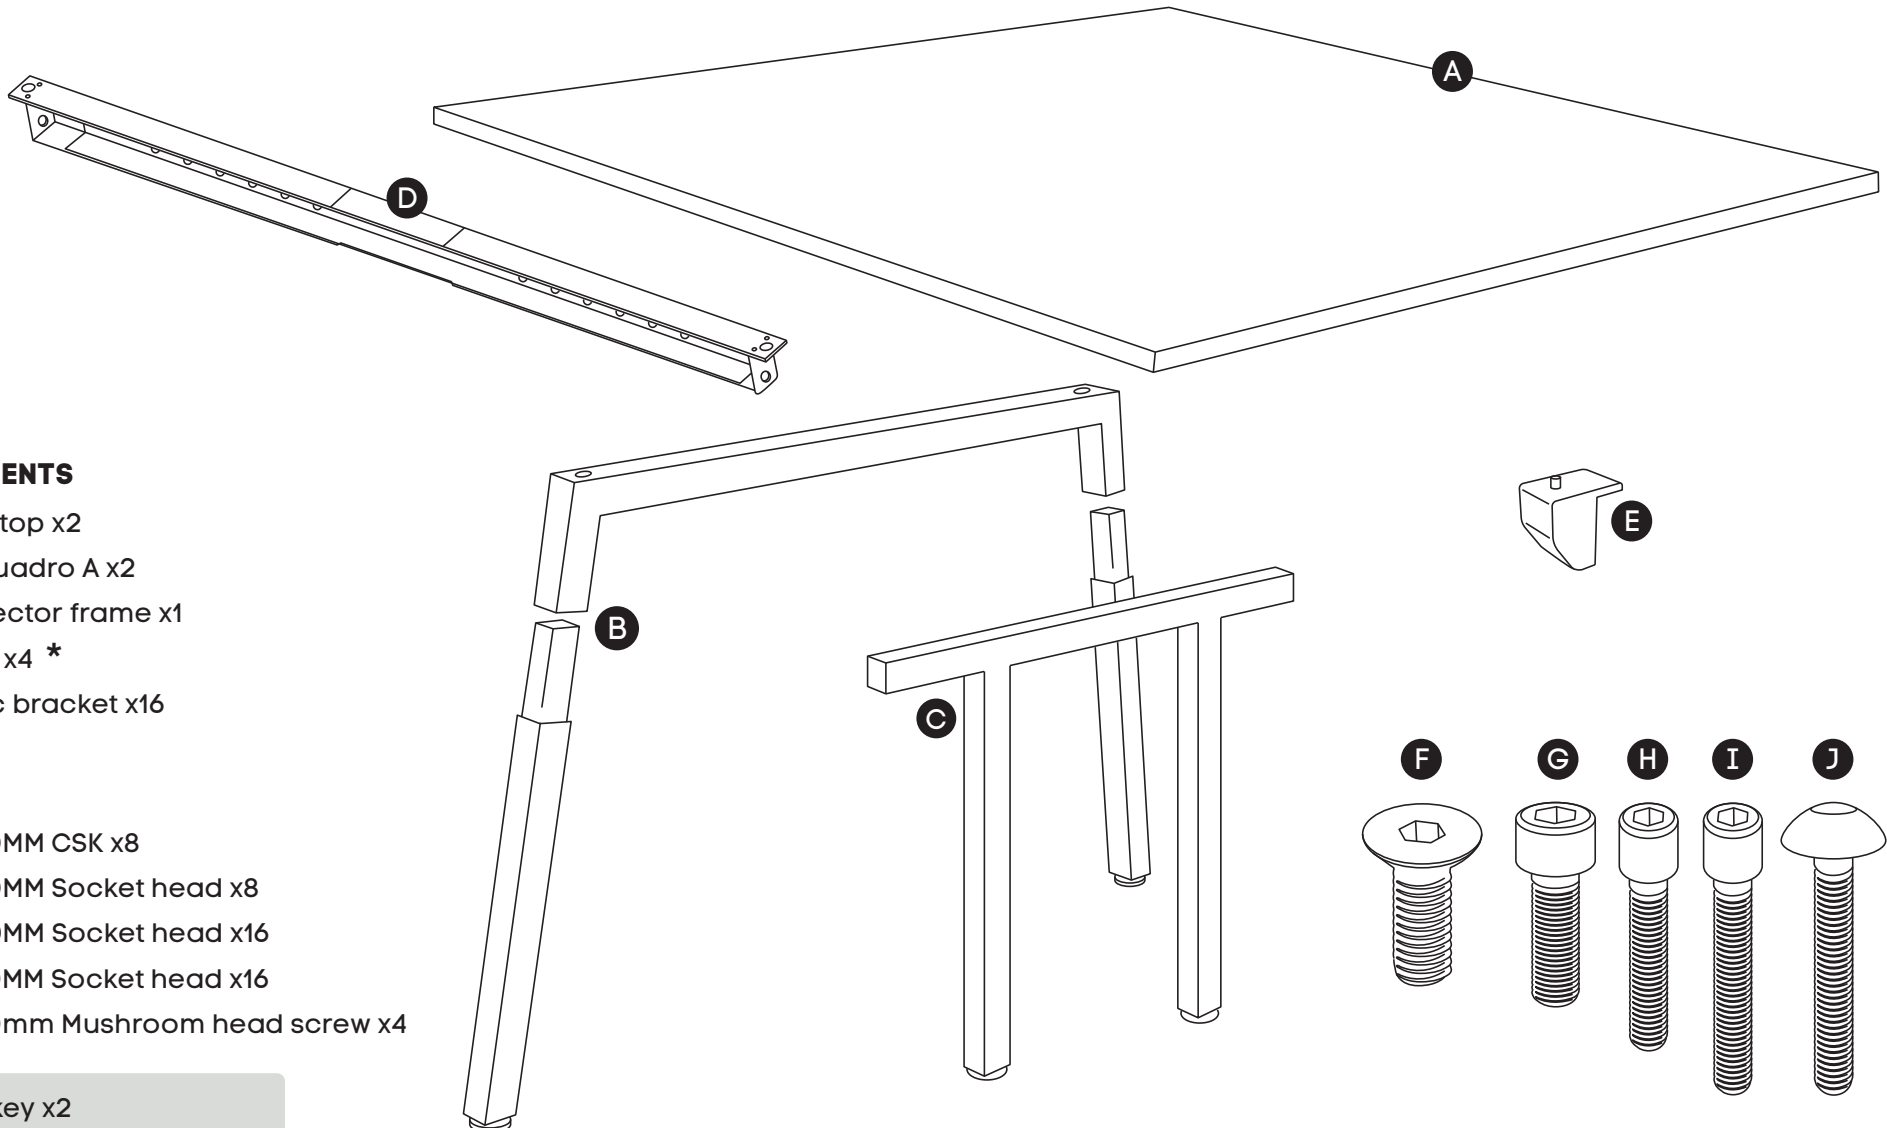

COMPONENTS

- A Table top x2
- B Leg Quadro A x2
- C Connector frame x1
- D Beam x4 *
- E Plastic bracket x16

SCREWS

- F M8x20MM CSK x8
- G M8x20MM Socket head x8
- H M6x20MM Socket head x16
- I M6x30MM Socket head x16
- J M6x30mm Mushroom head screw x4

- K Allen key x2

* Colour of the beam is always black, regardless desk frame colour.

ASSEMBLY INSTRUCTIONS

Quadro Wood A Boardroom Frame

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate




STEP 01

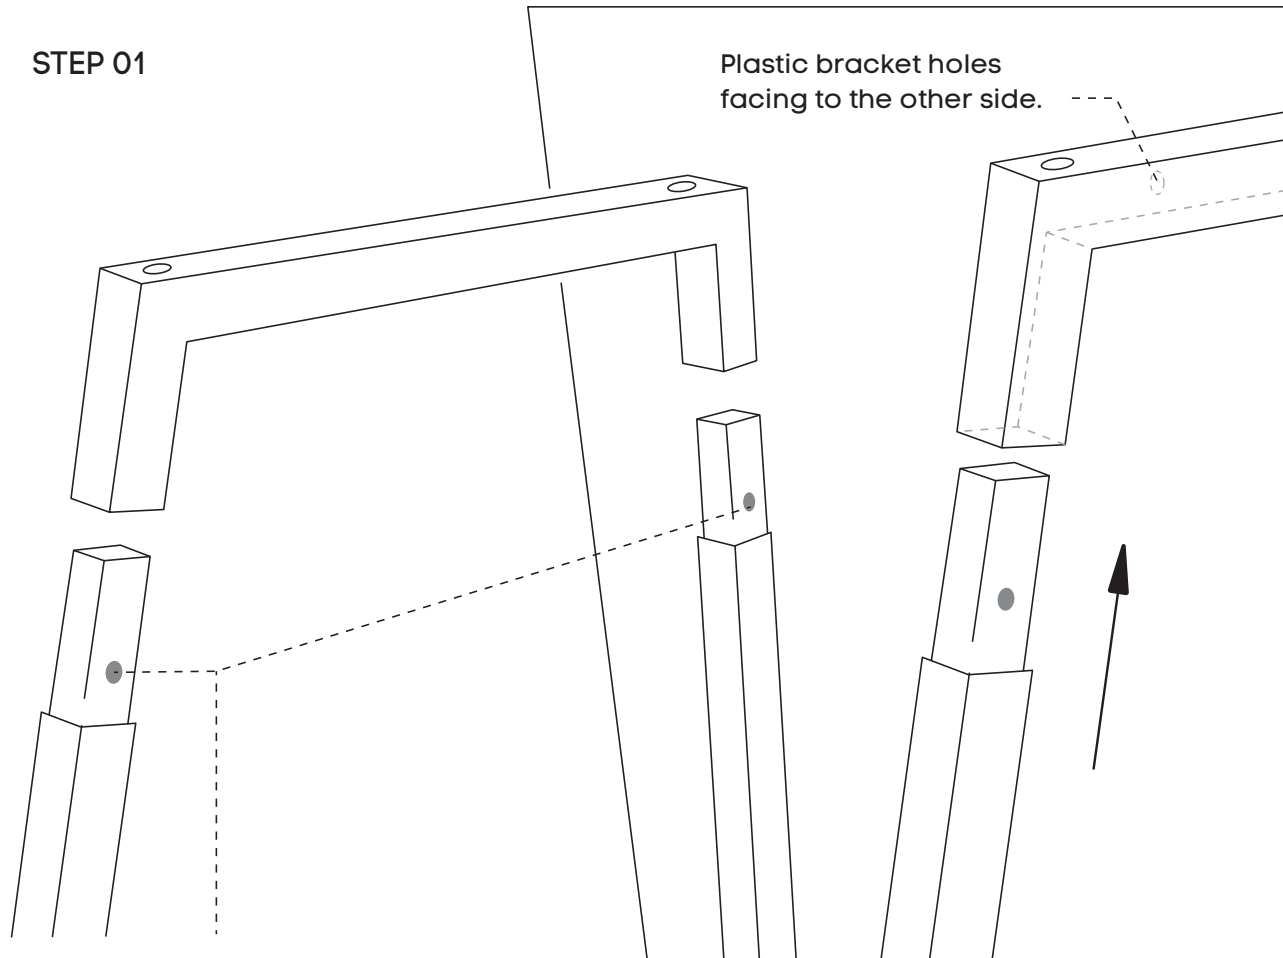

You will notice two colored stickers located on each leg.

Both legs must have the colour sticker facing away from where the plastic brackets are inserted.

STEP 02

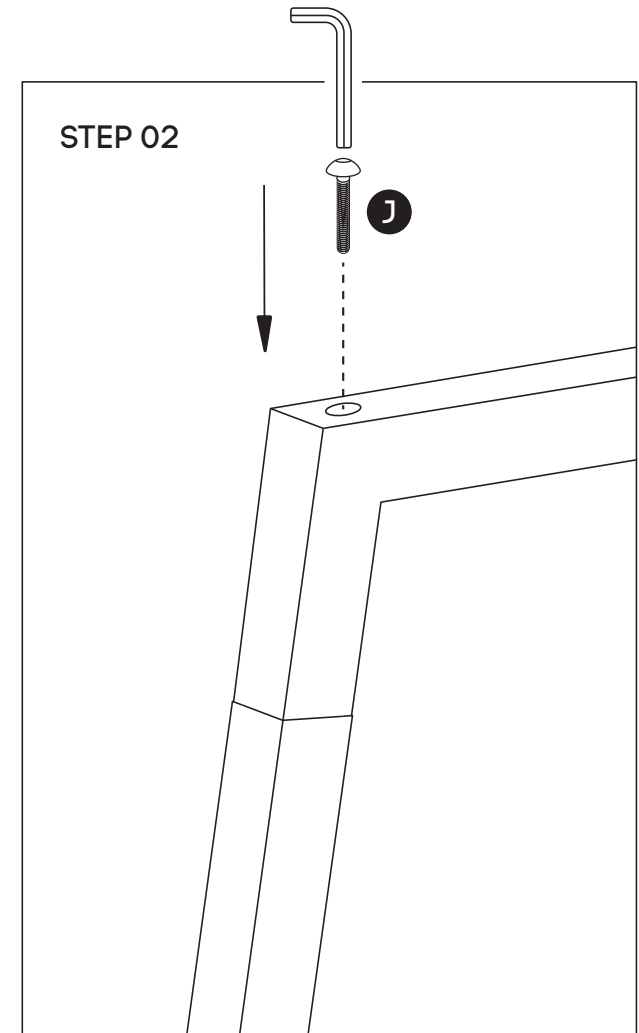

Insert the bottom of the legs as shown in the illustration. Using Allen Key provided, attach Mushroom Head Screw (J) - for all legs.

ASSEMBLY INSTRUCTIONS


Quadro Wood A Boardroom Frame

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

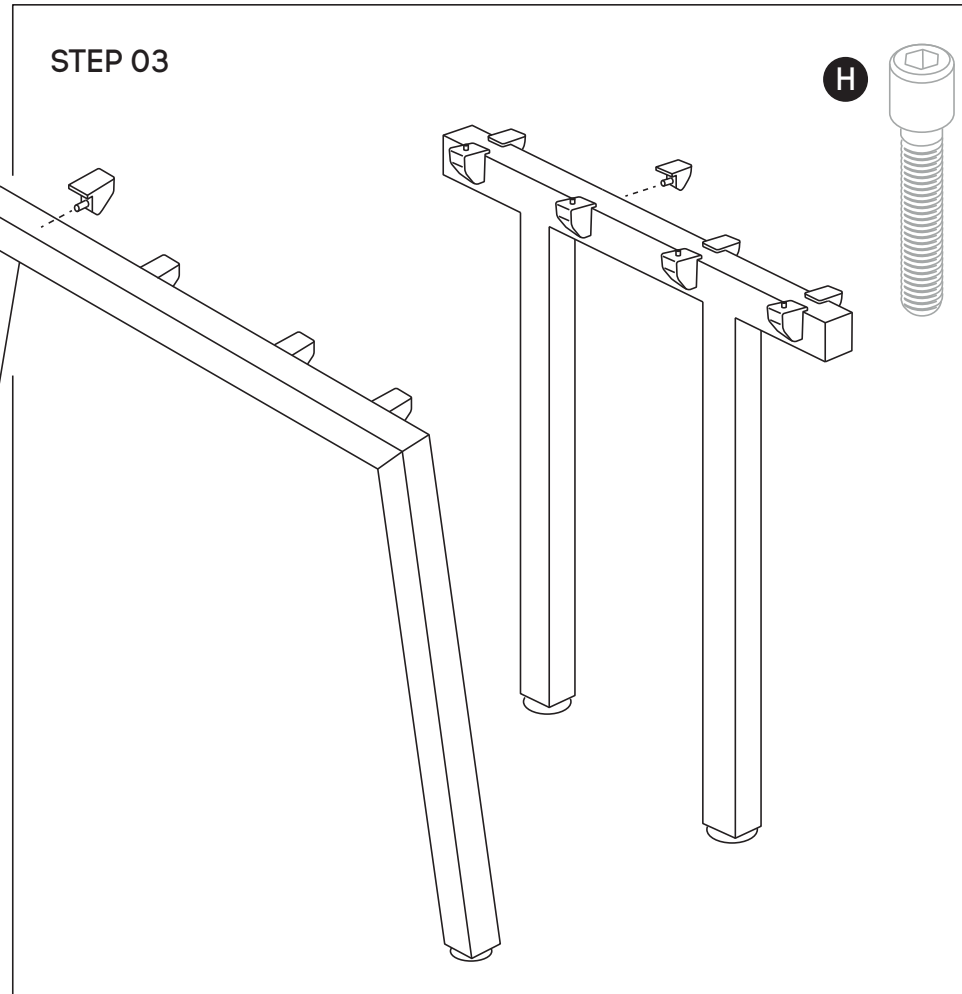

Using Allen Key provided, attach 4 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Do the same with Connector frame **(C)**.



Using Allen Key provided, attach M8x20MM Socket head **(G)**-screw socket half way into leg for both legs **(B)** and into Connector frame **(C)**.

ASSEMBLY INSTRUCTIONS

Quadro Wood A Boardroom Frame

www.jasonl.com.au



Need help!
Call us on
1300 527 665

jason.l
your office furniture mate



STEP 05

Adjust extendable beam **(D)** to desired length using markers and secure beam at that length using screws provided

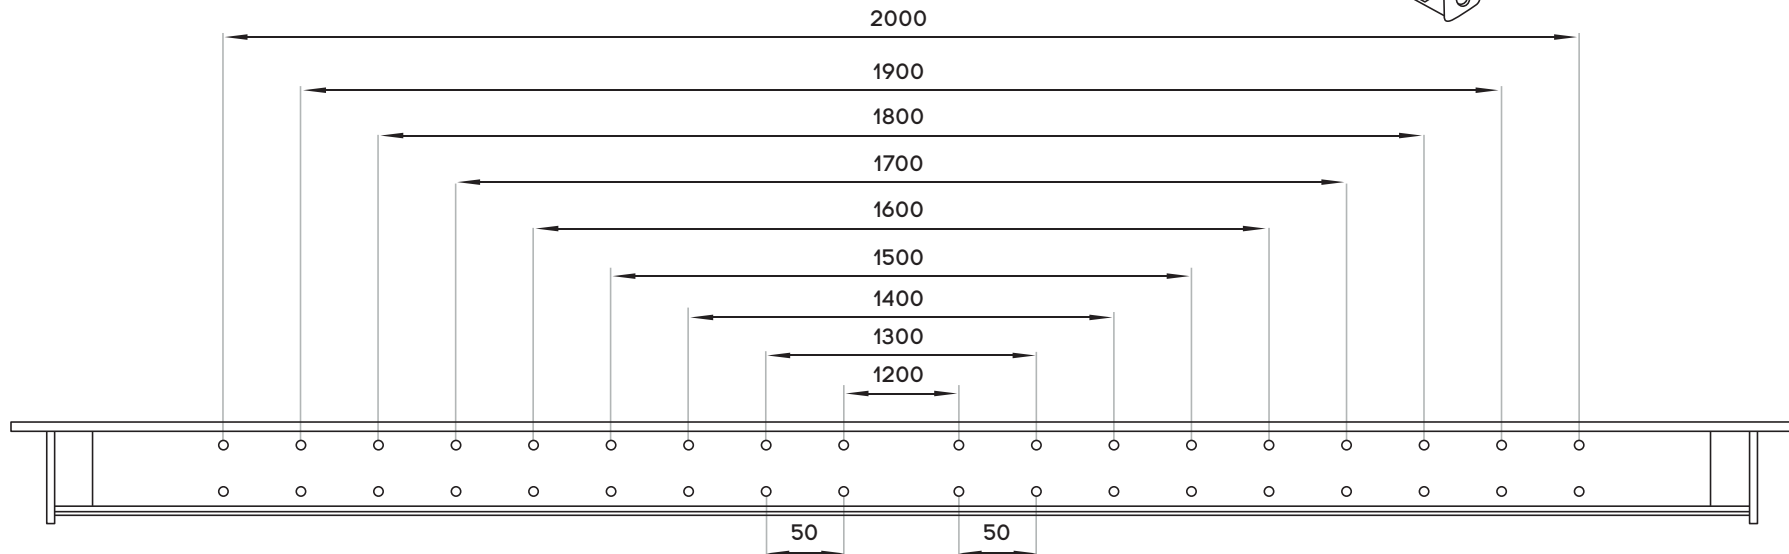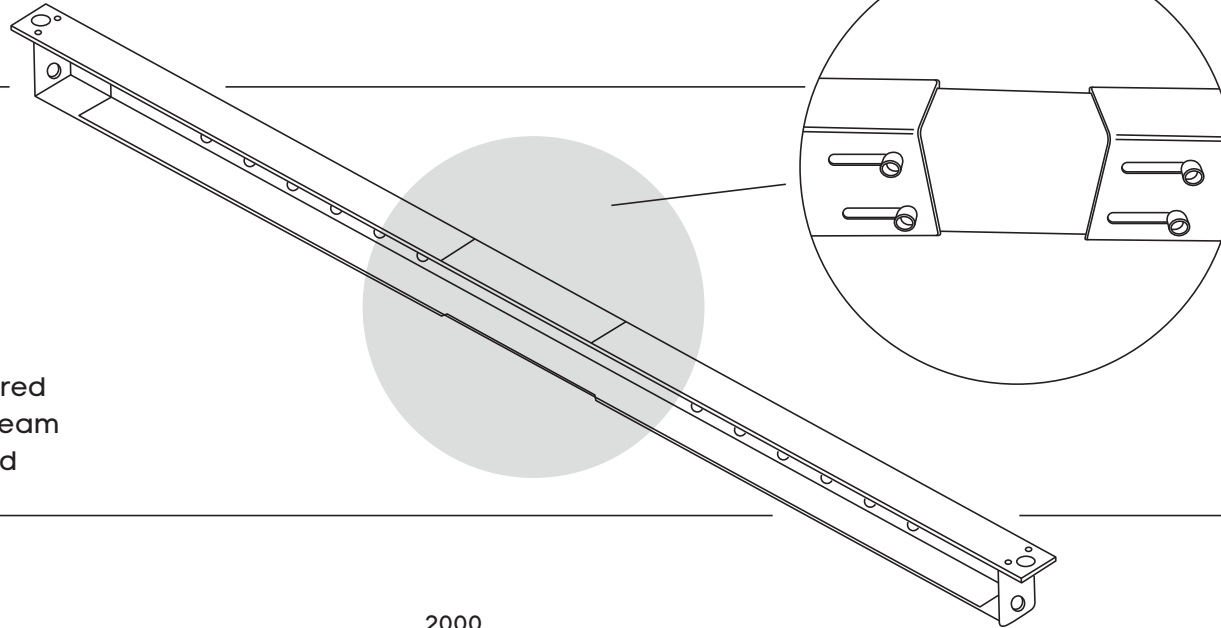

ASSEMBLY INSTRUCTIONS


Quadro Wood A Boardroom Frame

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

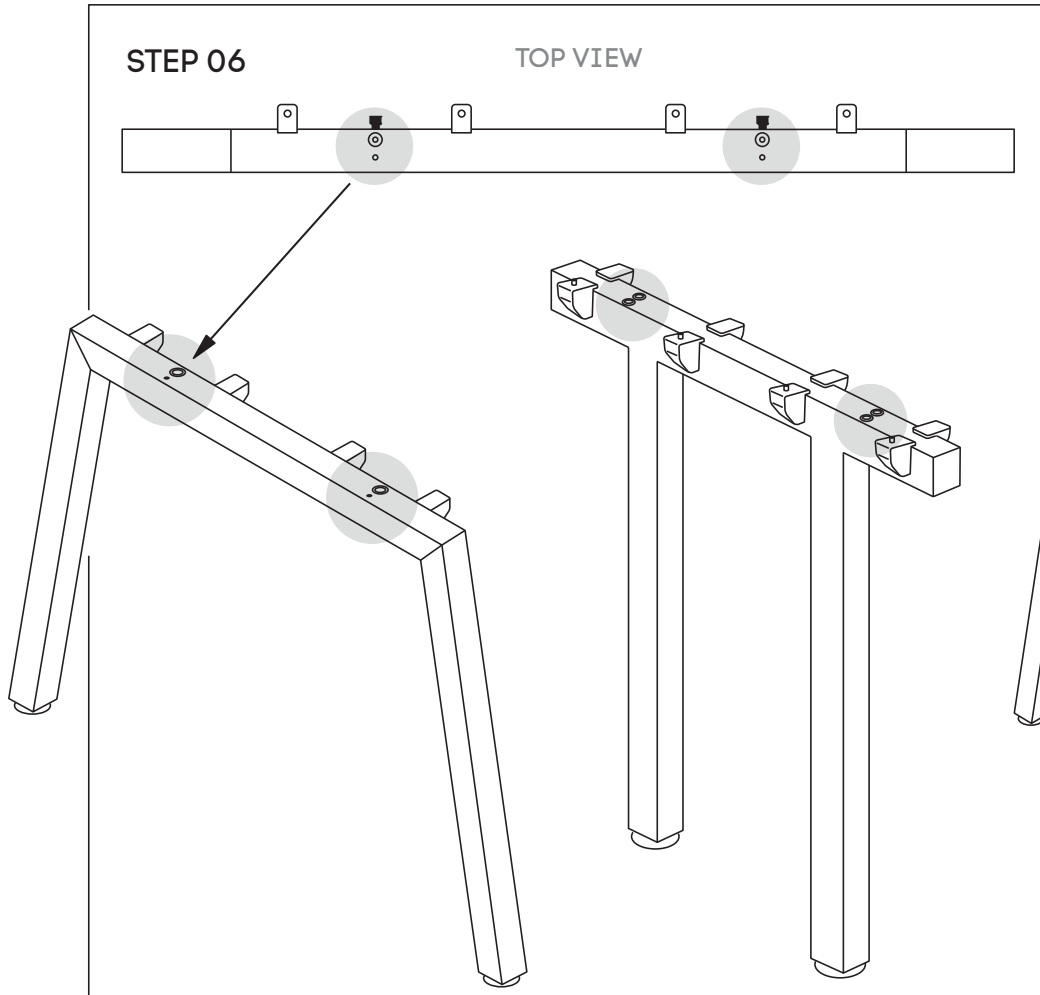

Attach beam **(D)** to legs **(B)** and Connector frame **(C)** using nut insert in legs. See point attached

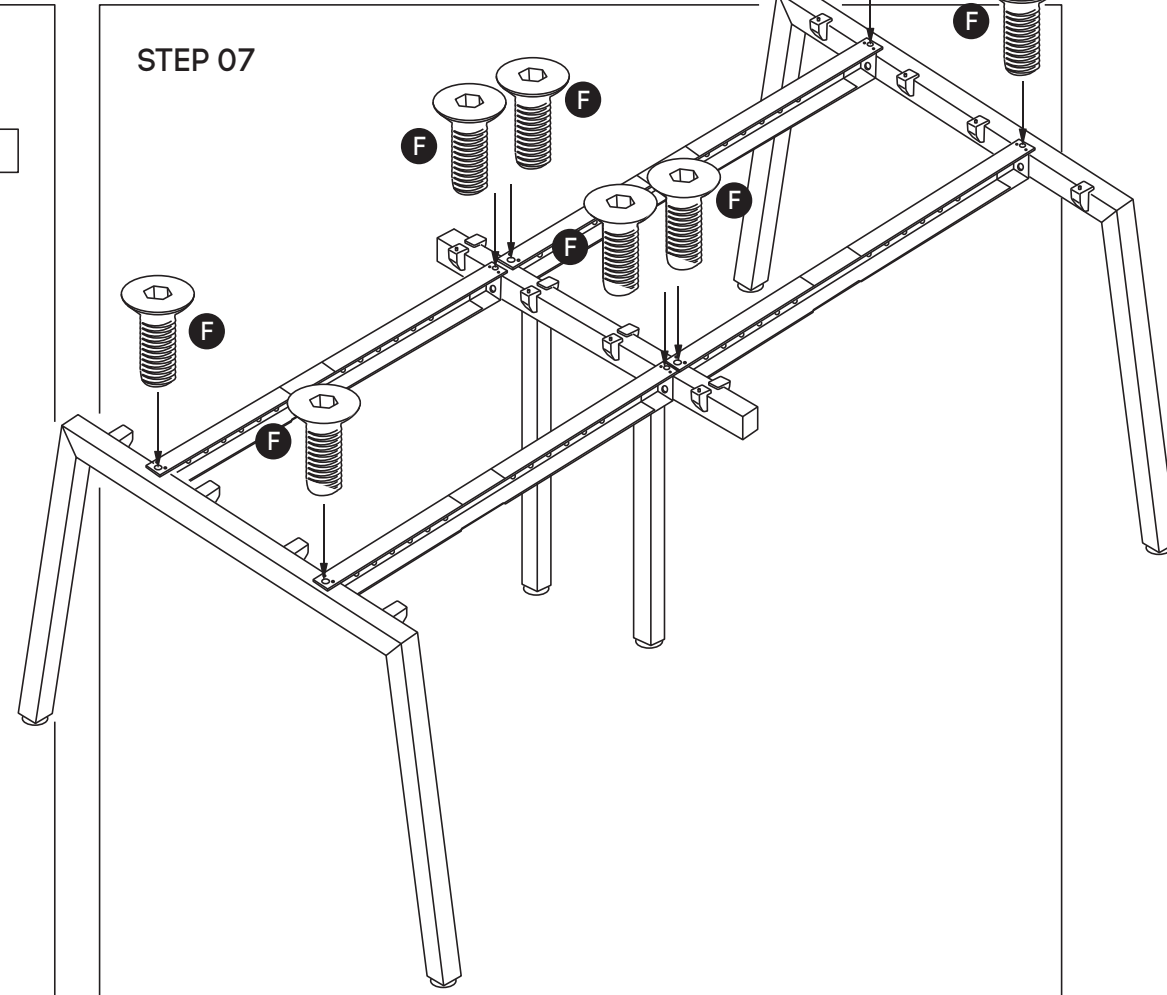

Frame looks like this. Using Allen Key, attach beam **(D)** with Socket **(F)**

ASSEMBLY INSTRUCTIONS

Quadro Wood A Boardroom Frame

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate



STEP 08

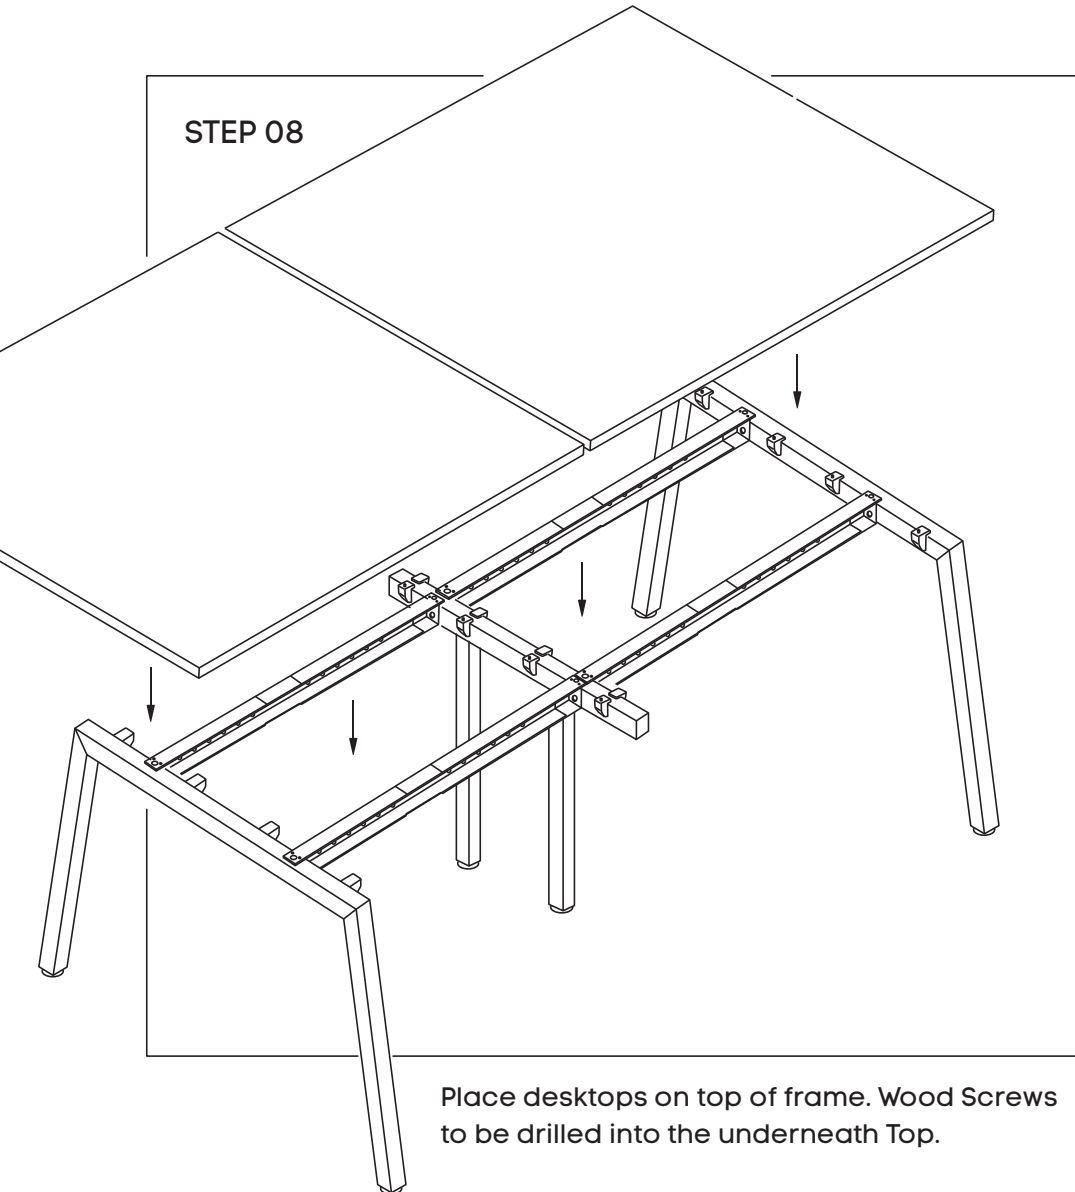

Place desktops on top of frame. Wood Screws
to be drilled into the underneath Top.