

INSTALLATION GUIDE

San Fran System Executive Office Desk


Size: 1800mm, 1600mm, 1200mm

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

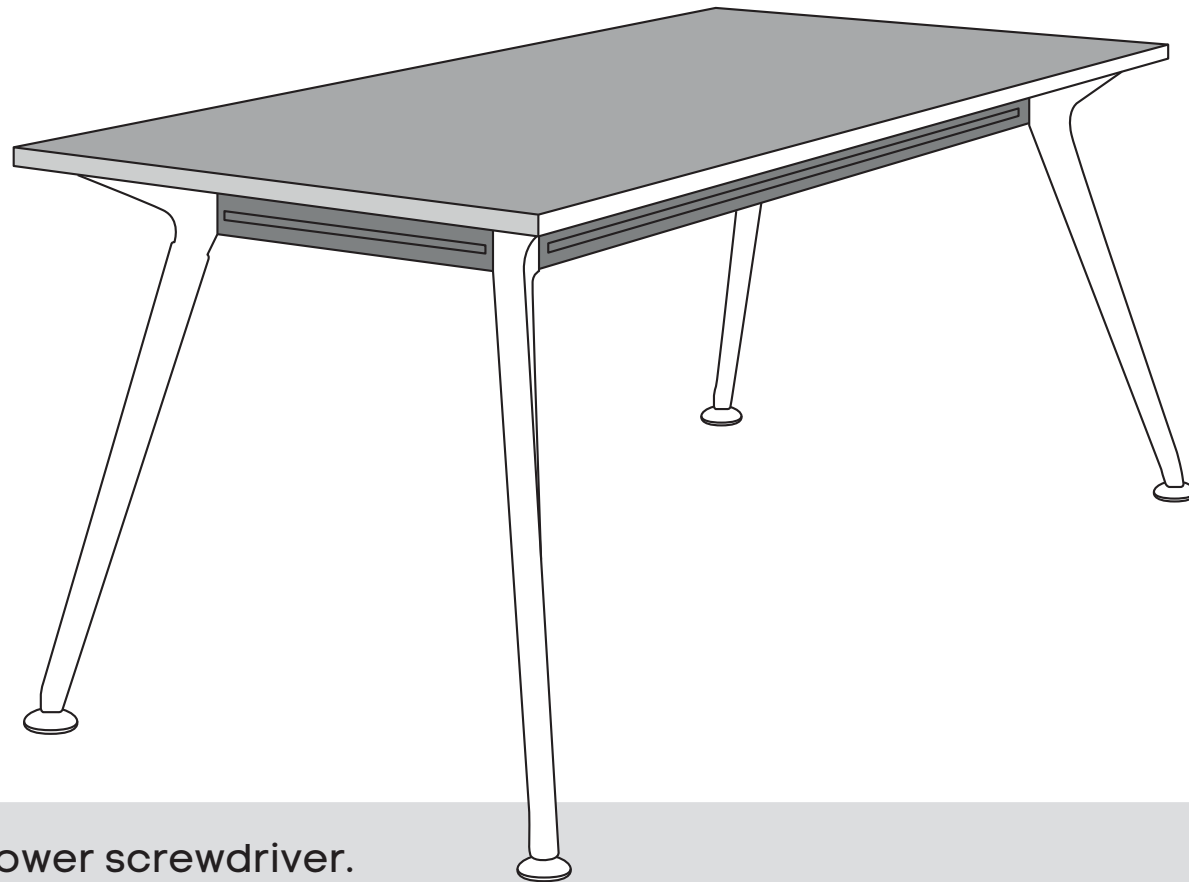

Tools Required: Power screwdriver.

Special Note: No pre-drilled holes or nut inserts are provided.
Wood screws will be required to be drilled directly into underside of desk top.

INSTALLATION GUIDE

San Fran System Executive Office Desk

Size: 1800mm, 1600mm, 1200mm

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate




COMPONENTS

- 1 Leg x4
- 2 Adjustable Foot x4
- 3 Leg Cable Cover x4
- 4 Rail Lengths x2 (690mm or 1090mm or 1290mm)
- 5 Rail Widths x2 (120mm)
- 6 2 Way Connector x4
- 7 2 Way Connector Cap x4
- 8 Table Top x1 (1200mm or 1600mm or 1800mm x 800mm)
- 9 Rail Space Bracket x2
- 10 Slot nutx2

SCREWS

- 11 M8x20mm Dome Head x8
- 12 M8x20mm Cap Head x4
- 13 M5x20mm Self Tapping x8
- 14 M8x12mm Dome Head x2

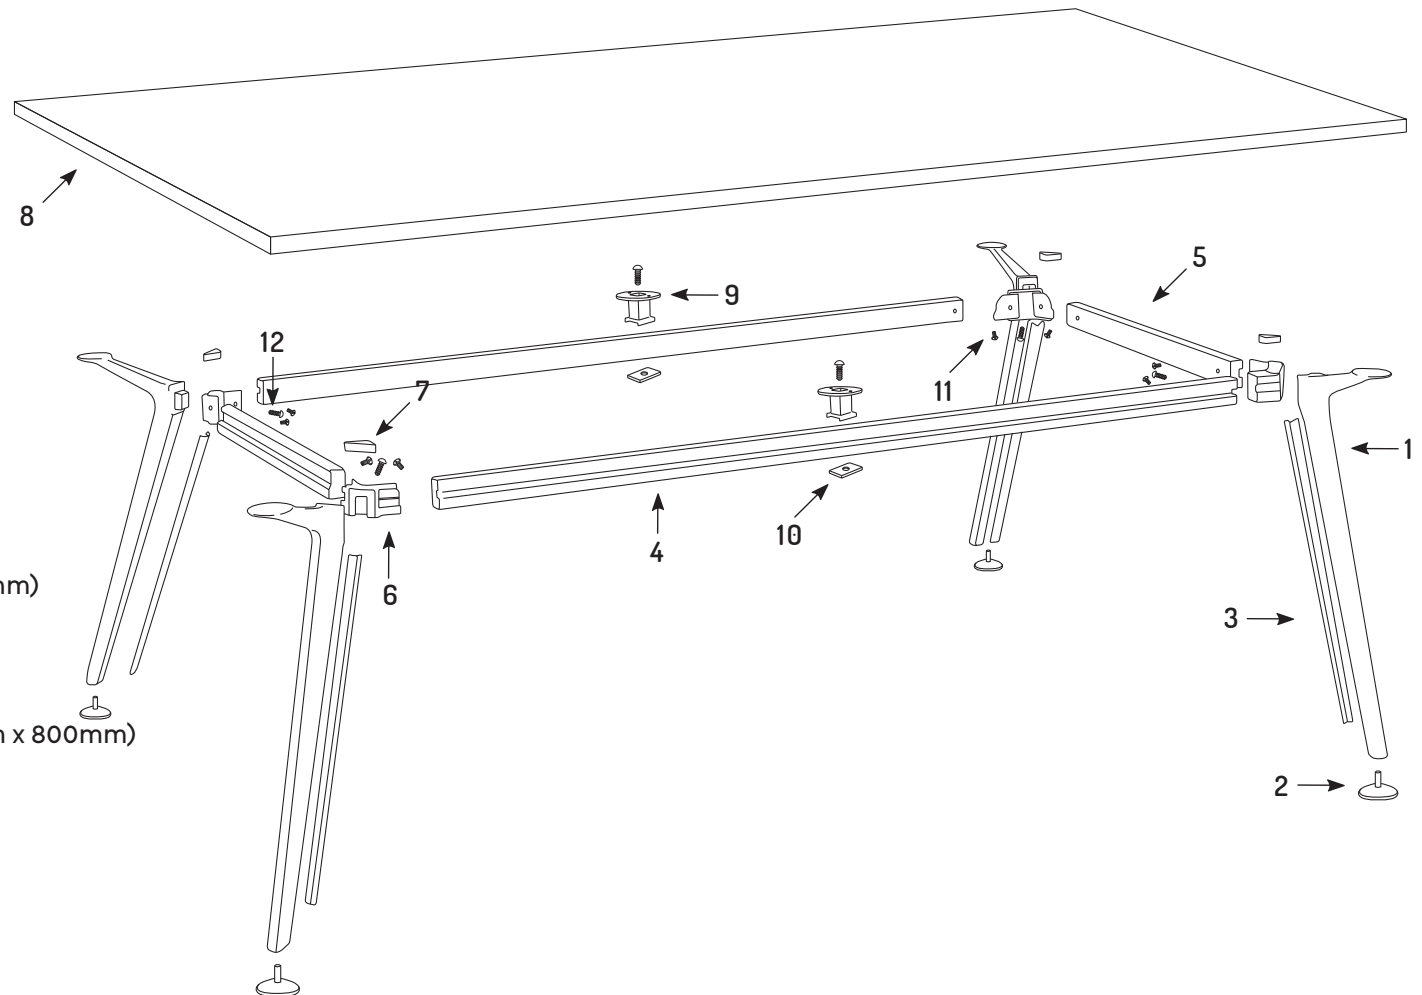

INSTALLATION GUIDE

San Fran System Executive Office Desk

Size: 1800mm, 1600mm, 1200mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate




01

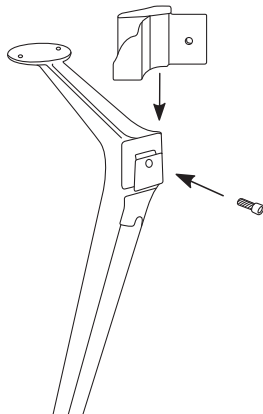


Slide the 2 way connectors over each leg, and securely lock into place using M8x20mm cap head bolts.

02

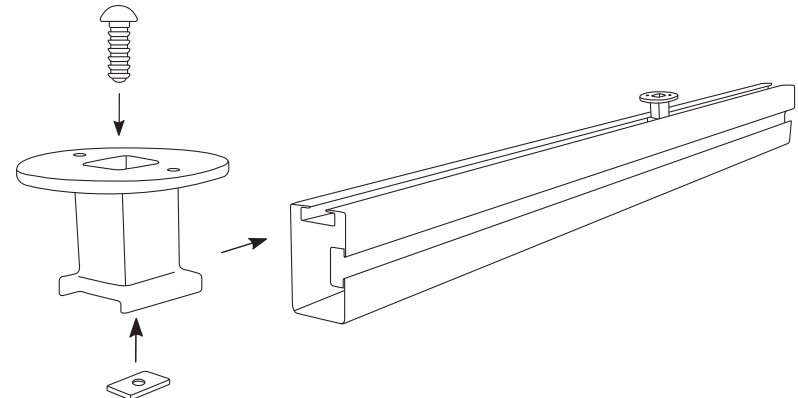


Loosely connect the longer M8x20mm dome head bolt and slot nut through the rail spacer bracket. Slide onto required rails and fully tighten in place.

03

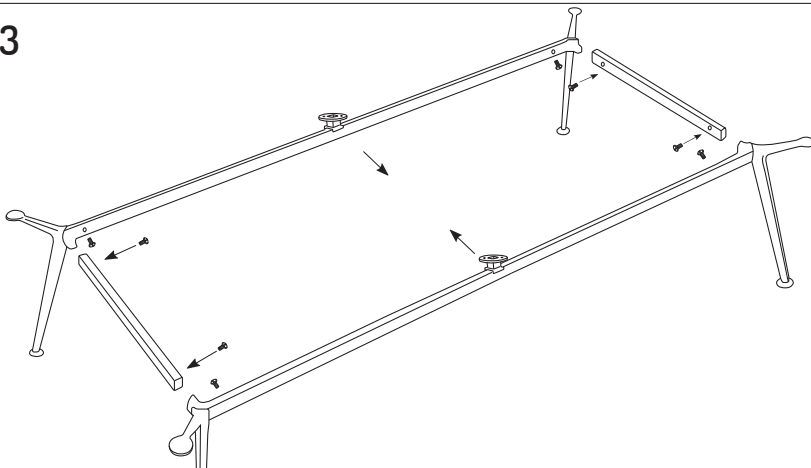

Securely connect legs to rails lengths using the shorter M8x20mm dome head bolts.

04

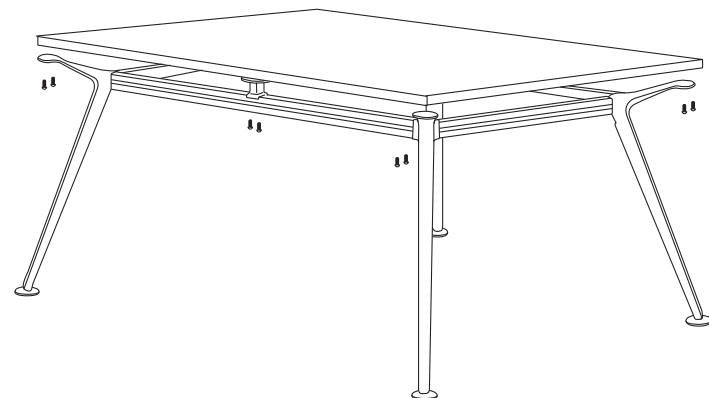

Ensure the worksurface is centered over the frame. Fully tighten all M5x20mm self tapping screws through each leg and rail space bracket into the worksurface.

INSTALLATION GUIDE

San Fran System Executive Office Desk


Size: 1800mm, 1600mm, 1200mm

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

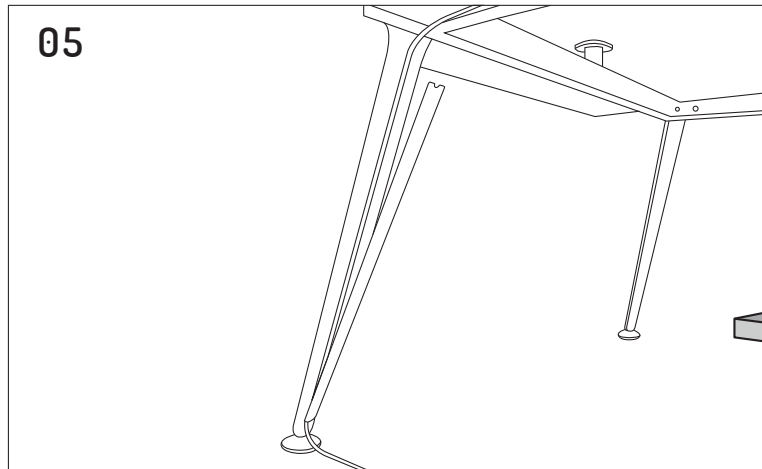

Conceal any power cable using the magnetic leg cable covers.

