

Tools Required: Power screwdriver.


Note: Please ignore any pre-drilled holes or nut inserts that maybe present in your top(s). They will not match your particular table/desk base and woods screws will be required to be screwed directly into the underside of the top.

Note: It is important to fully tighten all bolts and screws before attaching the top(s) so that the frame is sufficiently rigid. Failure to do this may affect stability once the tops are attached.

ASSEMBLY INSTRUCTIONS Sapphire Meeting Table

Size: 1800 x 1100 mm


COMPONENTS

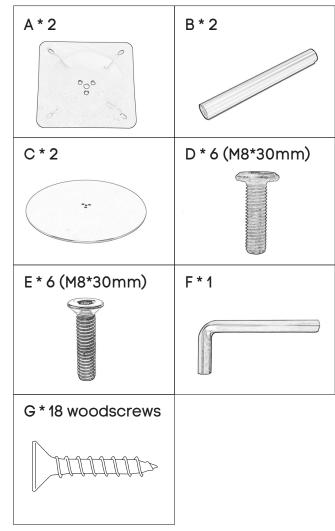



Need help! Call us on **1300 527 665**



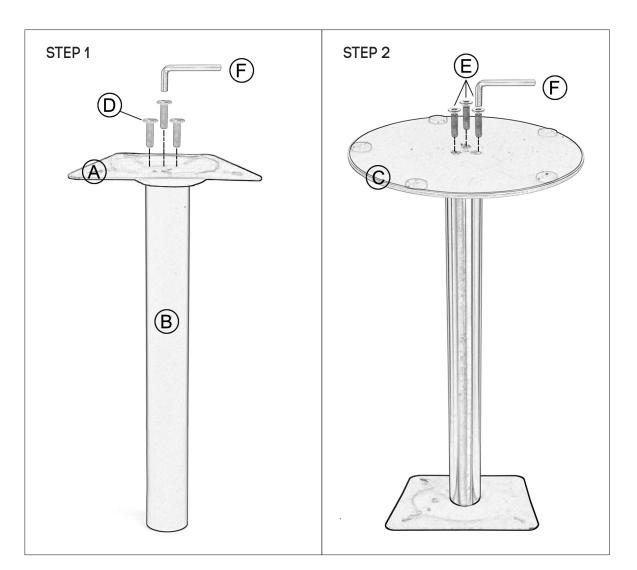

ASSEMBLY INSTRUCTIONS www.jasonl.com.au jason.l Sapphire Need help! Call us on **Meeting Table** 1300 527 665 your office furniture mate Size: 1800 x 1100 mm STEP 3 STEP 4 Adding the top **NB:** Ensure the screws are 80 Screw the table top to the no longer than 25mm. bases using woodscrews (G) through the following holes. Ask a second person to help turn the table and base over. Careful: tables are heavy. G