**ASSEMBLY INSTRUCTIONS** 

## Desk based mounted Privacy screen


Sizes: 1200/1400/1600/1800 mm wide


www.jasonl.com.au

**Need help!** 

Call us on **1300 527 665** 



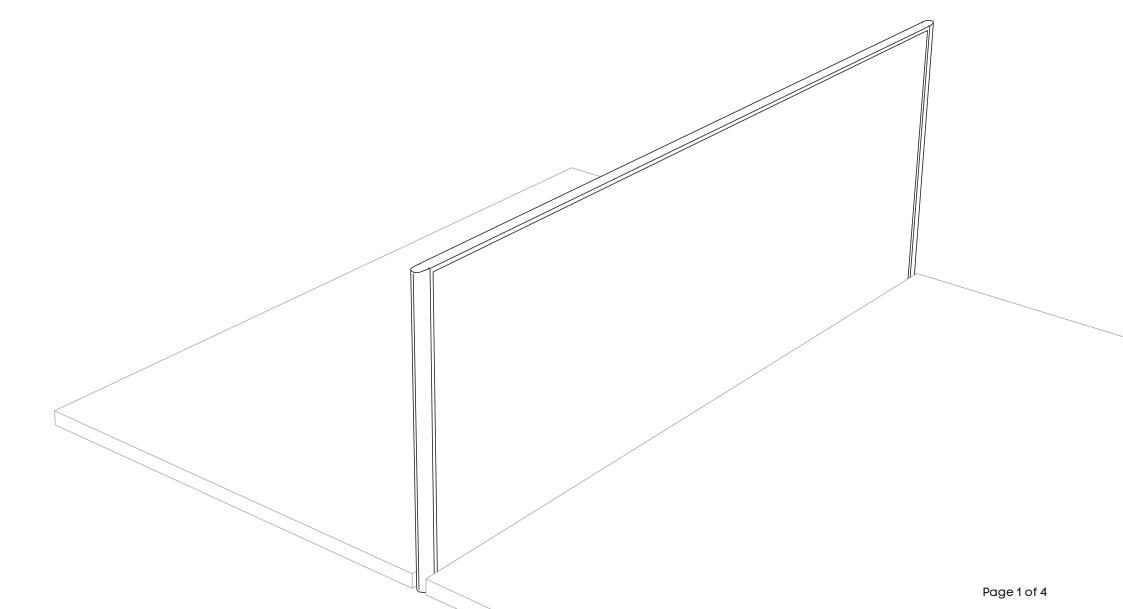

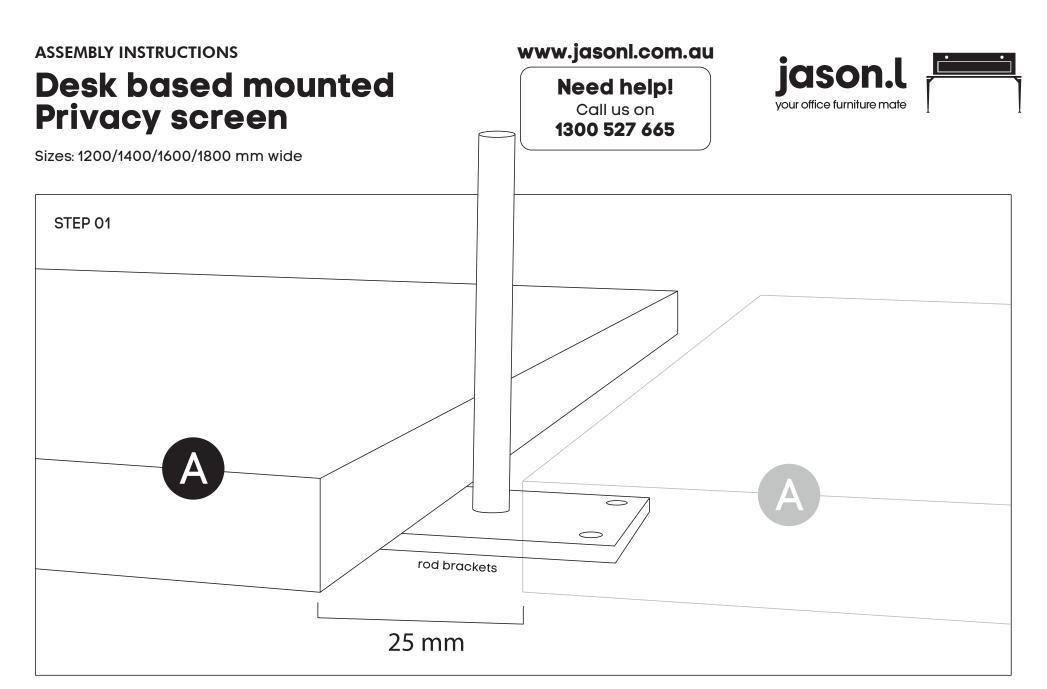

Please leave 25mm gap between table tops (A) so we can drop the desk mounted screen in between the two tops. Now please insert 2 rod brackets that will hold each screen to the desks on either side.

**ASSEMBLY INSTRUCTIONS** 

## Desk based mounted Privacy screen


Sizes: 1200/1400/1600/1800 mm wide

www.jasonl.com.au

Need help!

Call us on **1300 527 665** 



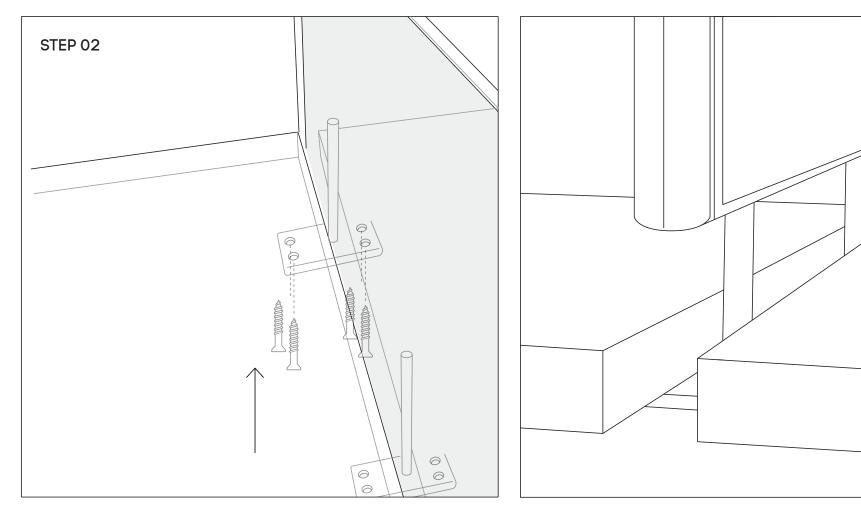

Second person to drill 4 holes into the brackets holes with provided wood screws into the underneath desktop. Please check the position of the rod brackets and bracket holes again before drilling the screws all the way through. Please tighten all the wood screws.

Once the 2 rod brackets are screwed in, you can slide the screen down until it fully rest over the brackets, standing between both table tops.

**ASSEMBLY INSTRUCTIONS** 

## Desk based mounted Privacy screen


Sizes: 1200/1400/1600/1800 mm wide

## www.jasonl.com.au

Need help!

Call us on **1300 527 665** 



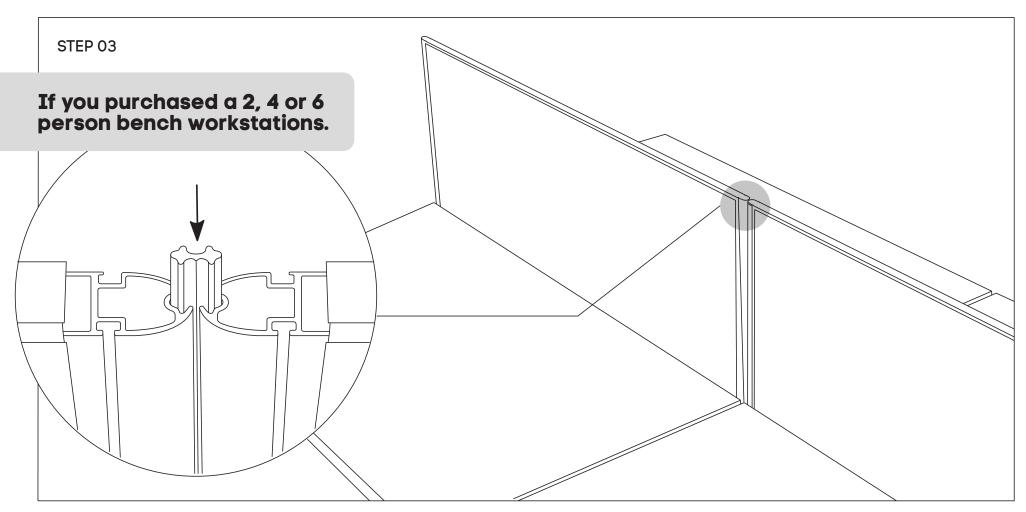

Using an Allen key remove top 2 caps from screens uprights. The two partitions should be next to each other. Please slide the 2 way connector rod - down between the two screen uprights.