

ASSEMBLY INSTRUCTIONS

# Echo panel screen


Sizes: 1200 / 1600 mm wide

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

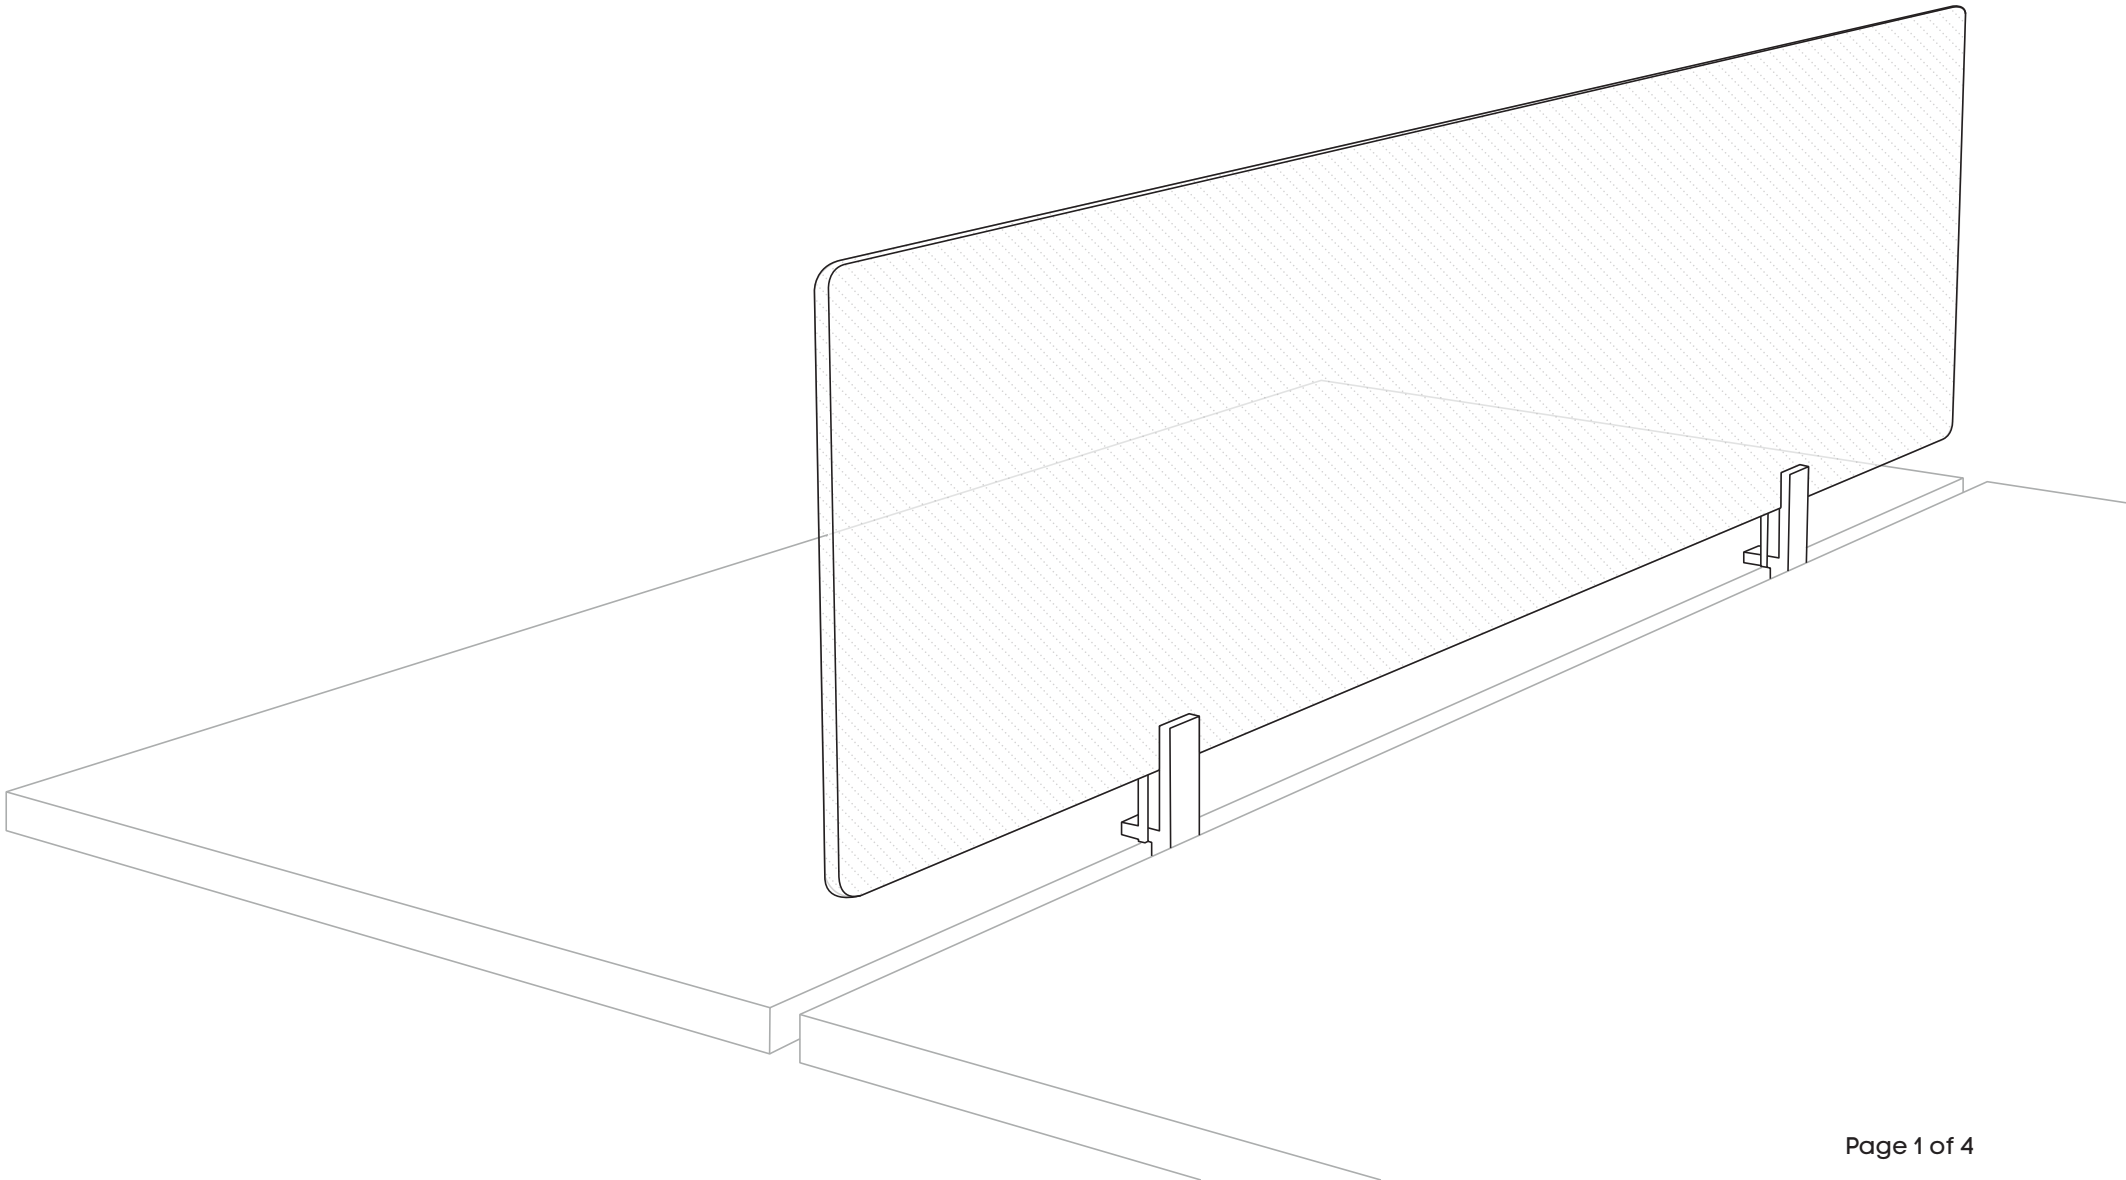

ASSEMBLY INSTRUCTIONS

# Echo panel screen


Sizes: 1200 / 1600 mm wide

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

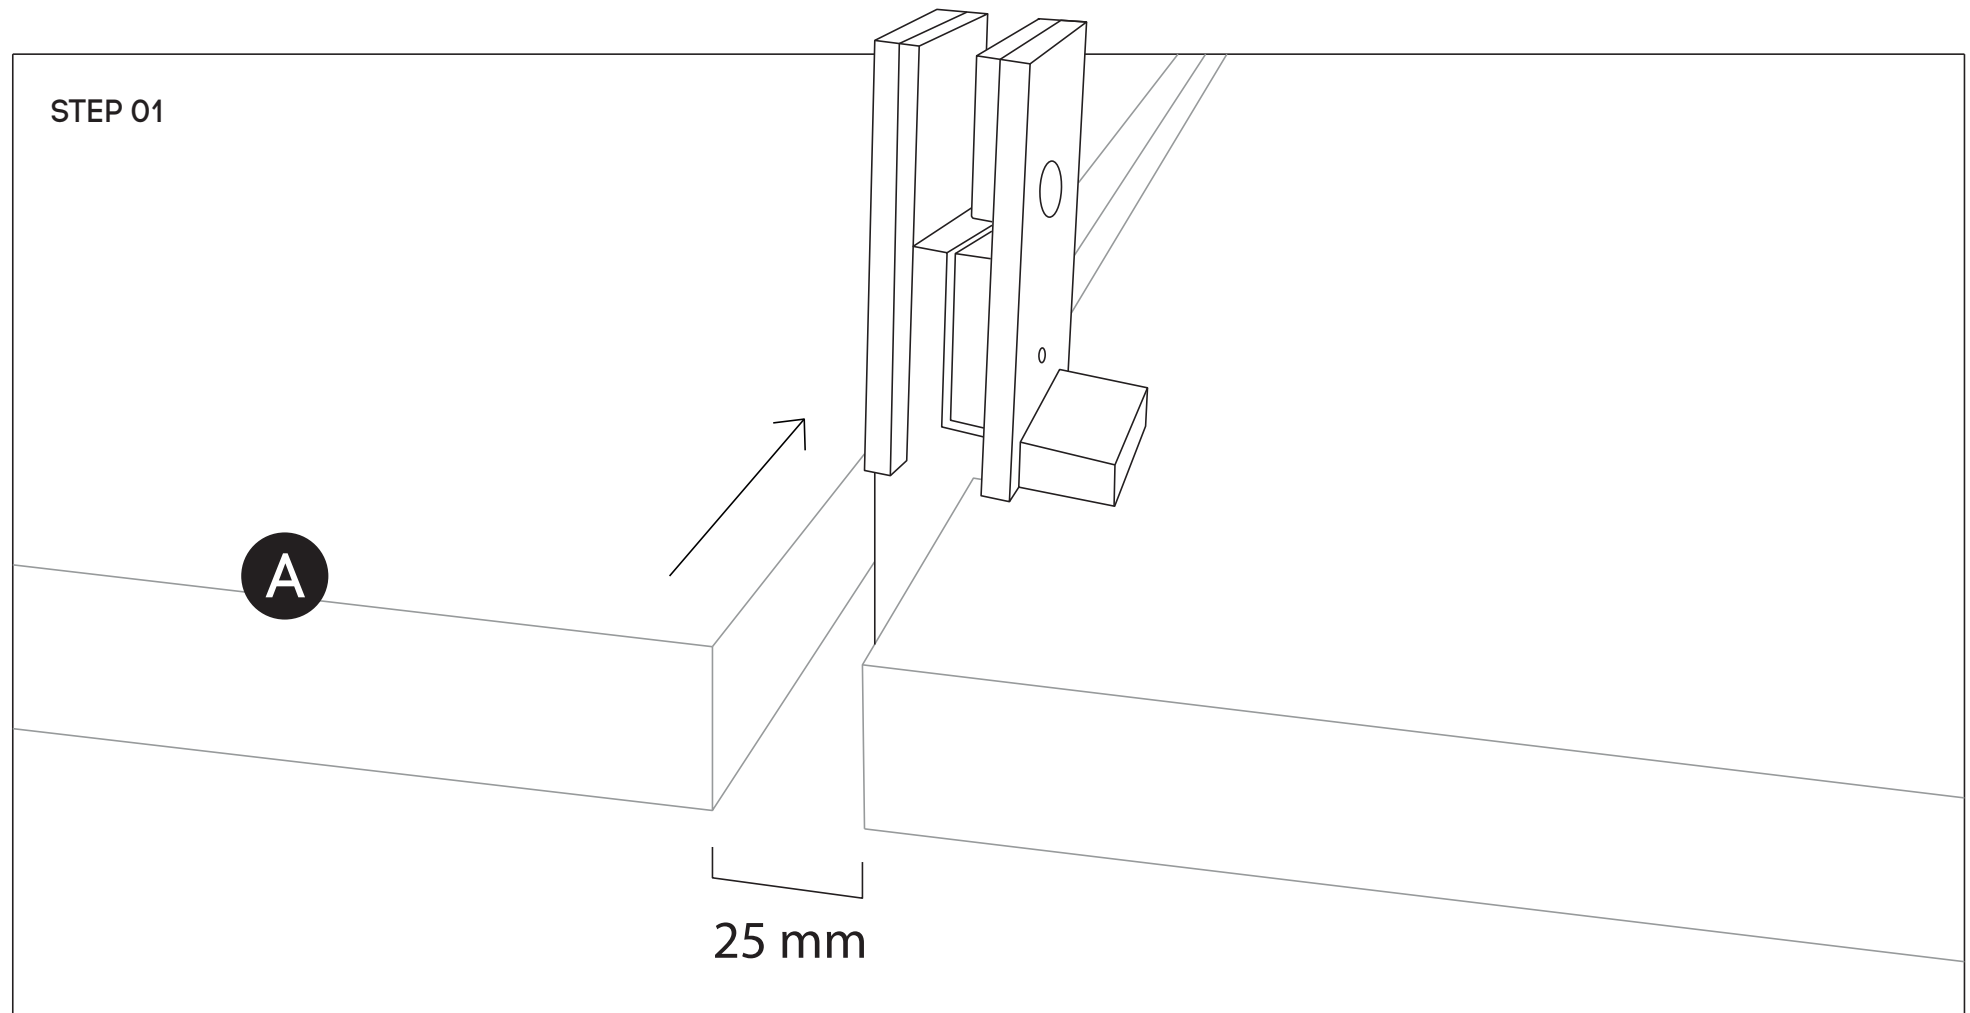

Please leave 25mm gap between table tops (A) so we can install pincer clamp brackets between the two table tops. Pincer brackets can be installed around 250mm-300mm from the end of the screen (or can be any desired distance).

ASSEMBLY INSTRUCTIONS

# Echo panel screen



Sizes: 1200 / 1600 mm wide

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

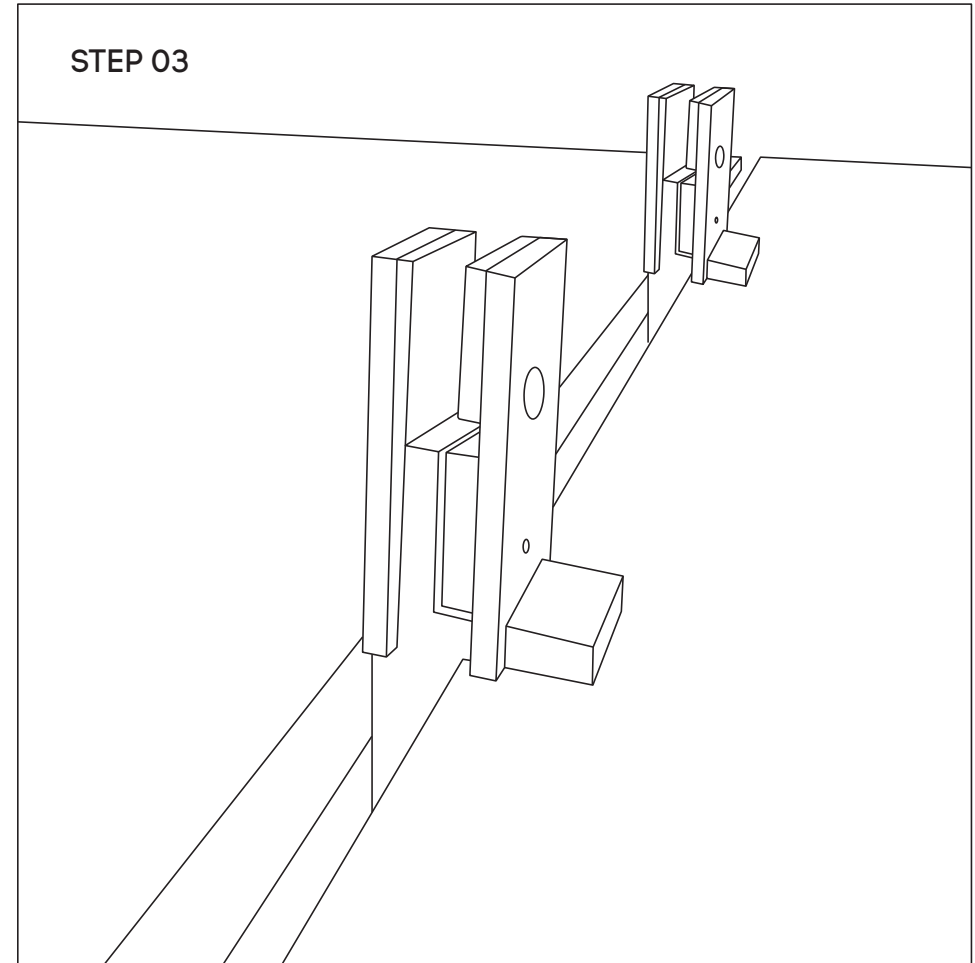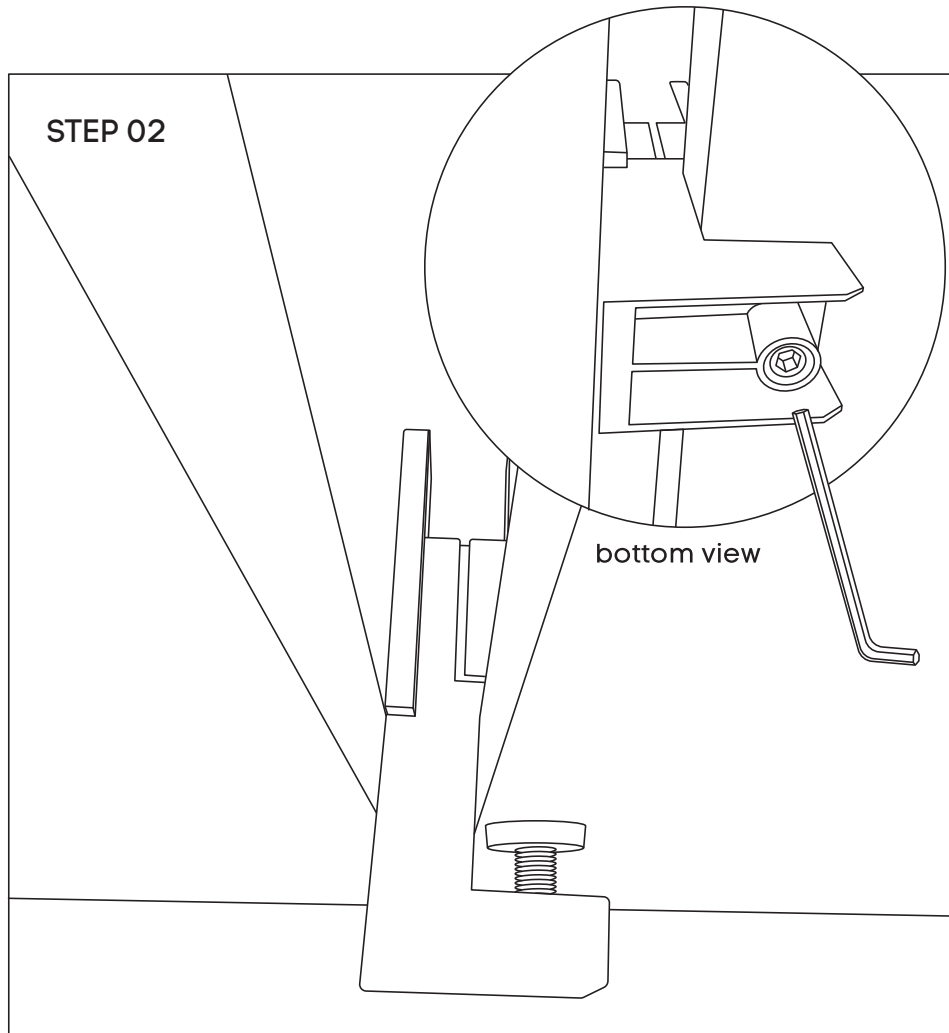

**Step 2:** Once desired location is set, please tighten the first pincer clamp bracket bottom screw using an allen key.



**Step 3:** Repeat step 2 and assemble the second pincer clamp bracket.

# Echo panel screen

Sizes: 1200 / 1600 mm wide

**Need help!**

Call us on  
**1300 527 665**

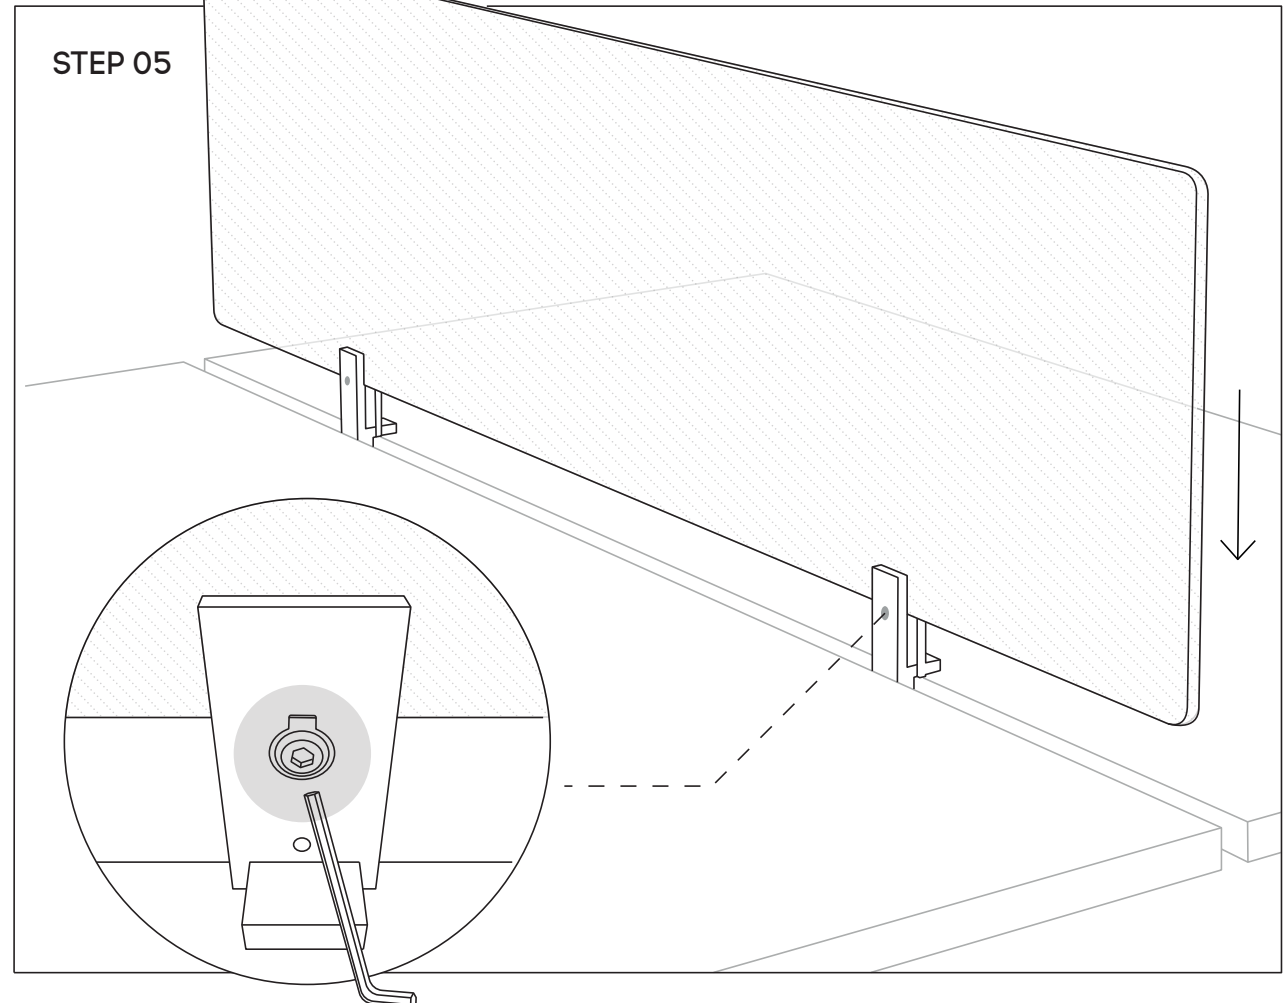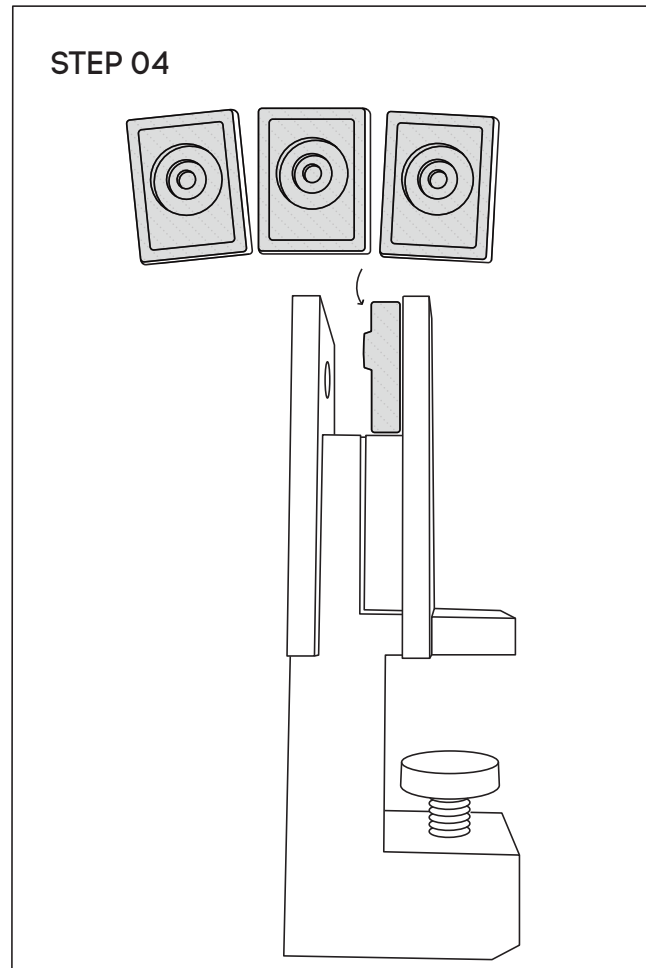

**Step 4:** Please put the plastic spacer in between the clamp brackets.

Hint: Echo screen use 1x thick & 1x thin plastic spacer.

**Step 5:** Please slide down Lean Perspex or Lean Echo screens down until it fully rest over the brackets, standing between the pincer clamp brackets. Please use both plastic spacer to clamp the screen and tighten it using an allen key.