

Tools Required: Power screwdriver.

Note: Please ignore any pre-drilled holes or nut inserts that maybe present in your top(s). They will not match your particular table/desk base and woods screws will be required to be screwed directly into the underside of the top.

Note: It is important to fully tighten all bolts and screws before attaching the top(s) so that the frame is sufficiently rigid. Failure to do this may affect stability once the tops are attached.


INSTALLATION GUIDE Switch Dry Bar Table Frame



Need help! Call us on

1300 527 665



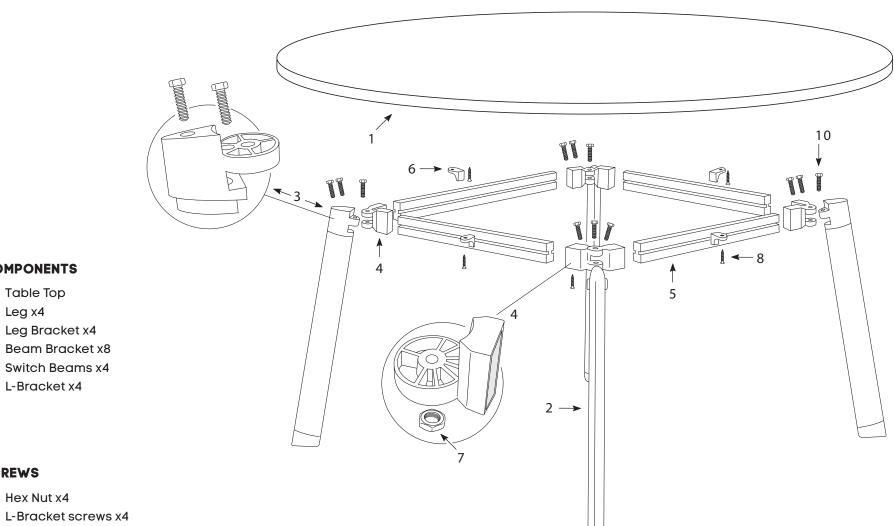

9 Hex Head screws x12

Hex Nut x4

COMPONENTS

Table Top

L-Bracket x4

Leg x4

1

2 3

4

5

6


7 8

SCREWS


10 M8x25mm Dome Head x4

INSTALLATION GUIDE Switch Dry Bar Table Frame




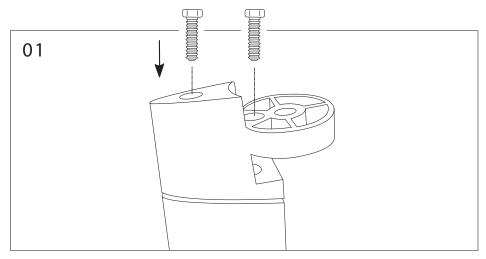


Join Leg Brackets to each Leg using screws to secure them, as follow.

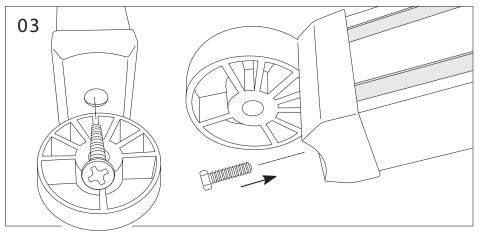

Securely connect each Beam to each Beam Bracket. Screw to secure.

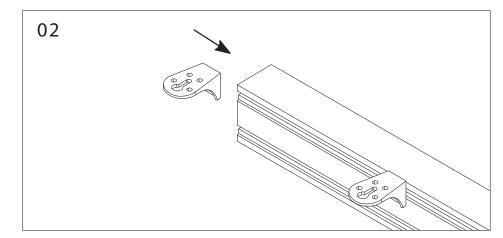

Join 1 L-Bracket through each Switch Beam

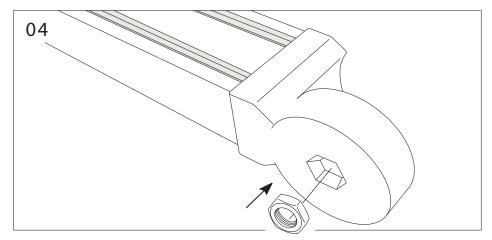

Insert Hex Nut on each Beam Bracket.


INSTALLATION GUIDE Switch Dry Bar Table Frame




Need help! Call us on **1300 527 665**



Position as presented, and proceed to screw to ensure each corner of the frame.

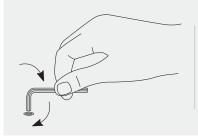

If this bolt does not drop into the joint use the Allen key to screw it all the way in so that it creates its own thread. This will ensure a nice, tight joint. **Note:** It is important to fully tighten all bolts and screws before attaching the top(s) so that the frame is sufficiently rigid. Failure to do this may affect stability once the tops are attached.

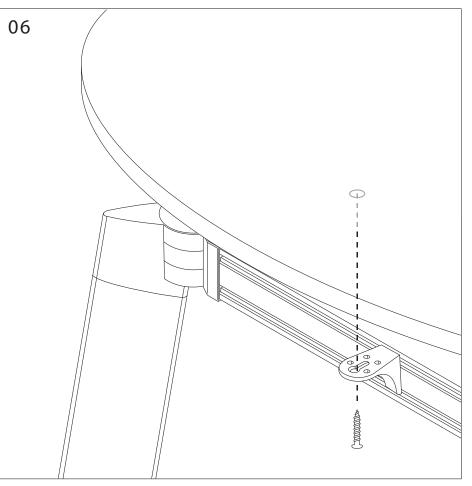

Directly screw into table tops, using L-Bracket screws through each L-Bracket.