

ASSEMBLY INSTRUCTIONS

Uniform 2 Door Small Storage Cupboard with Planter Box


Size (mm): 800W x 450D x 975H

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

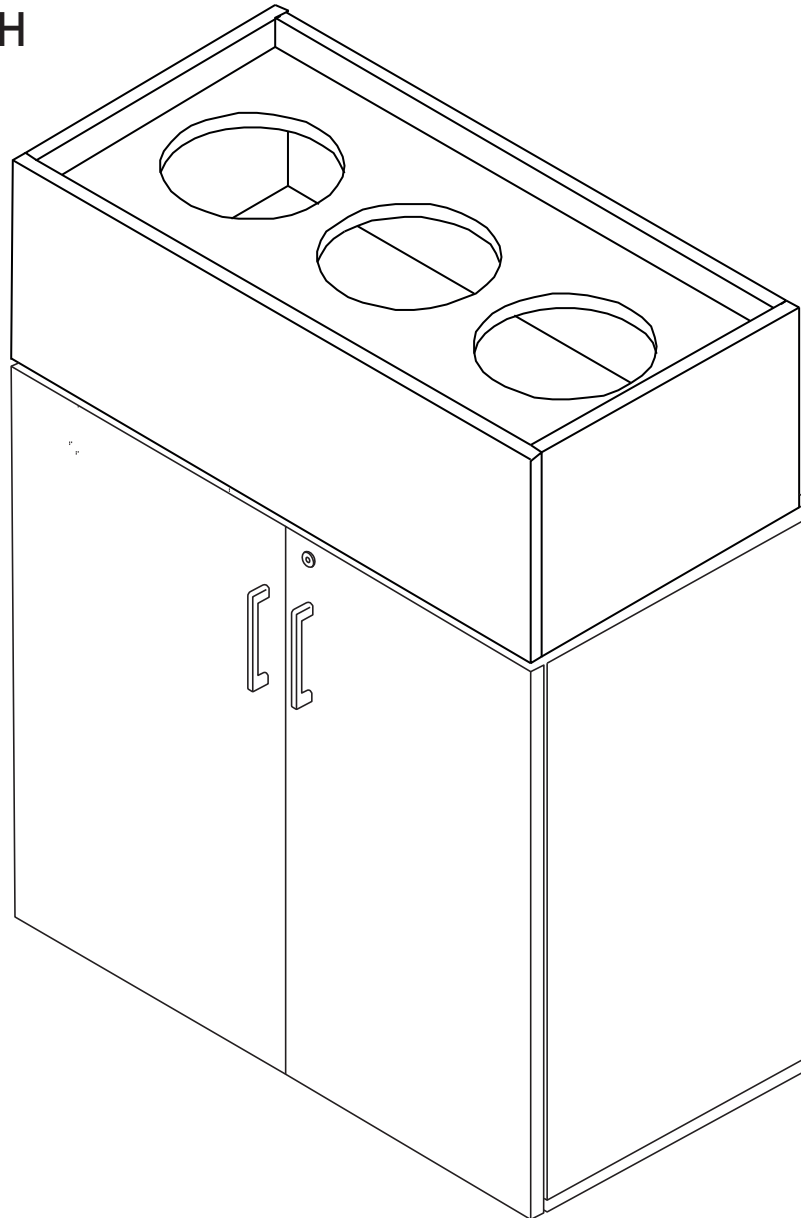

ASSEMBLY INSTRUCTIONS

Uniform 2 Door Small Storage Cupboard with Planter Box


Size (mm): 800W x 450D x 975H

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

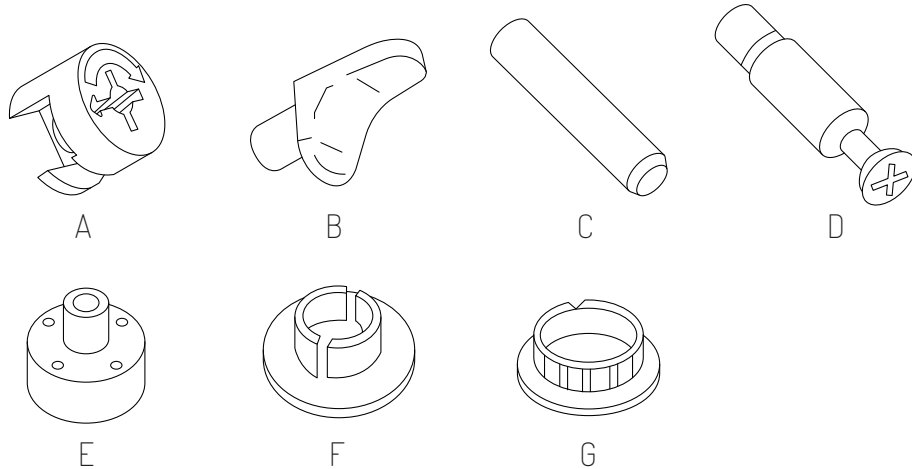

COMPONENTS




A	Minifix Housing x14	E	Adjustable Leveller N2880 x5
B	Collar Stud x5	F	Leveller N2880 Cap x5
C	Rubber Wood Dowel M8 x40mm x14	G	Deco Cap x5
D	Minifix Connecting Bolt x14	H	Safety hook *

PANELS

Back Panel x1
Side Panel x2
Base Panel x1
Shelf Panel x1
Top Rail

DOOR ASSEMBLY

5/8 Door Hinge c/w Mounting Plate x4
Chipboard Screw 4x16mm x24
CSK Tapping Screw #4 3/4" x4
Rim Lock CL 2/3 x1
Pan Head Self Tapping Screw x4
L Huwil Bracket x1
Plate Bracket BK x1

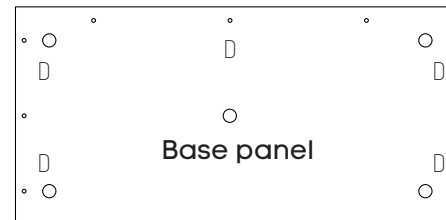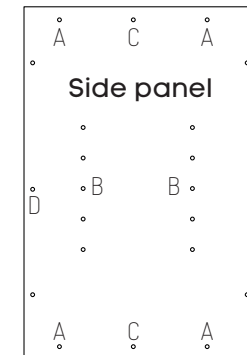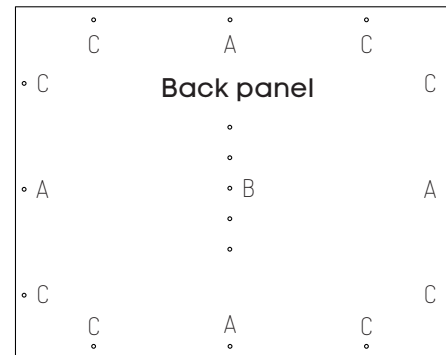

ASSEMBLY INSTRUCTIONS

Uniform 2 Door Small Storage Cupboard with Planter Box

Size (mm): 800W x 450D x 975H

www.jasonl.com.au

Need help!

Call us on
1300 527 665


jason.l
your office furniture mate



Function of Klix Cam
Turn for locking
75° Min - 195° Max

Make sure the arrow is pointing upwards before inserting into the panel's hole.

STEP 01

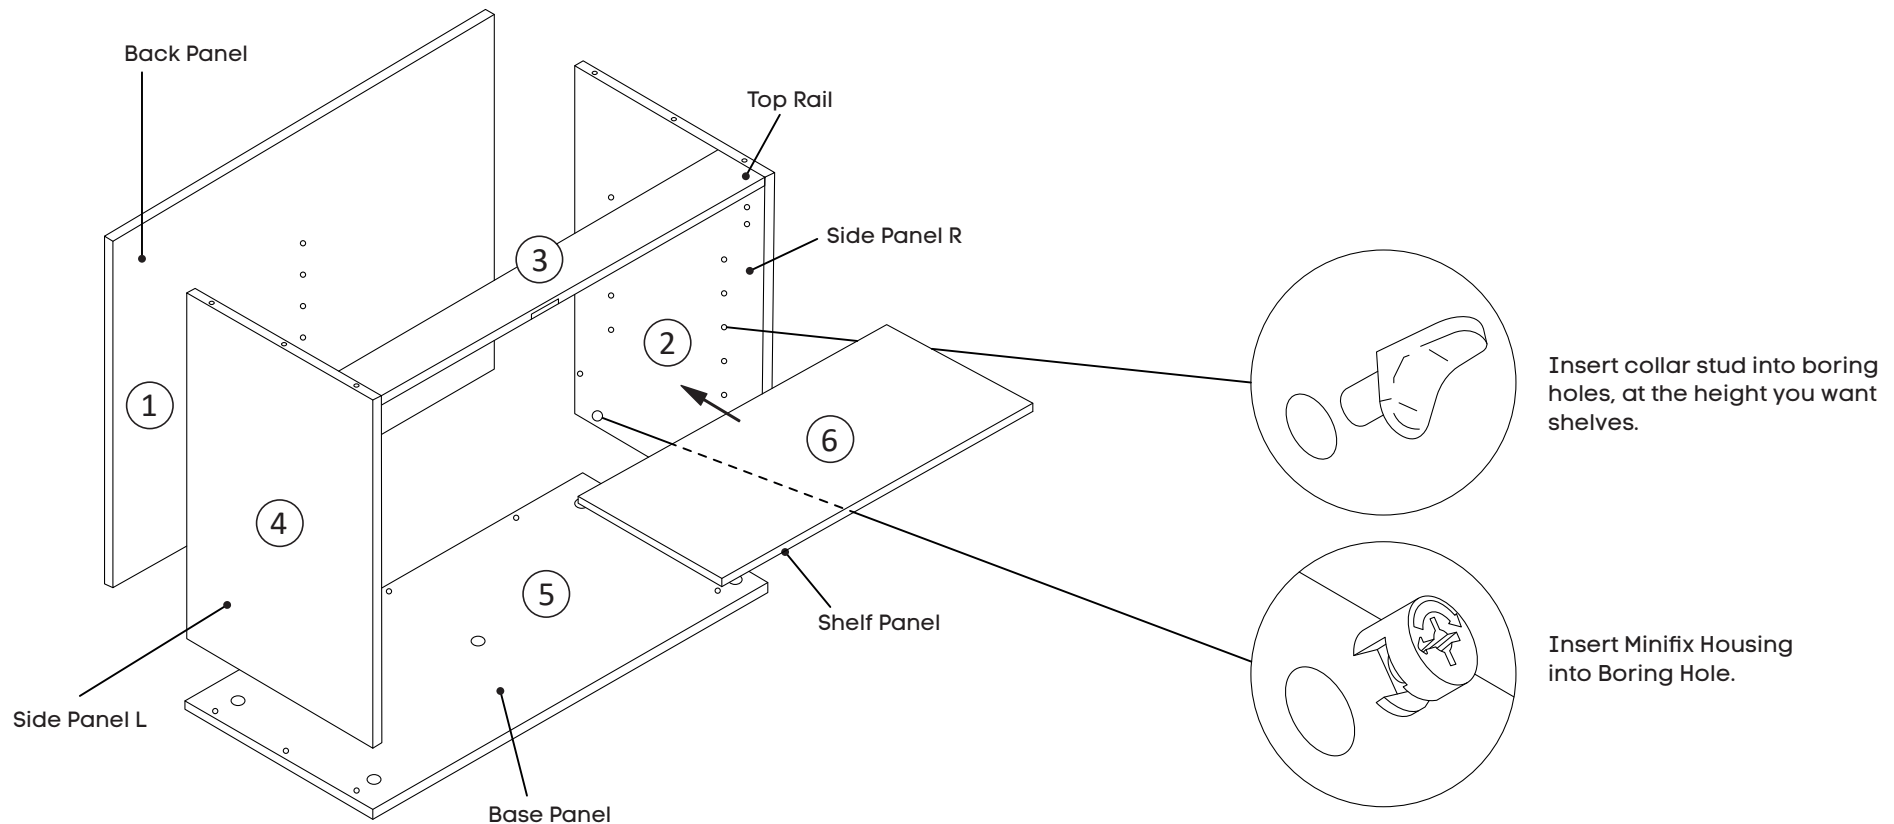

Assemble all panels in the following order.

ASSEMBLY INSTRUCTIONS

Uniform 2 Door Small Storage Cupboard with Planter Box


Size (mm): 800W x 450D x 975H

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

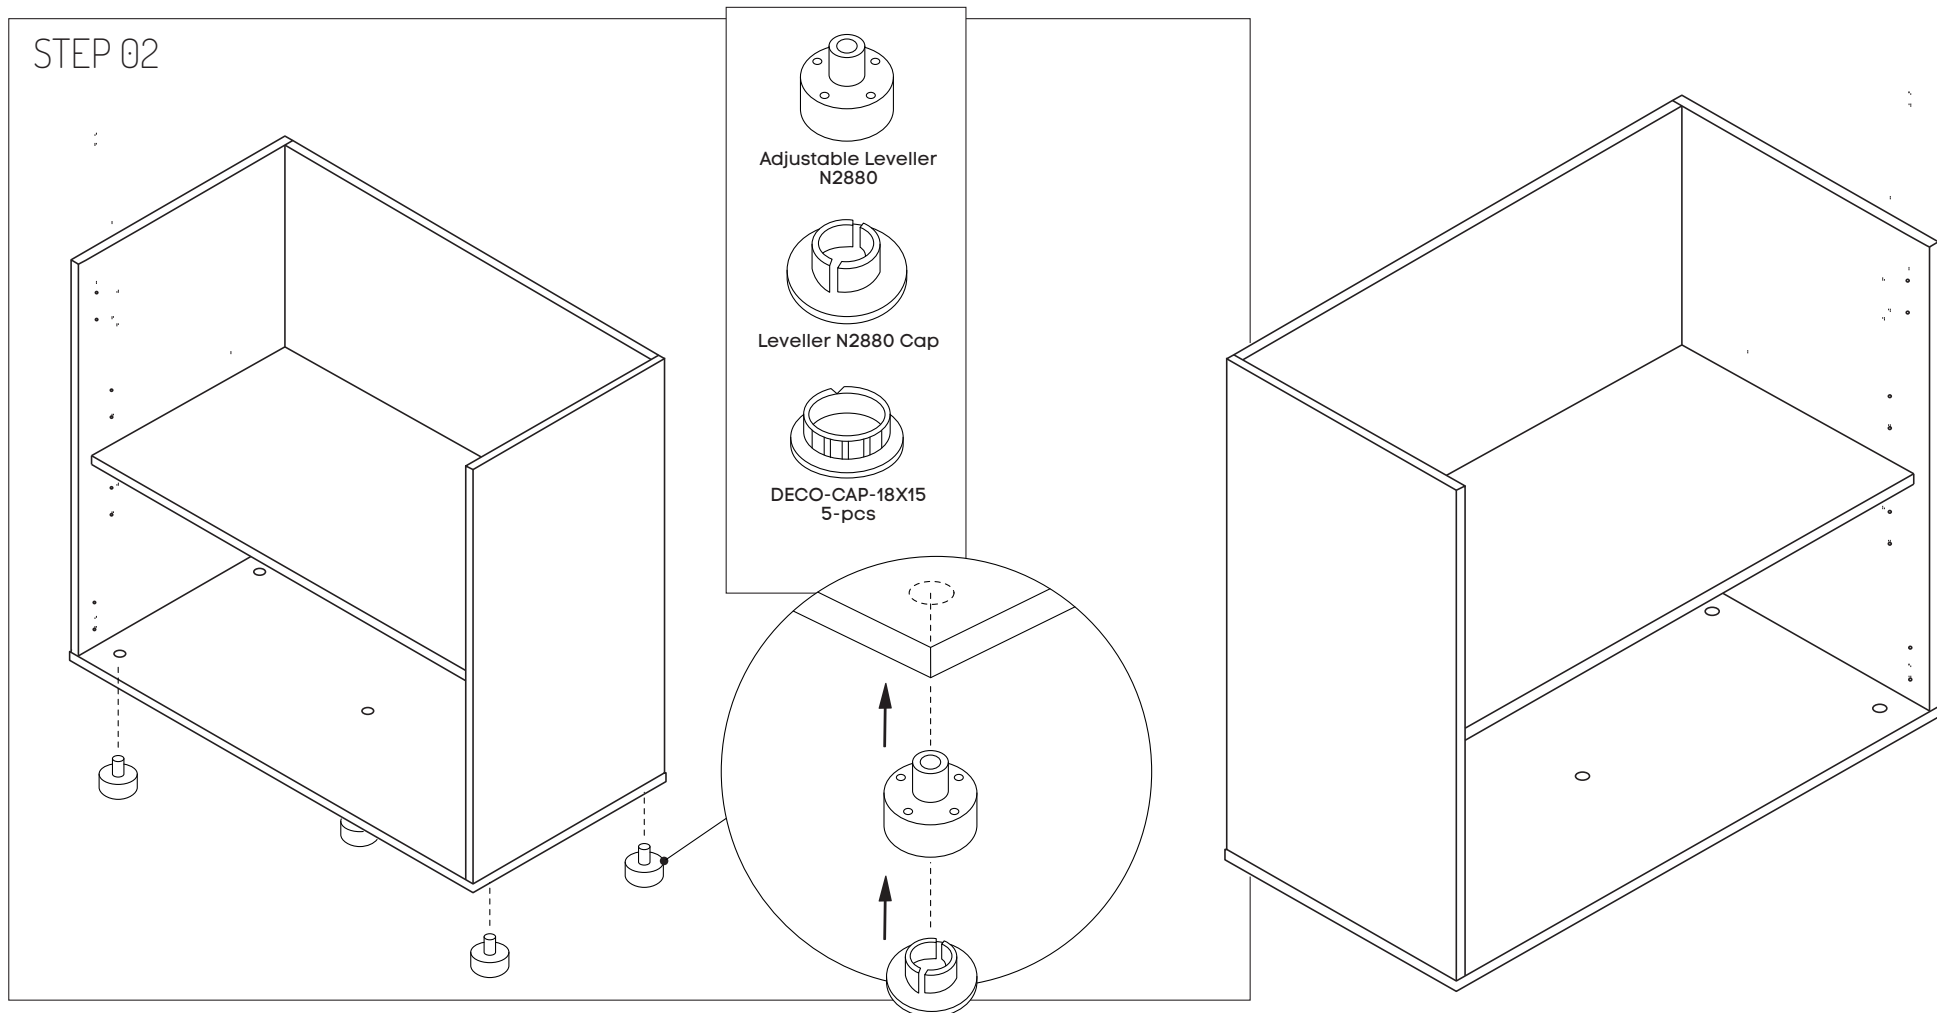

Tighten leveller into boring hole and screw the cap.
Use DECO-CAP-18X15 to seal holes on base panel.

ASSEMBLY INSTRUCTIONS

Uniform 2 Door Small Storage Cupboard with Planter Box


Size (mm): 800W x 450D x 975H

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

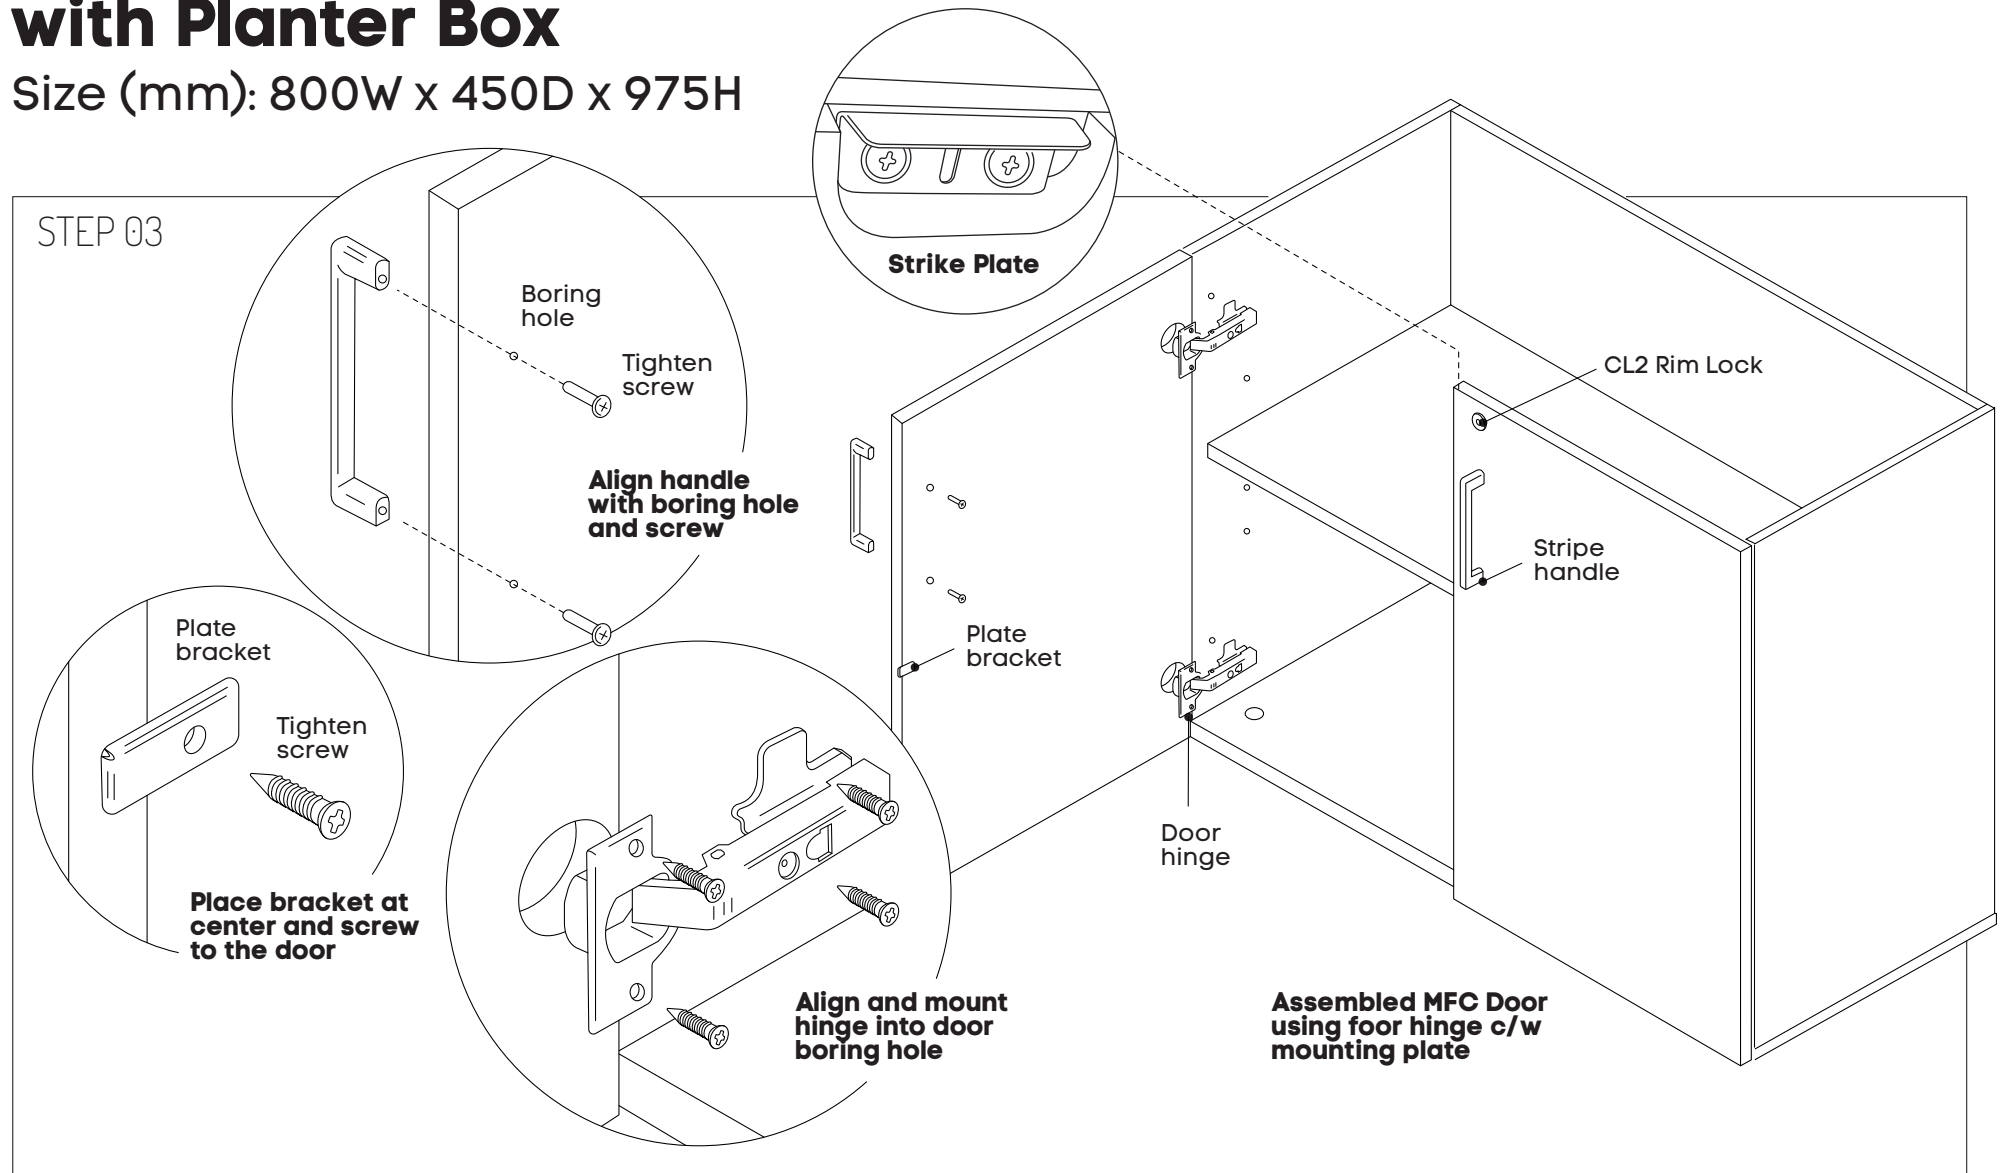

ASSEMBLY INSTRUCTIONS

Uniform 2 Door Small Storage Cupboard with Planter Box

Size (mm): 800W x 450D x 975H

www.jasonl.com.au


Need help!

Call us on
1300 527 665


jason.l
your office furniture mate



Planter Box assembly

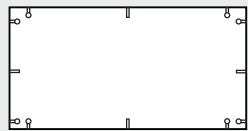


① BASE PANEL
Qty: 1 pc



② BACK PANEL
Qty: 1 pc




③ SIDE PANEL L
Qty: 1 pc



④ SIDE PANEL R
Qty: 1 pc



⑤ FRONT PANEL
Qty: 1 pc

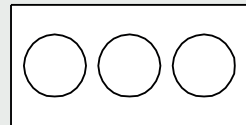

⑥ TOP PANEL
Qty: 1 pc



Collar Stud
262.24.710
4 pcs




Minifix Steel Bolt
10259
16 pcs



DECO-CAP
16x5
16 pcs



Step 1.

Assemble component follow sequence number

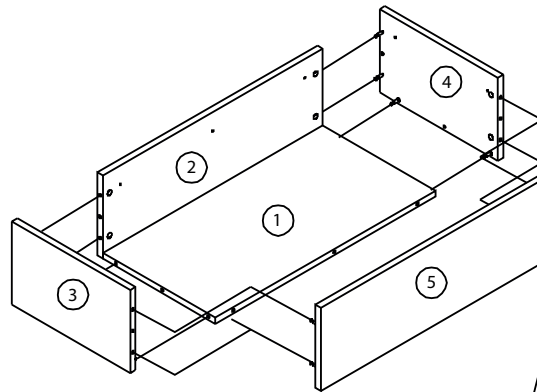


Step 2.

Insert collar stud into boring hole

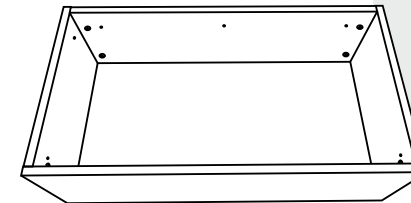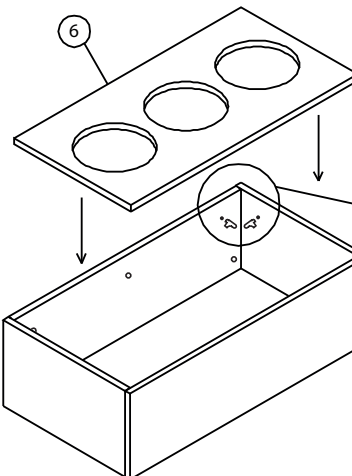

Note:

The bottom panel should be facing down. Screws holes must be seen from the outside only.

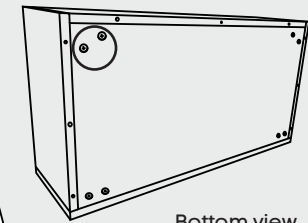

Bottom view

Note For Minifix Cam

Important Function of Klix cam



1/4 RIGHT TURN FOR

LOCKING Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole

Insert Collar Stud into Boring Hole

ASSEMBLY INSTRUCTIONS

Uniform 2 Door Small Storage Cupboard with Planter Box

Size (mm): 800W x 450D x 975H

www.jasonl.com.au

Need help!



Call us on
1300 527 665

jason.l
your office furniture mate



Step 3.

Assemble planter box bottom panel on top of carcass and complete assembly

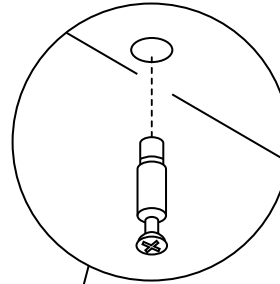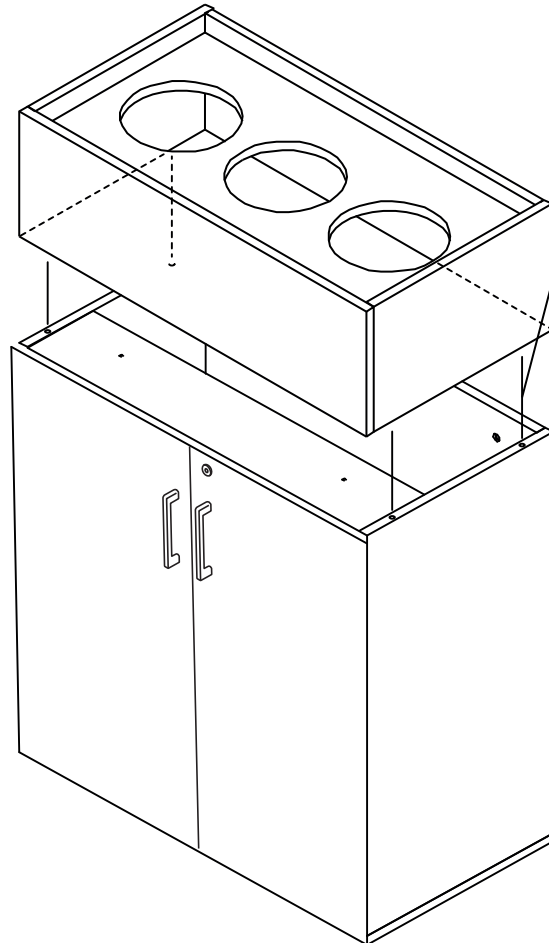

Tighten Minifix
Connecting into
Boring Hole.

**Complete
assembly**

