

VFIRE PRO Pod

Filling Instructions **Press Machine Required*

- **Step One:** The device comes with a pod and a separate mouthpiece. Make sure to store the mouthpiece in a safe location while you are in the filling process.
- **Step Two:** Using either a syringe or eye dropper, fill the device by utilizing only one of the two filling holes. Be careful not to fill both holes at once as one is required to let air escape during the filling process.
- **Step Three:** Push the mouthpiece back on the device until it clicks into place. Make sure to do this within 1.5 minutes of filling the device.

After Filled

If you are using **Live Resin or **Live Rosin** then you can skip this step*

- Once the device is filled and the mouthpiece has been placed back on within 1.5 minutes after filling, invert the device so that is upside down. This is to ensure the oil in the device cools away from the coil. This is to prevent leakage.
- After the device has been flipped upside down for 30 minutes, flip it right side up for another 30 minutes. This allows the oil to fully saturate the coil. If the coil is not fully saturated, then it can potentially cause dry hits.
- When you have completed the inverting process, simply store the device in a room temperature environment with the temperature being between 68-77 degrees F.

Additional Info

- Available in 1.0 mL
- The needle's outer diameter must be ≤ 1.5 mm.
- Do not pre-heat oil higher than 122 degrees F.
- It is normal that after filling, the ceramic coil begins to absorb some oil and a headspace will be formed in the tank.

For any other information. Please contact
Info@ikrusher.com


Step 1



Step 2



Step 3

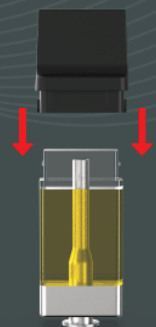

After Filled

