



Canam X3 Seat Install


Step 1: Remove Stock Seats by removing the 4 bolts under the seat cushion




Step 2: Remove Sliders as pictured



Step 3: Install the Included seat bases to the included Canam base as pictured. Blue loctite is recommended on all nuts and bolts.

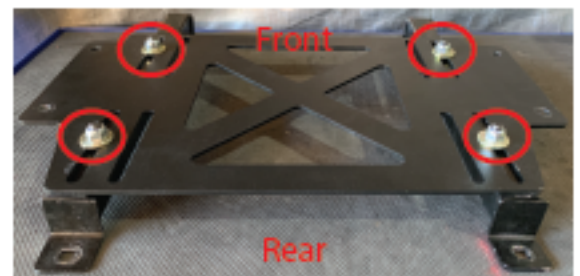

Step 4: Mount base with included hardware that was installed in step 3 to the bottom of the seat. (4 Bolts)

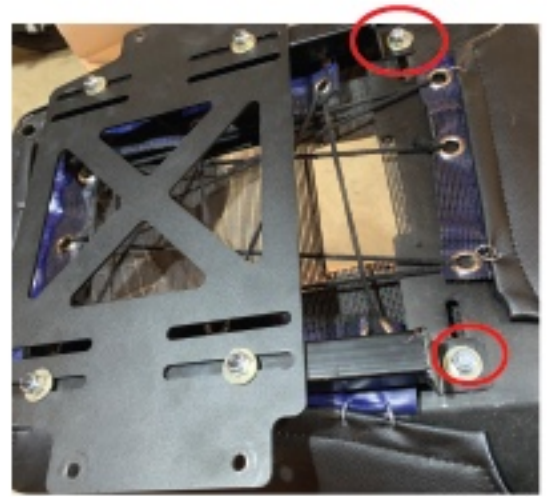

Step 5: Mount Seat to Canam Sliders
Use the bolts that were used to remove the oem seats



Step 6: Mount Seats in Canam
On the front of the mount, use the lowest setting
On the rear of the mount, put the spacer above the mount.

