


BIXPY DIY POD ADAPTER CUTOUT

Dotted line below is the footprint for the Bixpy DIY Pod Adapter in actual size. Print and place on your installation surface.

Once in place, drill the holes as indicated to fit your Bixpy Adapter plate. Use some silicone sealant before putting your nuts and bolts into place to ensure a water seal if you are installing on a surface and needs to be sealed.

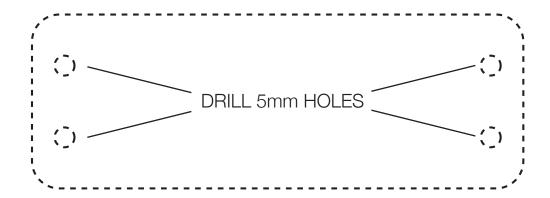

PRINT AT 100%