

Vertical Garden Kit

Components:

1 x Frame



5 x Pots



5 x Mats



5 x Tubes
+ Funnels



4 x Wall plugs
+ Screws



Instructions:

1. Mounting the frame to the wall

Mark out the area where you want to mount the planters. They can be hung vertically or horizontally. Multiple frames can be connected together.

For brick or cement you will need to drill a hole for the wall plugs (Image 1). Place screws through the 4 holes at the corners of the frame (image 2).

Your frame can now be attached to the wall (image 3).

Image 1

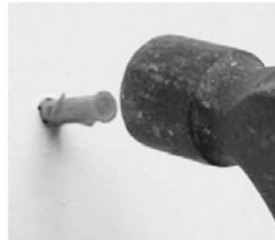


Image 2



Image 3



2. Connect the riser (tube)

The tube for water flow is to be connected to the circle with the arrow inside, located at the bottom of each pot.

Place the tube so the small vertical raised line (outlined in white in image 5), lines up with the big and small arrows.



Image 4



Image 5



Image 6

When in position turn the tube clockwise so the raised line moves past the wall (image 6). This may require a bit of force to help the turn.

3. Funnel, Mat & plant

Once the tube is secured, place the white mat over the top of the tube so it sits at the bottom of the pot (image 7). Then push the funnel into the top of the tube (image 8). You are now ready to insert soil and your plant (image 9).



Image 7



Image 8



Image 9

4. Insert pots into frame.

To insert the pot simply insert the bottom first so the bottom sits over the frame. Then push the pot into the frame until it clicks (image 10).



Image 10

For enquiries or spare parts please contact Maze Distribution:
www.mazeproducts.com.au 1300 449 107