


AMERICAN BUTTON MACHINES

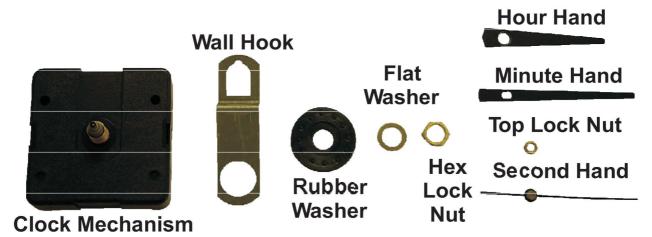

1. To make a clock first punch a hole in the center of the 6" button using the clock punch on the model 600.

2A. (Wall Clock Only) Fit wall hook into the grooved area on the mechanism. Then place a rubber washer over the top, and place through the hole in the back of the button.



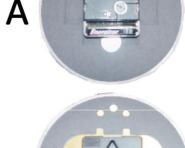

- 3. Place a washer on the point of the clock mechanism, and tighten on with the hex lock nut.
- 4. Place hour hand on the point of the clock mechanism until it fits tight. Follow with the minute hand, and tighten on with the top lock nut. Then insert second hand into the point of the mechanism.
- 5. Finish by inserting the battery into the back of the mechanism and adjust the time of the clock by using the wheel on the back of the clock mechanism.