



Shakespeare

Assembly

1. First press Part 1 in to the end of the Long tube (A).
2. Now press Part 2 in to the other end taking care to press it in straight so as not to damage the end of the thread.
3. Now press Part 3 in to the end of the top tube (B), at this point if you want a grain match screw part 1 on to part 2 and line the grain, unscrew and press together
4. Now take part 5 and 6 and place the clip over part 5 making sure to line the slot up with the clip the clip is a press fit in the groove and will press in when pressed together.
5. To finish give the parts a quick wipe over to remove any dust

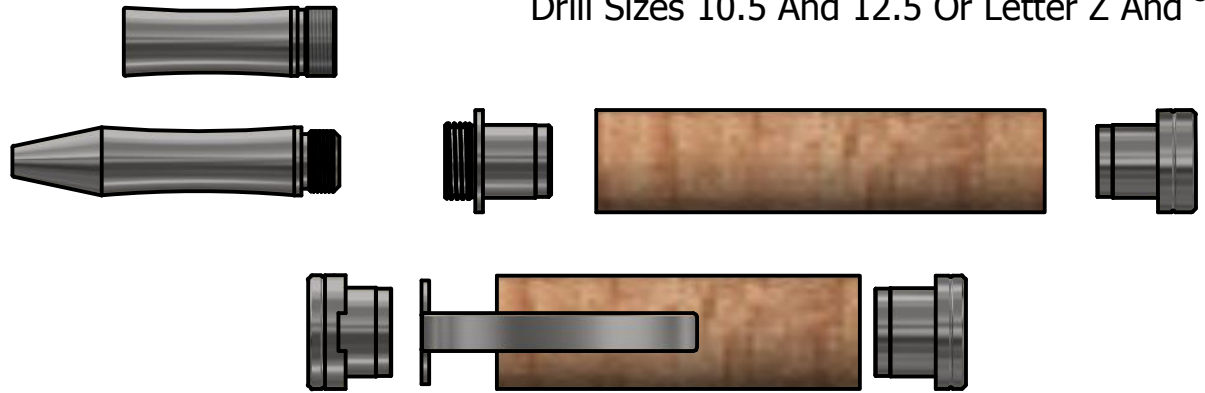

Drill Sizes 10.5 And 12.5 Or Letter Z And $3\frac{1}{64}$

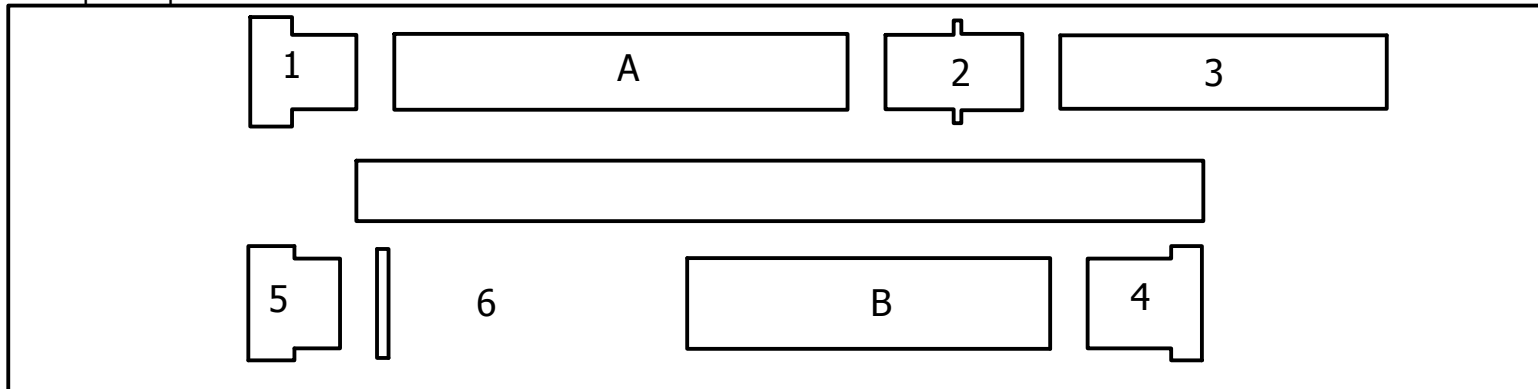

| | | | | |
|--|-------------------------|-----------------------------------|--------------------|----------------|
| Finish Your Choice | Material Your Choice | KIT Shakespeare | Date 03/02/2017 | |
| IF IN DOUBT ASK !! <small>All tolerances are .05 mm unless otherwise stated All Parts must be clean Everything in this drawing is Property of GB Made Pen Kits LTD and must only be made if licenced by a director of GB Made Pen Kits LTD</small> | | Shakespeare Assembly instructions | | |
| | | Part No. 8562 | Issue 0 | Sheet 1 / 1 |



BRITISHMADEPENKITS.COM