


EVO-S FRONT LIP

FOR BMW M2 F87 PRE LCI + COMPETITION


TEST FITTING

Please note we recommend to disassemble the original front bumper for installing the splitter. Align the new front lip with the original bumper so that the ends align with the original parts.

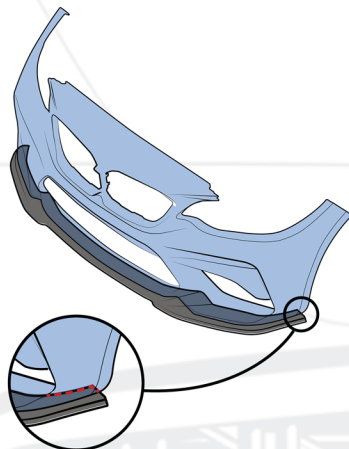

CLEANING THE SURFACE AND REMOVING THE PROTECTION FILM


1 - Clean the original front bumper with a suitable degreaser. Now remove the protective film from the front lip.
 2- Apply the polyethyle glue to the areas of the front lip as shown and position the front lip on the original front bumper - make sure the glue spreads evenly.

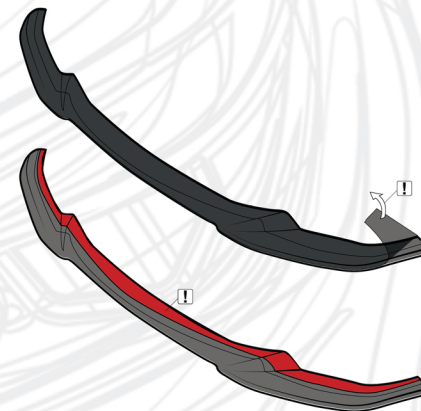

PRE DRILLING THE HOLES



PLEASE NOTE THE TEMPLATE ON THE BOTTOM OF THIS PAGE!

With the front lip in the correct position, drill the holes through the original front bumper marked on the template in RED! with a 7mm drill bit.

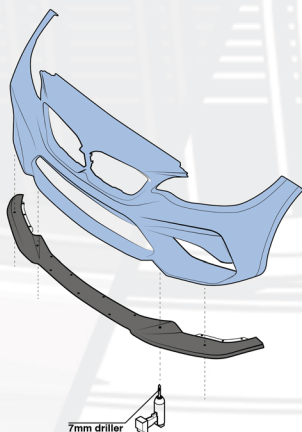

APPLYING THE SPLITTER TO THE ORIGINAL FRONT BUMPER

1- Use the bolts for the pre-drilled holes marked RED! Secure the bolts by adding the nuts. Please make sure to use washers on both sides.
 2- You can now apply the self tapping screws marked yellow on the template.
 3- Please swap the two outer original self-tapping screws (marked GREEN! on the template) for our self-tapping screws supplied.
 4- You can now reassemble the undertray.

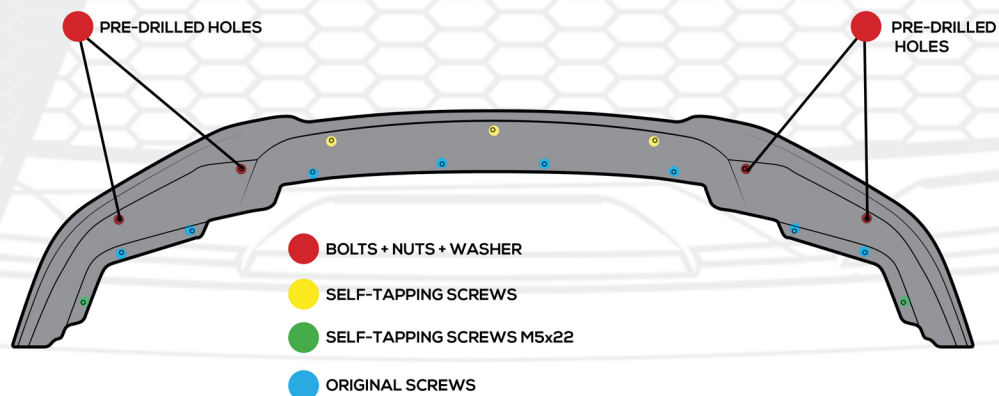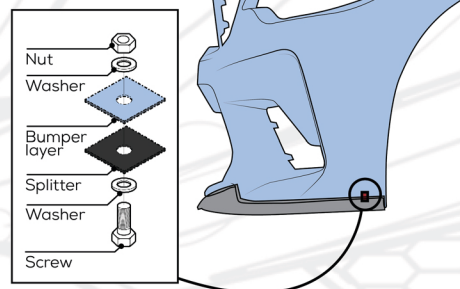

We wish you a lot of fun with your new front lip!
 Tuning is not just a passion, it is a lifestyle!

Enjoy it!

