

Cigar Humidor Kit Instructions


You will need:

Drill bits: 55/64"

Cigar Humidor Bushing

Minimum Blank size 1-1/8" width


Drill, Tube & Square your blanks & mount on your mandrel - it is recommended to cut blanks 3/4" longer than the tube in case of blowout.

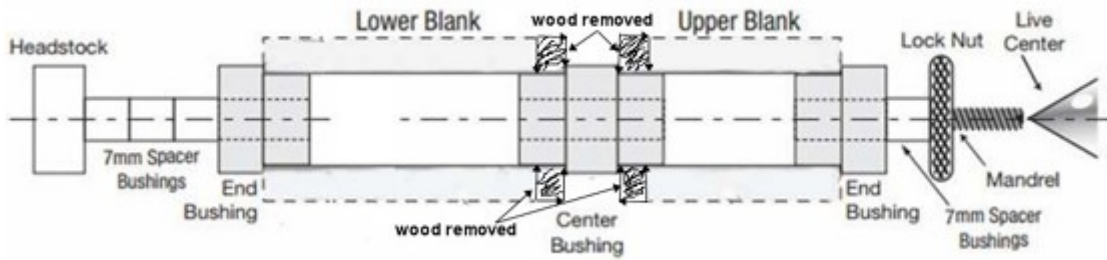

Turn your blank down to the bushings. Polish & finish blank
- cut a tenon per first image

Lay out your parts based on the diagram below

Diagram A

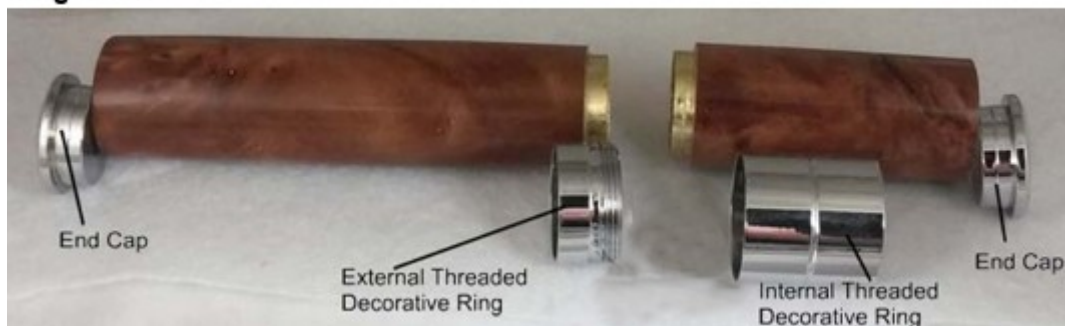

Assembly

1. Press one of the end caps, it doesn't matter which one, into the end of the long finished blank without the tenon.
2. Press the tube external threaded decorative end onto the end of the long blank with the tenon.

3. Press the other end cap into the end of the short tube without the tenon.
4. Press the internally threaded decorative ring onto the other end of the short blank with the tenon.
5. Screw the top and it is ready to store your cigar