
Euro Pen Kit Instructions

You will need:

Drill bits: 7mm Slimline Bushing

Drill, Tube & Square your blanks & mount on your mandrel

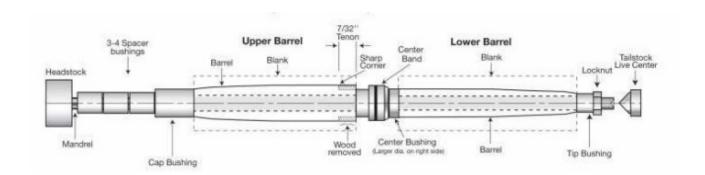




Turn your blank down to the bushings. Polish & finish blank Cutting the Tenon:

Keep the center band away from the upper tube. Make a pencil mark 7/32" from the end. Use a parting tool and cut a 732" tenon down to the diameter of the bushing.

Use the center band by sliding it over the tenon to achieve a good snug fit. Make sure you keep a sharp outside 90° corner on the tenon.

Lay out your parts based on the diagram below

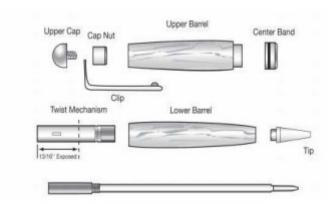

Assembling the pen

- 1. Press the cap nut (recessed end first) into the tapered end of the tube.
- 2. Use a drop of glue around the tenon, slide the center band (square end first) over the tenon. Push in, let dry.
- 3. Scribe a line/mark on the twist mechanism 13/16" line from the chrome end. Press with the brass end of the mechanism first into the opposite end of the barrel to the line scribed. Leaving 13/16" exposed.
- 4. Twist the mechanism and pen tube to check the retracting and extension of the refill. Press the mechanism further if necessary.
- 5. Insert refill into twist mechanism and screw to the end.
- 6. Engage and push barrels together.