

Ice Cream Scoop Kit Instructions

You will need:

Drill bit: 23/64" or 8mm

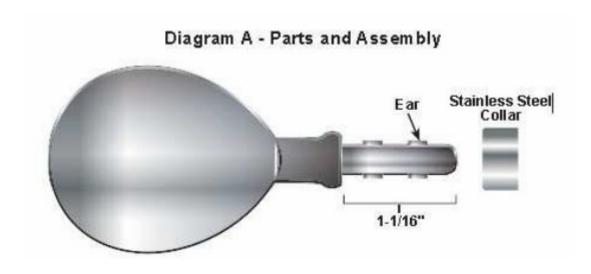

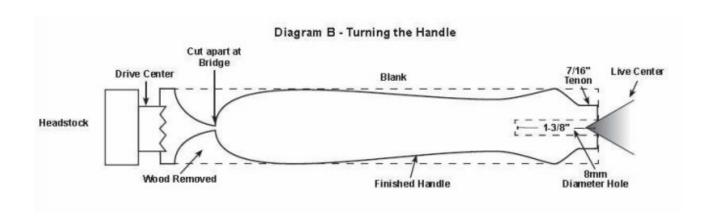

Turning & Assembly

- 1. Recommended blank size 5" x 1.5"
- 2. Drill center of blank to 1-3/16" deep
- 3. Turn between centers, finish and polish
- 4. Use epoxy to affix scoop to blank.