


Threaded Project Kit Instructions

You will need:

1" Forstner Bit

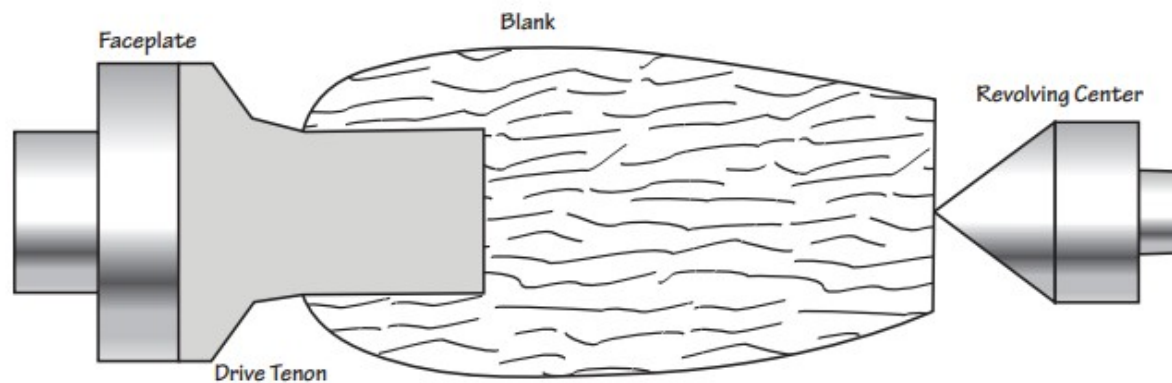

Steps:

1. Drill 1" Diameter hole, 2-1/8" deep in blank. Measure shaker set for reference.
2. Mount 4" x 4" waste block on a faceplate and turn 1" diameter drive tenon 1" long. The blank should fit snugly over the drive tenon.
3. Mount the drilled blank onto the drive tenon and advance the tailstock with revolving center up against the bottom of the blank to provide pressure.
4. Turn to the desired shape, then sand and finish the blank.
5. The shaker set can be glued in place.