

## Fancy Slimline Pencil Kit Instructions

### You will need:


Drill bits: 7mm  
Slimline Bushing

### Drill, Tube & Square your blanks & mount on your mandrel



### Turn your blank down to the bushings. Polish & finish blank

### Lay out your parts based on the diagram below

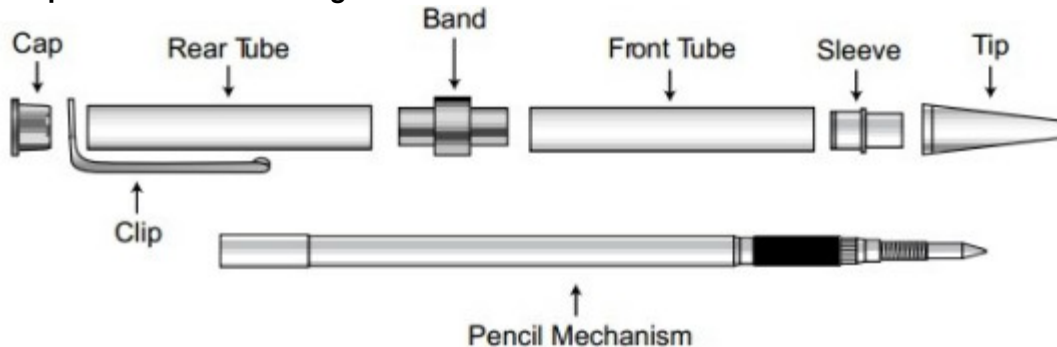

### Assembling the pen

1. Press the sleeve, recessed end first, into the end of the front tube until it hits the shoulder.
2. Press the band into the opposite end of the barrel.
3. Press the rear tube onto the band
4. Press the cap into the clip then onto the rear tube.
5. Insert mechanism through the cap and out the opposite end.
6. Screw the tip tightly onto the threaded end of the mechanism.

Note: If lead does not advance properly or retracts when writing, gently pull exposed short piece of lead out of mechanism. Continue to pump pencil plunger until a new piece of lead is exposed.