Slimline/Fancy Slimline Pen Kit Instructions

You will need:


Drill bits: 7mm Slimline Bushing

Drill, Tube & Square your blanks & mount on your mandrel



Turn your blank down to the bushings. Polish & finish blank

Lay out your parts based on the diagram below

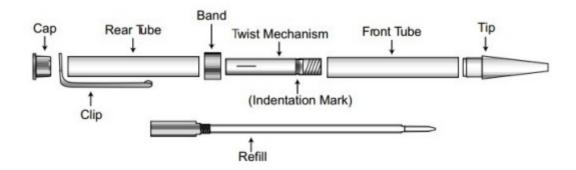

Assembling the pen

- 1. Press the tip into the front tube.
- 2. Press the twist mechanism into the opposite end of the same tube. Don't press too far in.
- 3. Slide the band over the exposed mechanism.
- 4. Press the cap into the clip and then onto the rear tube
- 5. Push the two halves together.