


Slimline/Fancy Slimline Pen Kit Instructions

You will need:


Drill bits: 7mm
Slimline Bushing

Drill, Tube & Square your blanks & mount on your mandrel

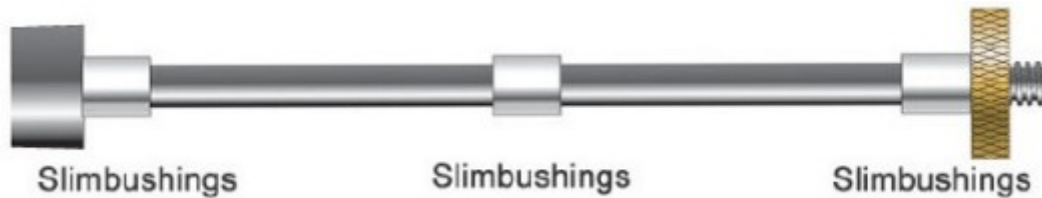

Turn your blank down to the bushings. Polish & finish blank

Lay out your parts based on the diagram below

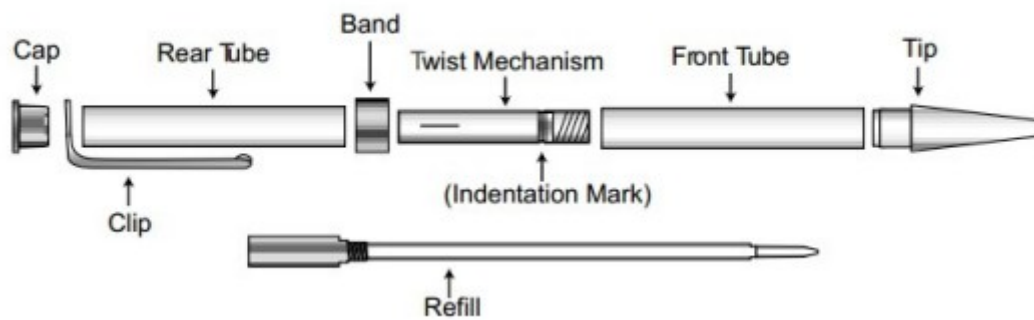

Assembling the pen

1. Press the tip into the front tube.
2. Press the twist mechanism into the opposite end of the same tube. Don't press too far in.
3. Slide the band over the exposed mechanism.
4. Press the cap into the clip and then onto the rear tube
5. Push the two halves together.