


## G6-Series Installation Template

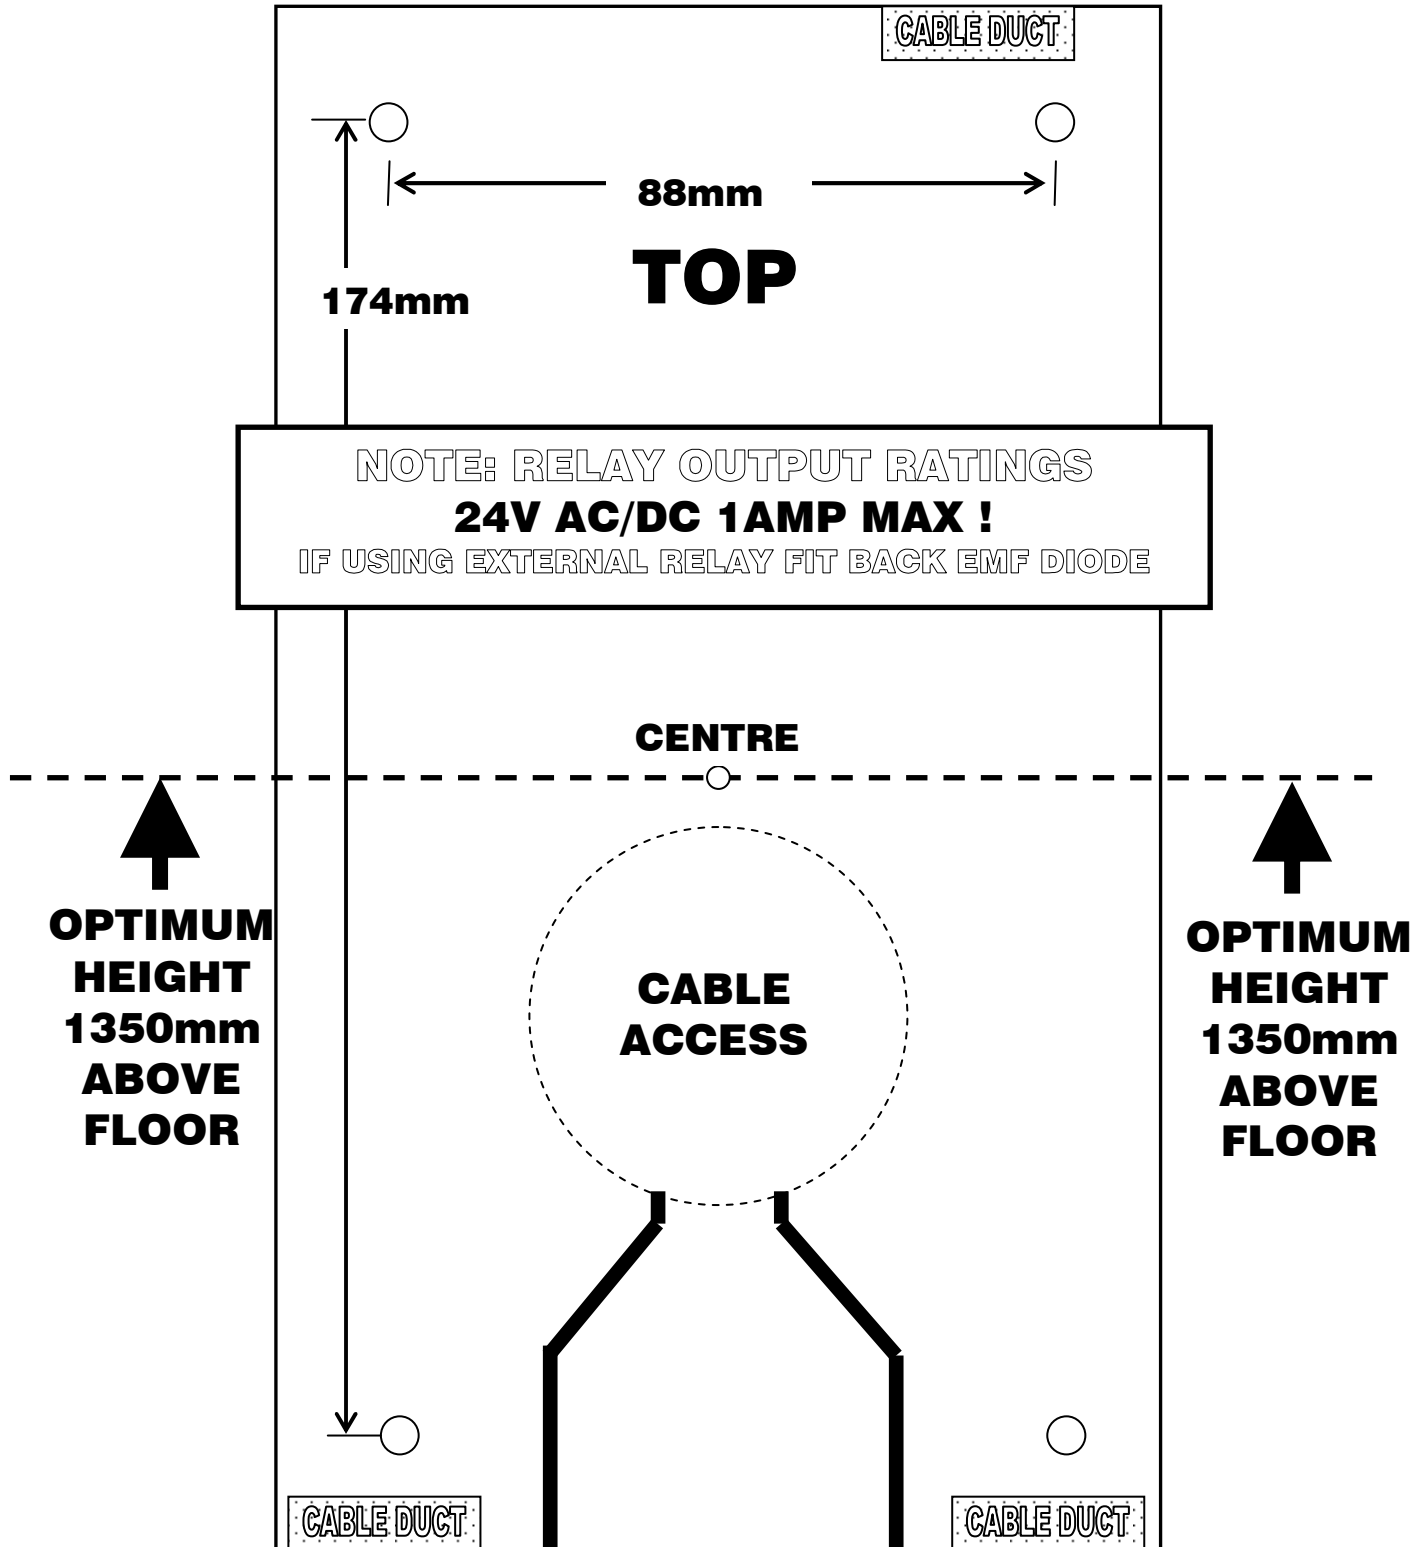

**Note:**

- 1. Once time clock is securely installed, switch BOTH the time clock and power pack ON**
- 2. Close hinged cover, fit counter sunk security screw.  
TAKE CARE NO CABLES ARE PINCHED**

***‘What time did you start work today....?’***