


Remodel or Replacement Installation

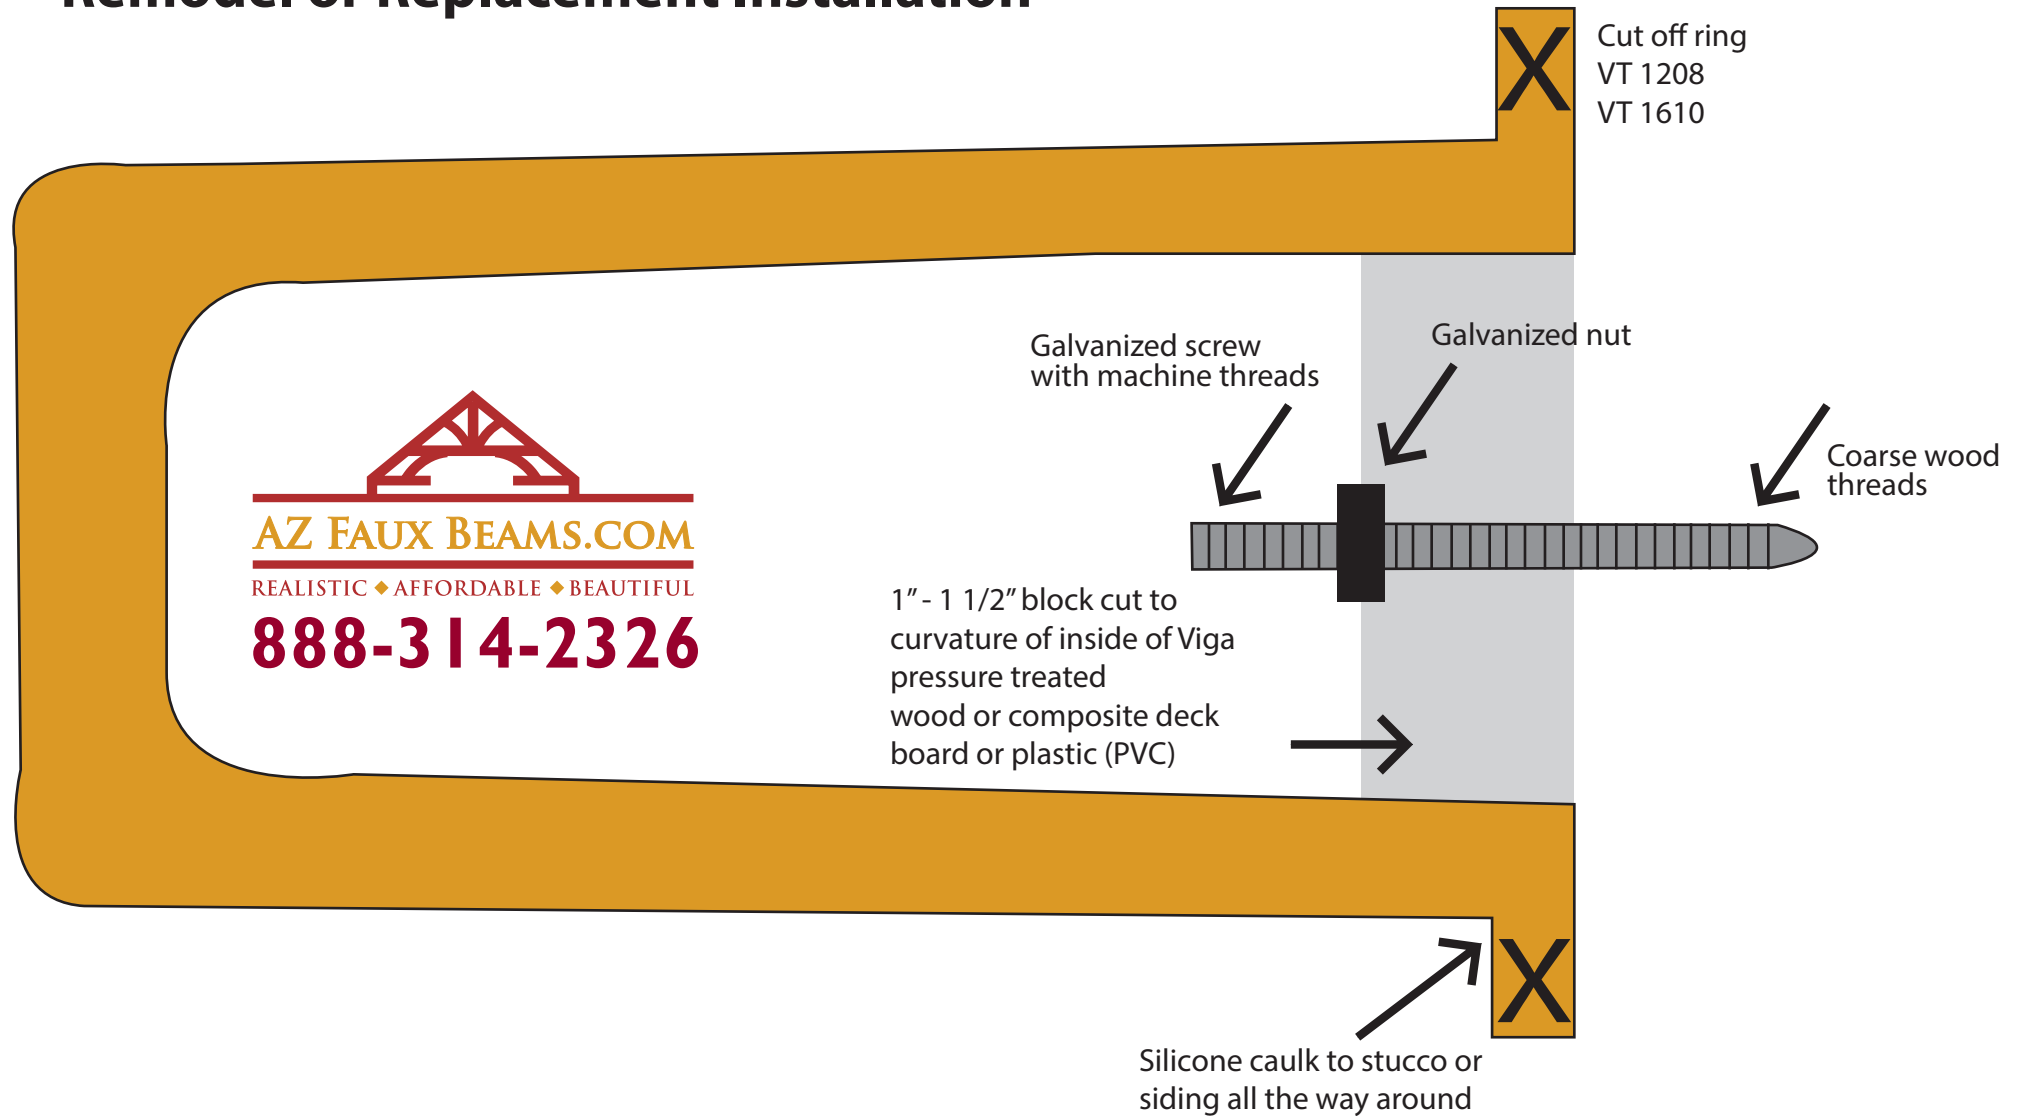

The first step is to install a threaded rod (3/8" – 1/2" thick) with a lag screw end. The threaded rod should be out of the wall more than the thickness of your block and should be secured into the substrate. Then cut a block (composite or wood) to the contour of the inside of the viga and drill an appropriate size hole in the middle of the block (to fit the threaded rod end). Then slide the block over the rod and secure with the proper size washer & nut. Then slide the viga over the block, securing it with non-corrosive wood deck screws and caulk with a paintable silicone caulk. **If there are any questions please call Customer Service at 888-314-2326.**