

# QUICK START GUIDE




FOR VIDEO TUTORIAL VISIT: [BRAKEFREETECH.COM/INSTALL](http://BRAKEFREETECH.COM/INSTALL)

**Disclaimer:** Follow all of the installation steps outlined in this guide for best results.

Brake Free is a helmet accessory intended to enhance the user's visibility. It is not intended to replace the required illumination and/or braking indication equipment required for road use of your motorcycle.

TEST FIT ON HELMET MAKING SURE MOUNT IS FLAT AGAINST HELMET FOR MAXIMUM ADHESION

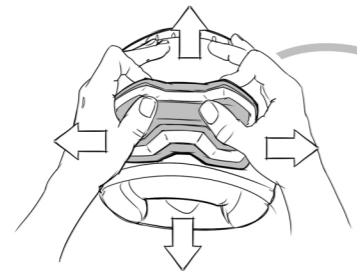

WIPE DOWN BACK OF HELMET WITH ALCOHOL SWAB SUPPLIED



REMOVE ADHESIVE BACKING



PUSH IN - SLIDE DOWN - CLICK



CHARGE INDICATOR LIGHTS


WAIT BEFORE RIDING SEE BELOW!\*



ON - QUICK PRESS

MODE - QUICK PRESS

OFF - HOLD 2 SEC.

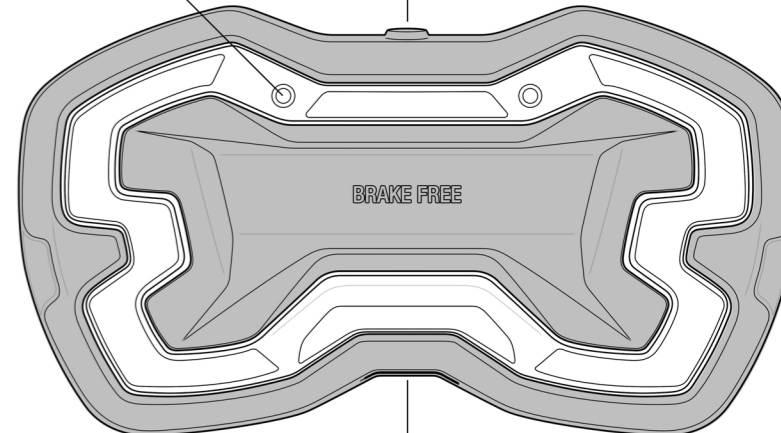

PEEL BACK FLAP FOR MICRO USB CHARGE PORT

HELMET CURVATURES VARY TOP TO BOTTOM

FIND MAXIMUM CONTACT PATCH FOR MOUNT BY MOVING UP AND DOWN

TAPE FITMENT GUIDE ONTO HELMET

STICK AND PRESS FOR 60 SECONDS

\*After application, the bond strength will increase as the adhesive flows onto the surface. At room temperature, approximately 50% of the ultimate strength will be achieved after 20 minutes, 90% after 24 hours and 100% after 72 hours.

\*RECOMMENDED: AT LEAST 2 HOURS

\*\*\*FOR FULL DETAILS SEE USER MANUAL ONLINE - [BRAKEFREETECH.COM/MANUAL](http://BRAKEFREETECH.COM/MANUAL)\*\*\*

FOR VIDEO TUTORIAL VISIT: [BRAKEFREETECH.COM/INSTALL](http://BRAKEFREETECH.COM/INSTALL)