
INSTALLATION INSTRUCTIONS

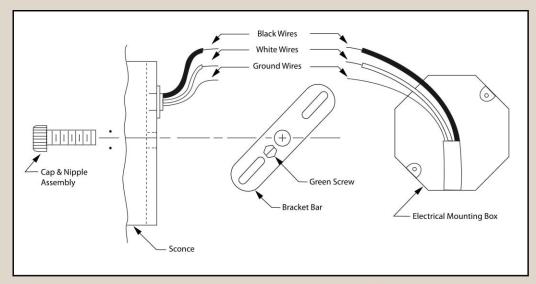

WARNING:
RISK OF FIRE OR
ELECTRICAL SHOCK.
MUST BE INSTALLED
BY A QUALIFIED
ELECTRICIAN.

STEP: 1- Insure the electrical mounting box power is OFF.

- 2- Secure the two ground wires (sconce and supply) onto the bracket bar using the green screw.
- 3- Secure the two white wires (sconce and supply) together using a wire nut.
- 4- Secure the two black wires (sconce and supply) together using a wire nut.
- **5** Attach bracket bar to the electrical mounting box. Carefully push excess wire into the electrical mounting box.
- **6** Secure the sconce to the wall by putting the cap and nipple assembly inside the sconce and through the hole in the back. Screw the cap and nipple assembly into the center hole of the bracket bar snugly. (Caution: Do not over tighten. Damage to the sconce may occur.)

WARNING: FOR WET LOCATIONS OR OUTDOOR USE, CLOSED TOP MODELS MUST BE INSTALLED FOR DOWN LIGHT ONLY. APPLY A CONTINUOUS BEAD OF SILICONE CAULK AROUND THE OUTSIDE PERIMETER OF THE SCONCE TO SEAL IT AGAINST THE WALL IT IS BEING MOUNTED UPON.