

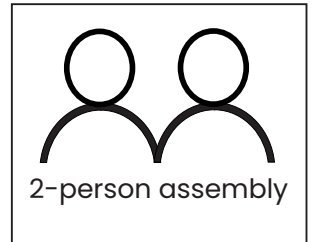
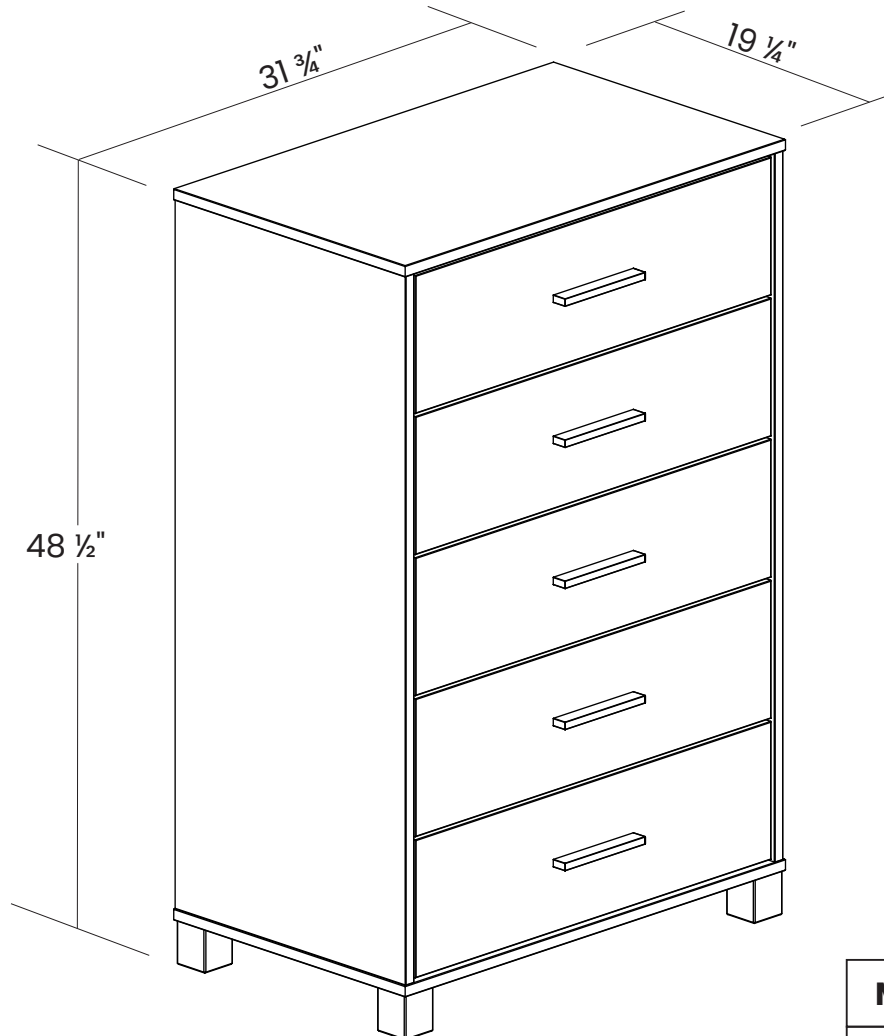



Assembly Instructions

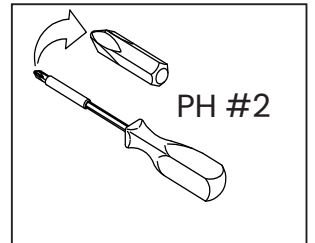

2-person assembly

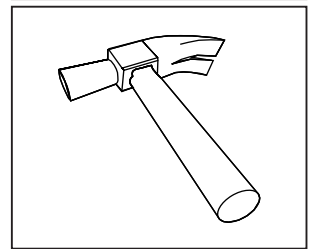

PH #2

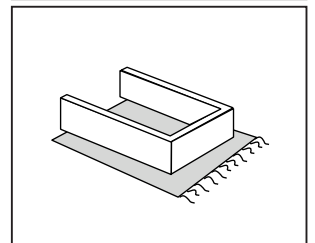

Model #	Finish
CLFS0703	Brushed White
CLFS0740	Brushed Grey
CLFS0768	Weathered Pine
CLFS0789	Acacia

Thank you for choosing Grain Wood Furniture, it is an honor to be in your home! If you have any questions, feedback, or need replacement parts please contact us at: grainwoodfurniture.com/help or support@grainwoodfurniture.com

Loft
5-Drawer Chest

GrainWood
FURNITURE.COM

PLEASE READ BELOW BEFORE BEGINNING ASSEMBLY






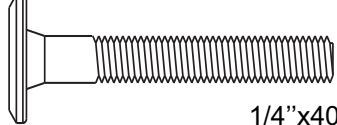


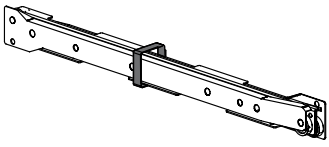






- Enlist help from a friend or family member as most items require two people for proper assembly.
- Choose a spacious, open area near where the piece will be located once assembled. It is easier to move parts than to relocate the furniture after it is fully assembled.
- Do not throw away packaging material until assembly is complete.
- Assemble the item on a soft surface, such as cardboard or an old blanket in order to protect the finish from possible dents or scratches.
- Lay out the parts in order and count them twice. In case any parts are missing or damaged, document the problem with pictures and contact support so we can make it right.
- Solid wood furniture may present imperfections such as wood knots, minor splits or cracks which are a natural aspect of the material. Whenever stability of the furniture is not compromised, we recommend customers perform cosmetic touch-ups with wax crayon fillers sold at all major hardware stores.
- It is best to use the tools provided in the box, such as a hex key, because they may be specially sized for the piece of furniture.
- We do not recommend the use of power drills as they can damage your furniture if not used correctly.
- Use a carpenter's square or hardcover book to check angles when assembling drawers and doors. If they are not at 90 degrees, they will not close properly.
- If you have any problems, we are here to help. Just go to grainwoodfurniture.com/help.
- See grainwoodfurniture.com/care-guide for suggestions that will help your furniture last for years.






grainwoodfurniture.com/assembly-troubleshooting

Enjoy your 100% solid wood furniture!

HARDWARE LIST

A1	 4,0x30	50 + 3
A4	 3,5x14	14 + 1
A9	 3,5x16	21 + 2
A25	 M4x25	10 + 1
A40	 4,0x45	8 + 1
B25	 1/4"x40	4
B31	 6,0x10	40 + 2
C1	 8,0x30	56 + 3
E21	 385mm - 15 1/4"	5
E22		5
E24		5
	 286,7mm - 11 1/4"	
G1	 10x10	28
G8		1
G18	 40x40	4
H17		5
I2	 982mm - 38 3/4"	01

ANTI-TIPPING RESTRAINT KIT		
A47	 3,0x20	2 + 1
F8		2
F15	 250 - 9 3/4"	1

ATTENTION



Before starting assembly please verify the hardware set is complete.

For missing hardware please contact us at grainwoodfurniture.com/help

WARNING:

CHOKING HAZARD







Small parts, not for children.
To be assembled by an adult.

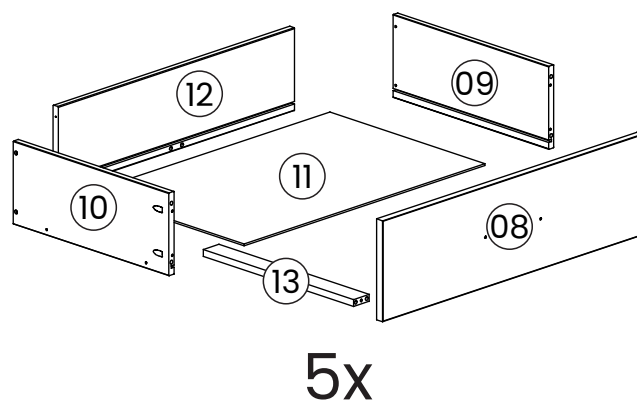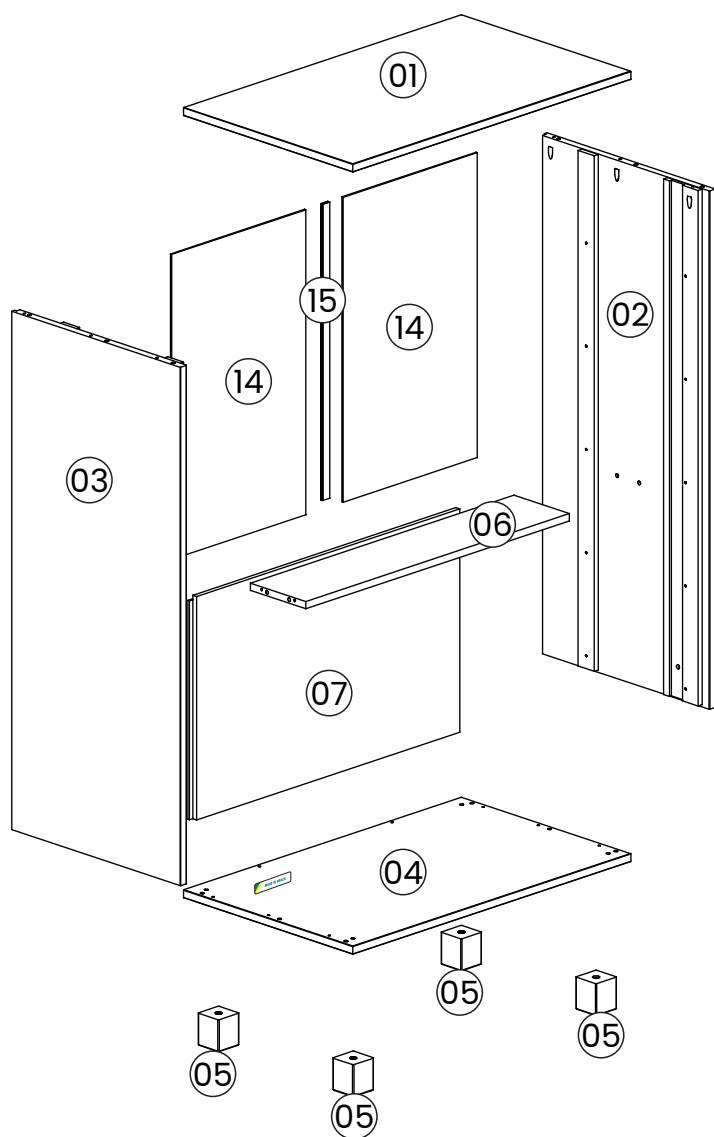


BOX A - 1 of 2		
Part #	Description	Qty.
02	Right side	1
03	Left side	1
09	Drawer right side	5
10	Drawer Left side	5
12	Drawer back	5
14	Back panel	2
15	Profile "H"	1
HW	Hardware	1




BOX B - 2 of 2		
Part #	Description	Qty.
01	Top	1
04	Base	1
05	Foot	4
06	Stabilizing panel	1
07	Rear panel	1
08	Drawer front	5
11	Drawer bottom	5
13	Drawer bottom support	5



- 1) Tip:
Use a hammer in case dowels
are hard to install by hand.

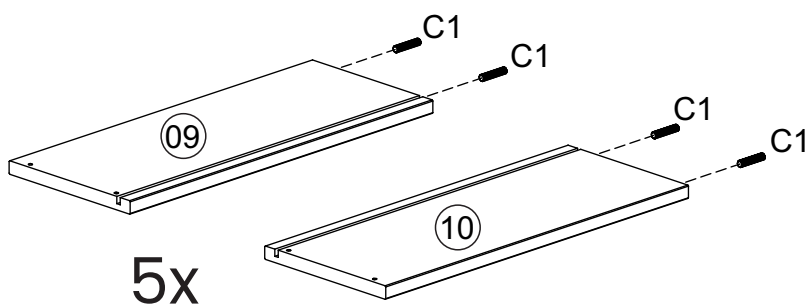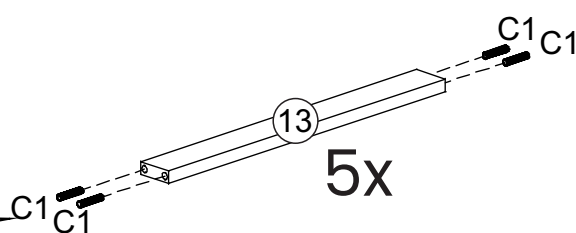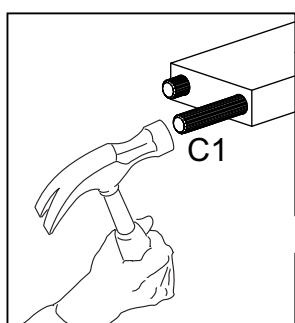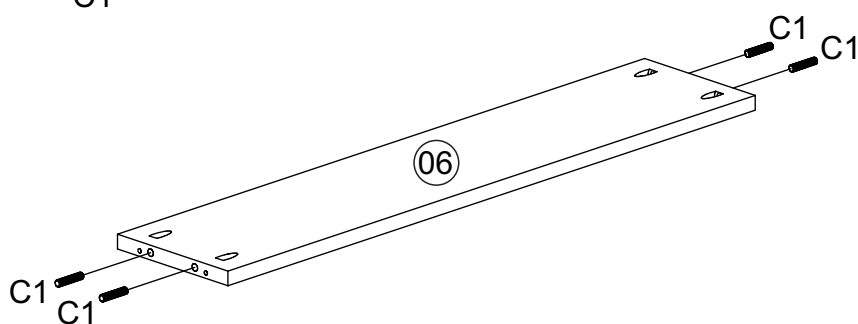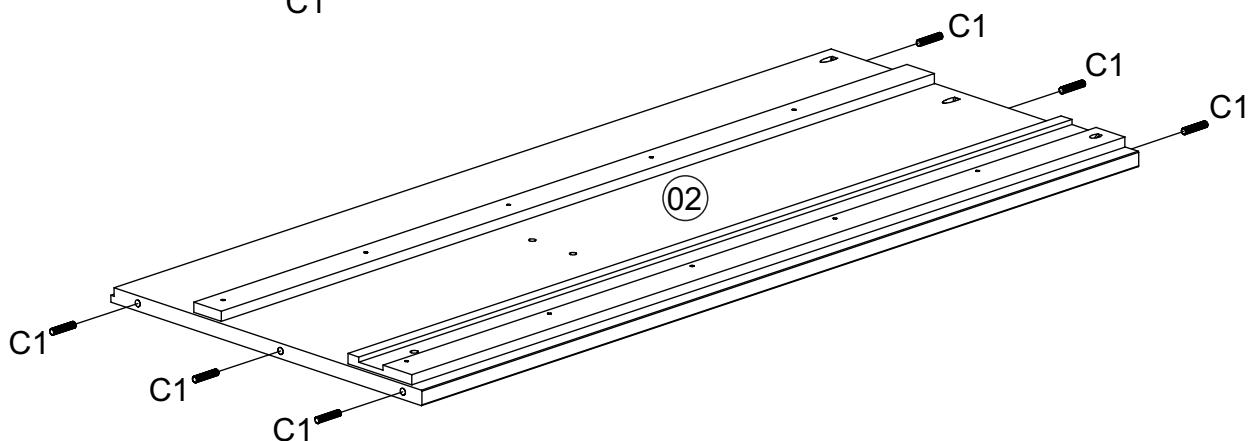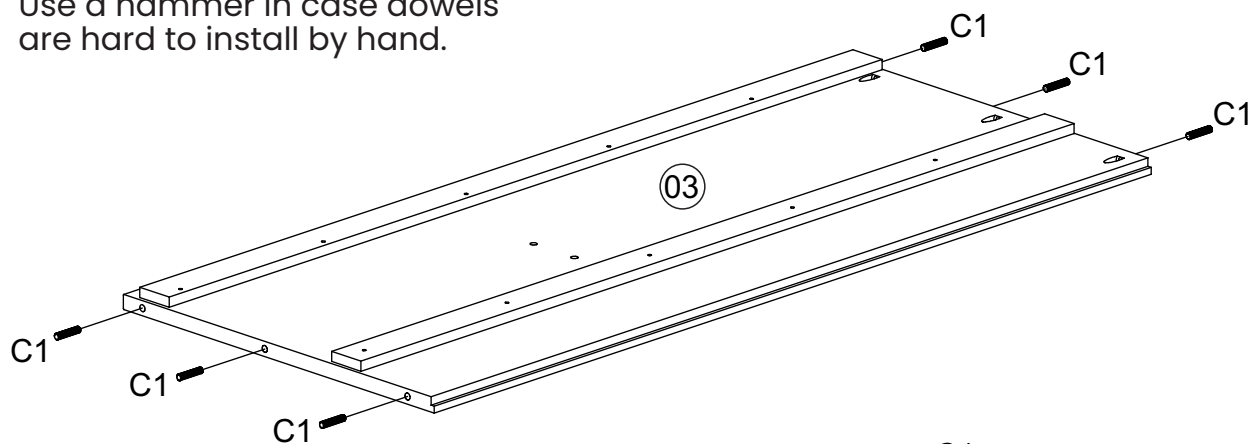

C1		56
	8,0x30	




2)

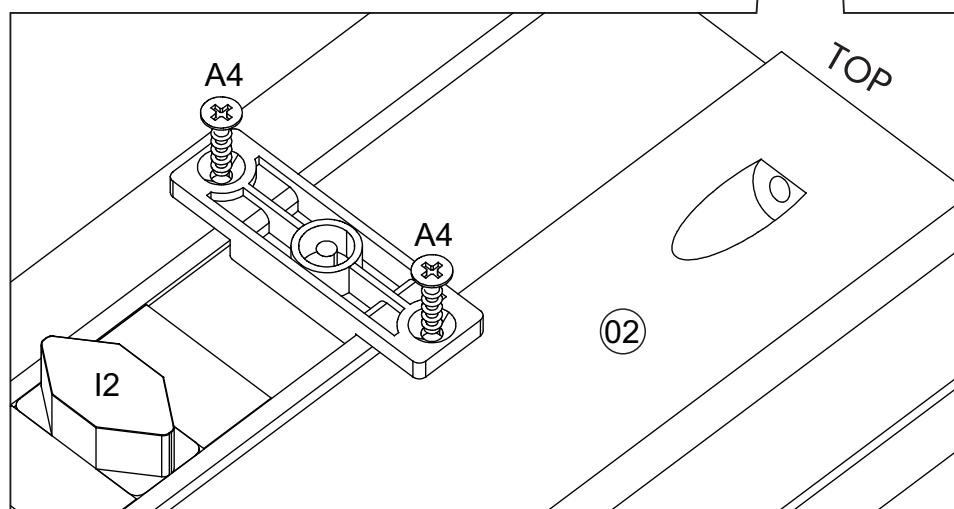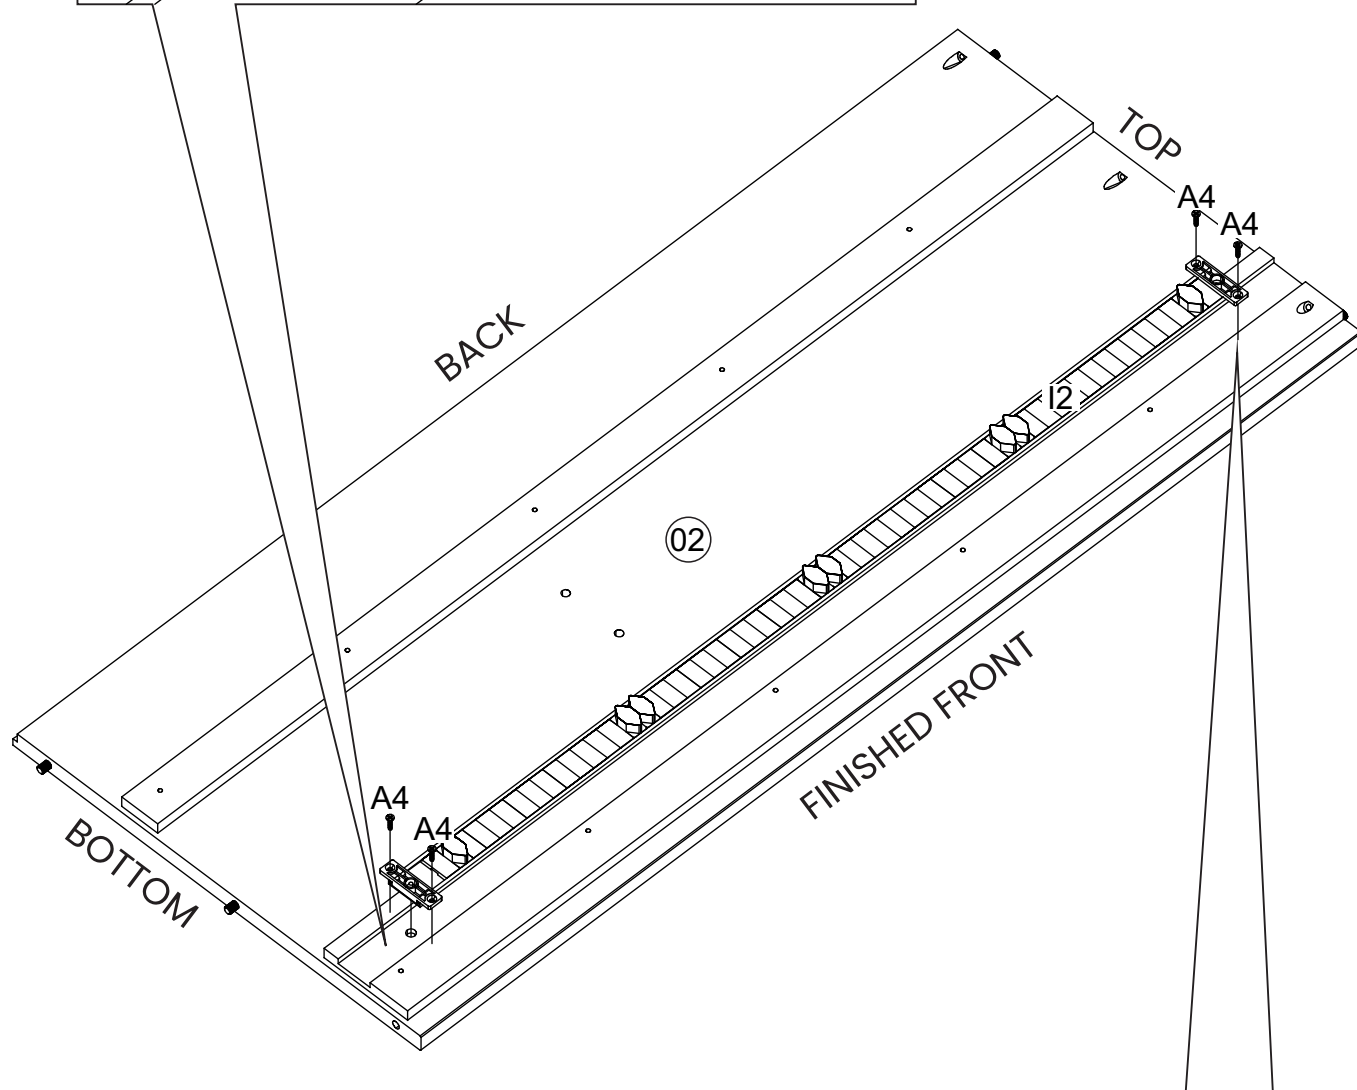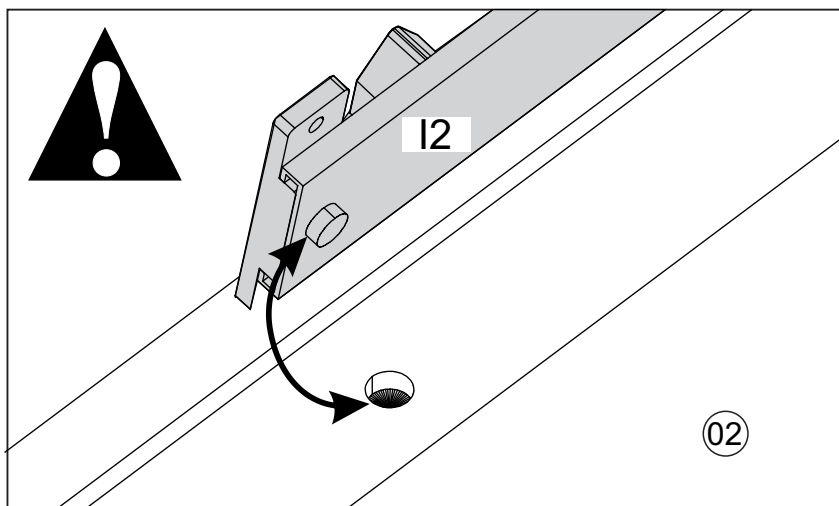



A4		4
I2		1

3,5x14

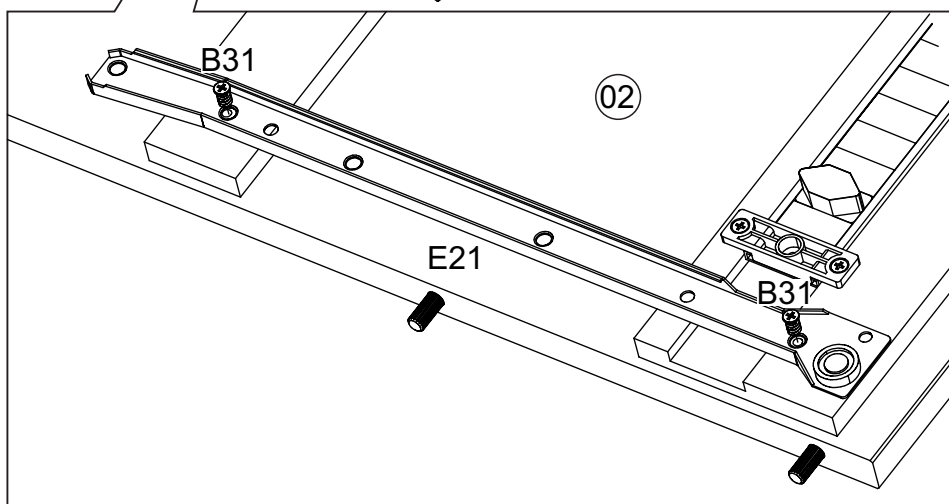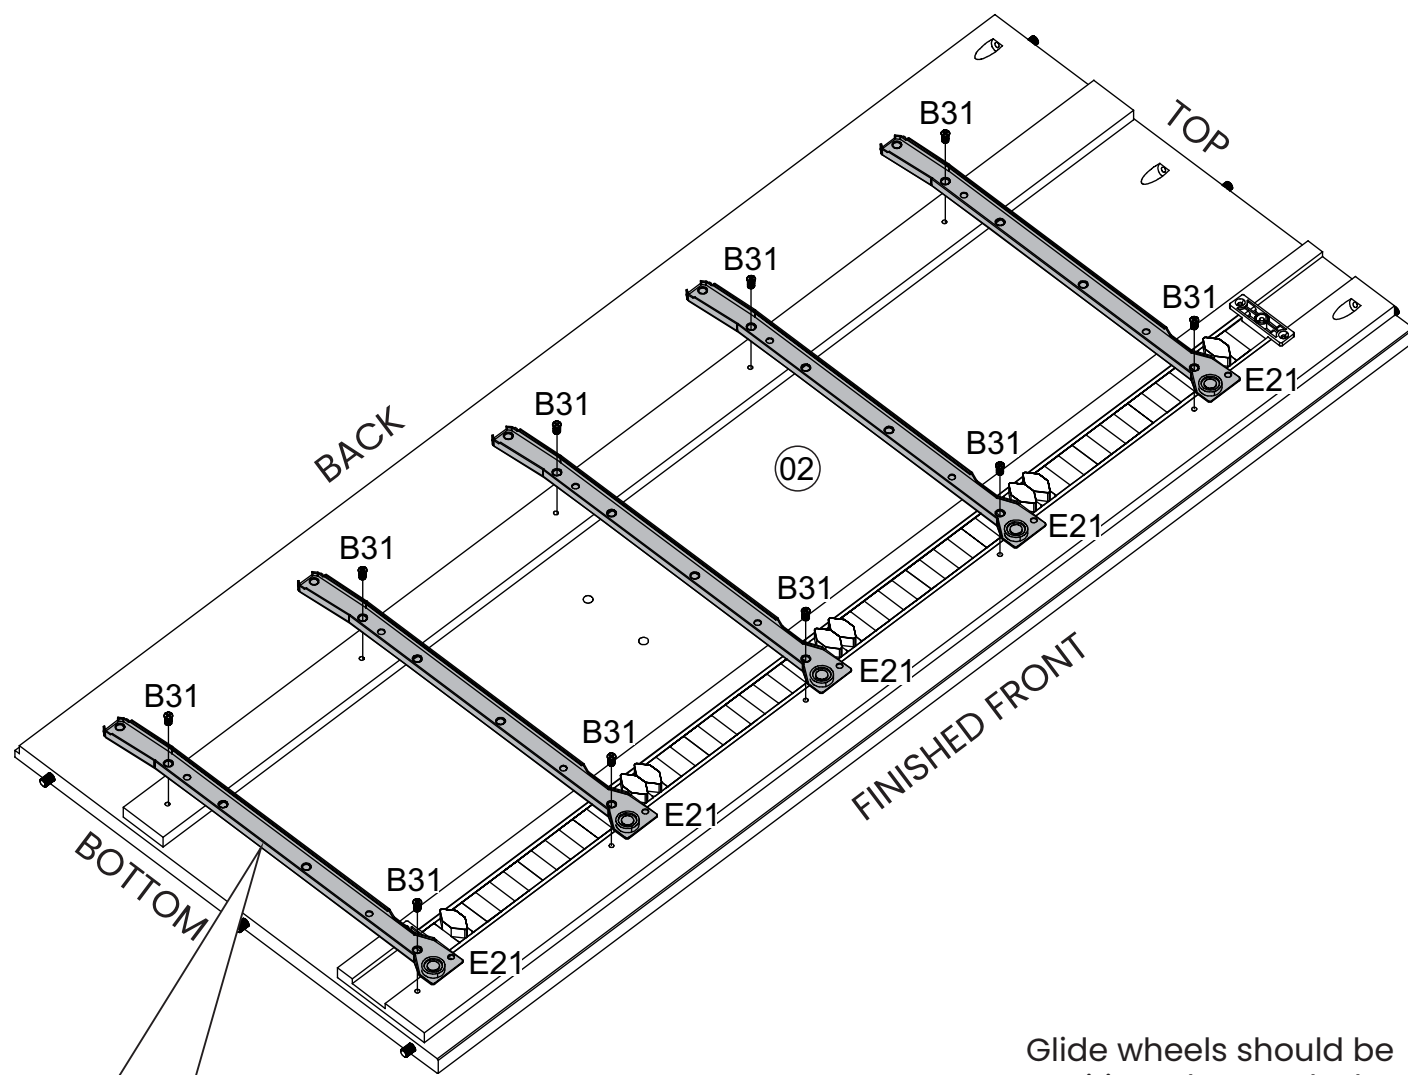
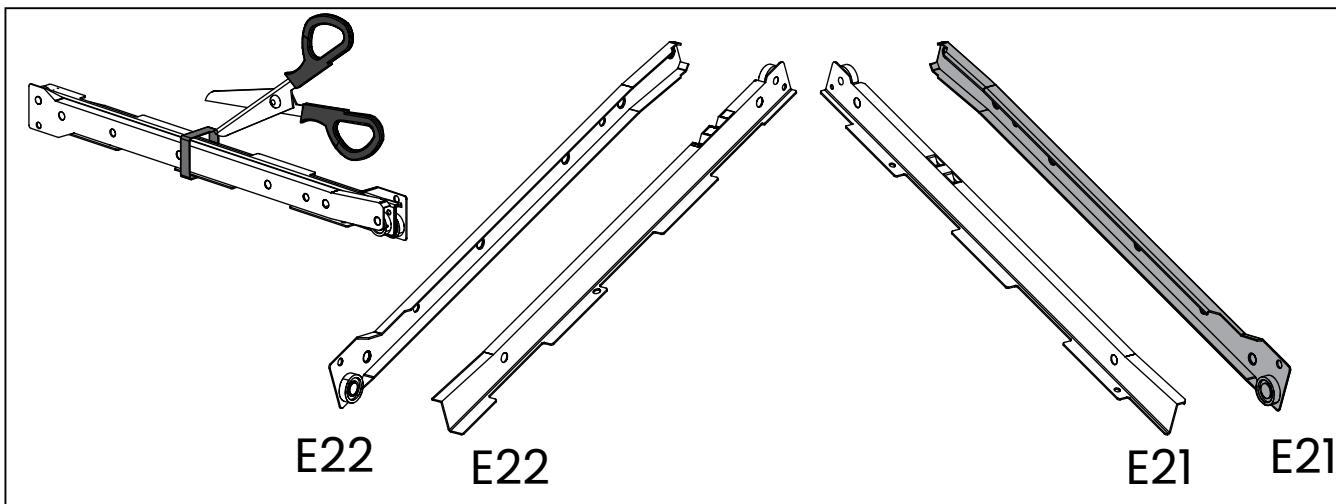
3)





Glide wheels should be positioned towards the front and bottom of the side panel.

B31	 6,0x10	10
E21	 RIGHT Side	5


4)

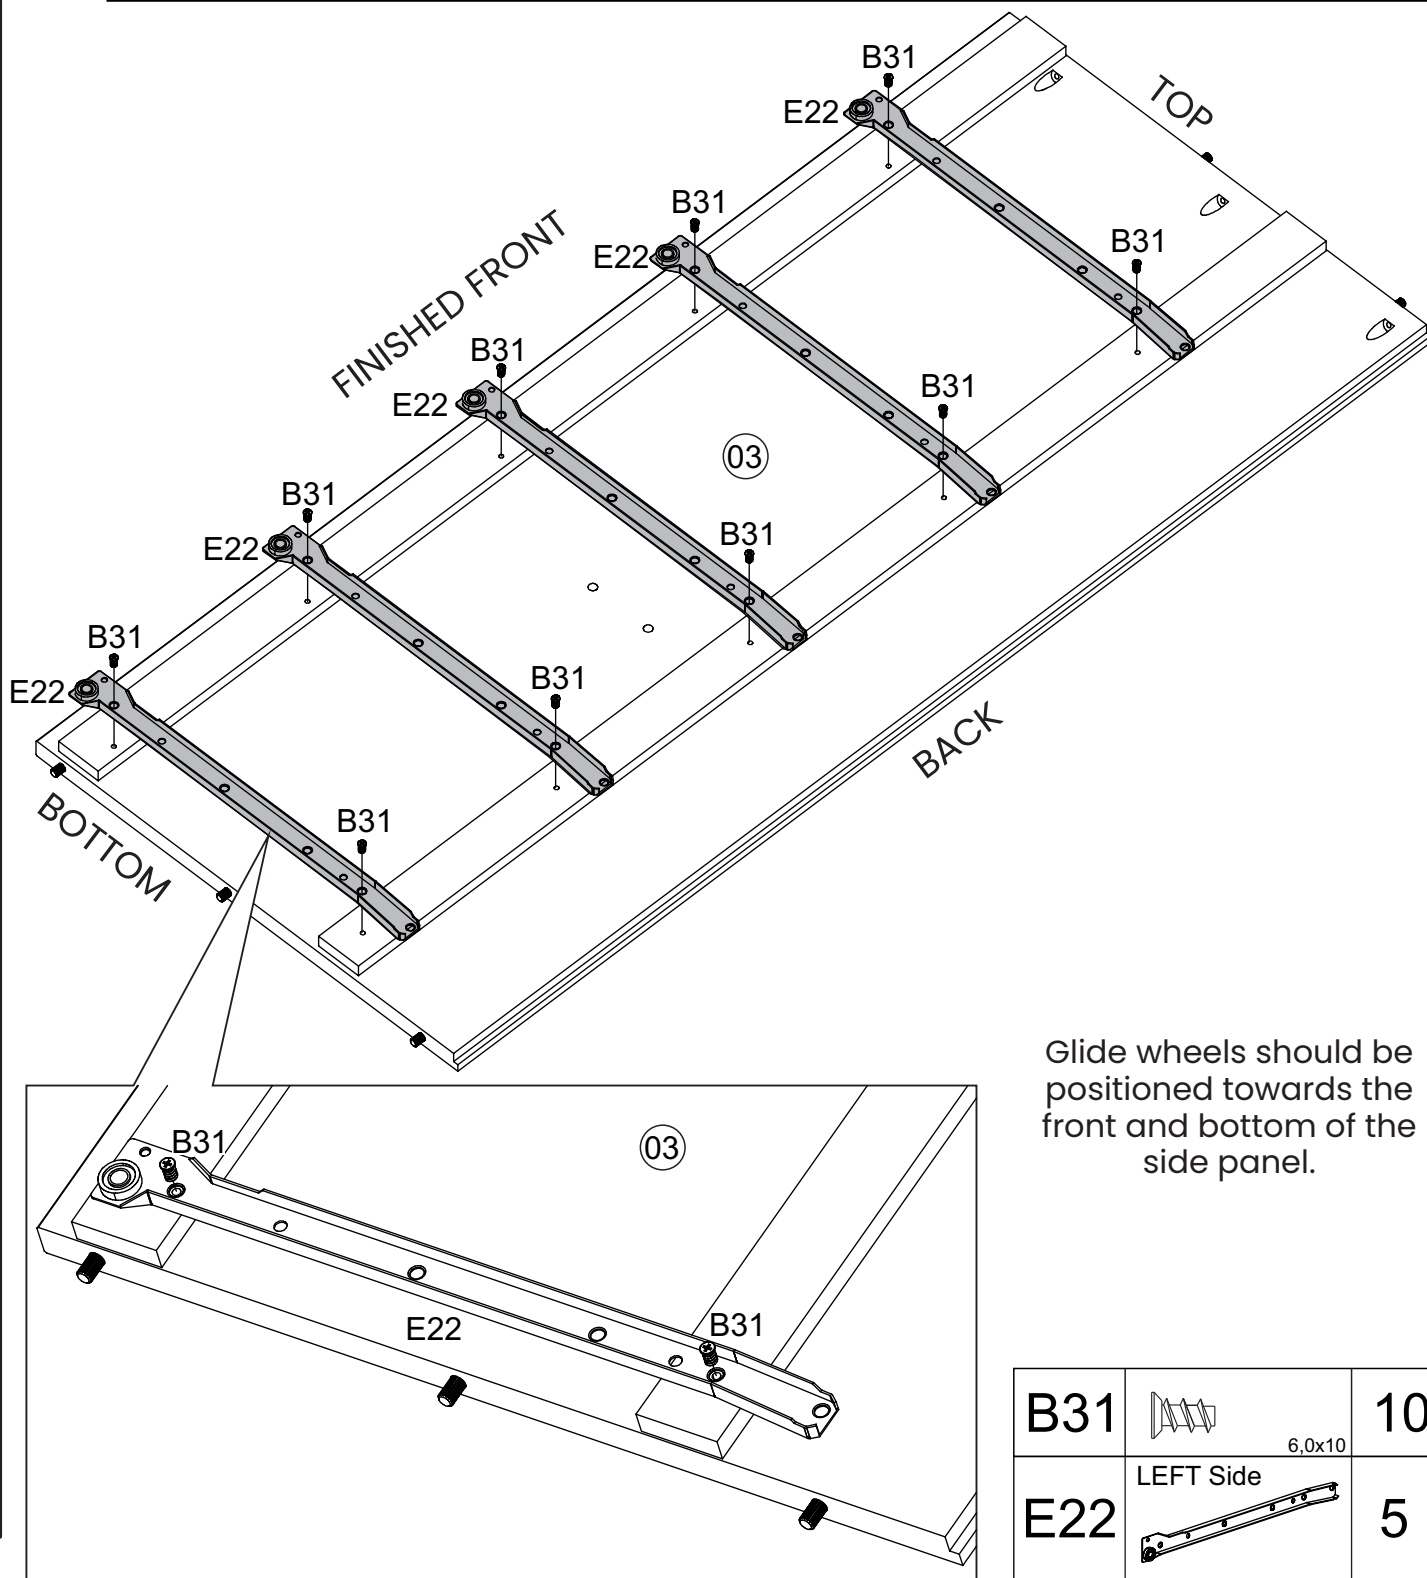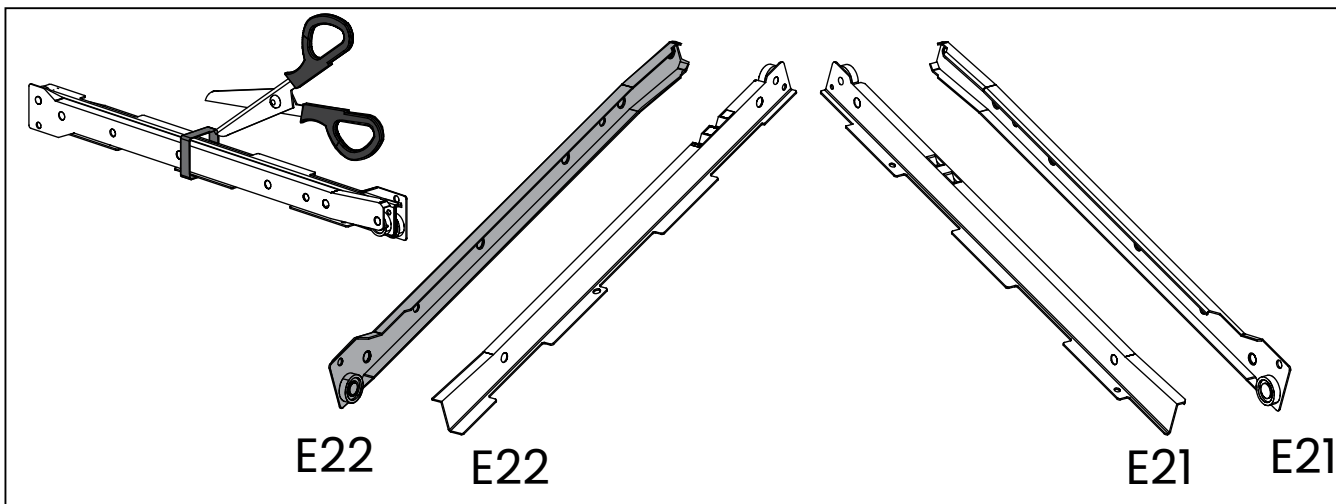


Glide wheels should be positioned towards the front and bottom of the side panel.

B31	 6,0x10	10
E22	LEFT Side 	5


5)

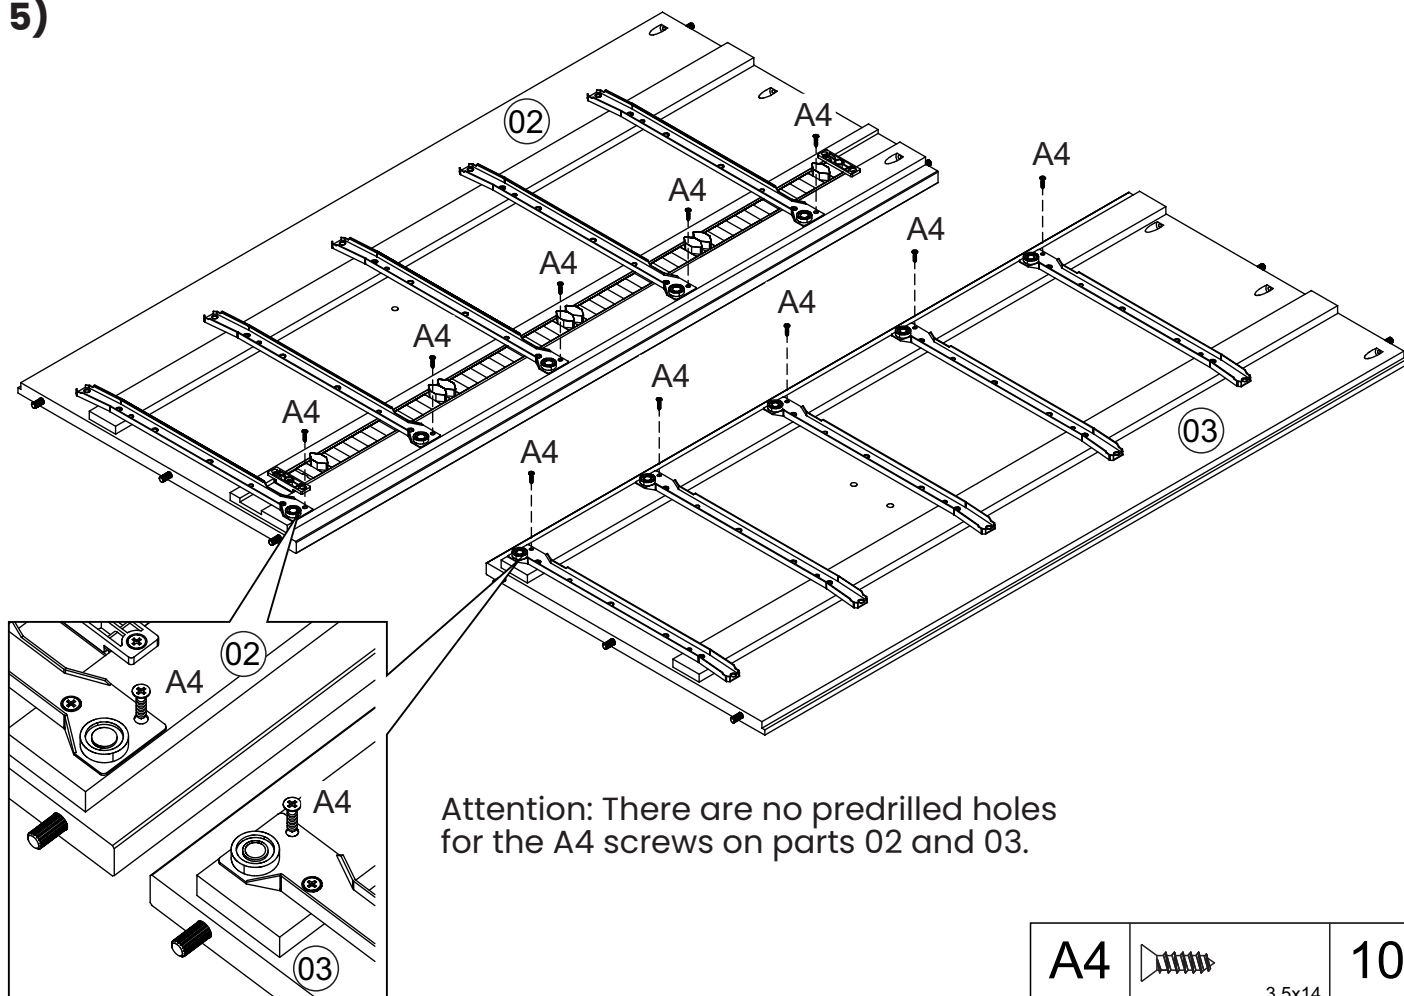


6)

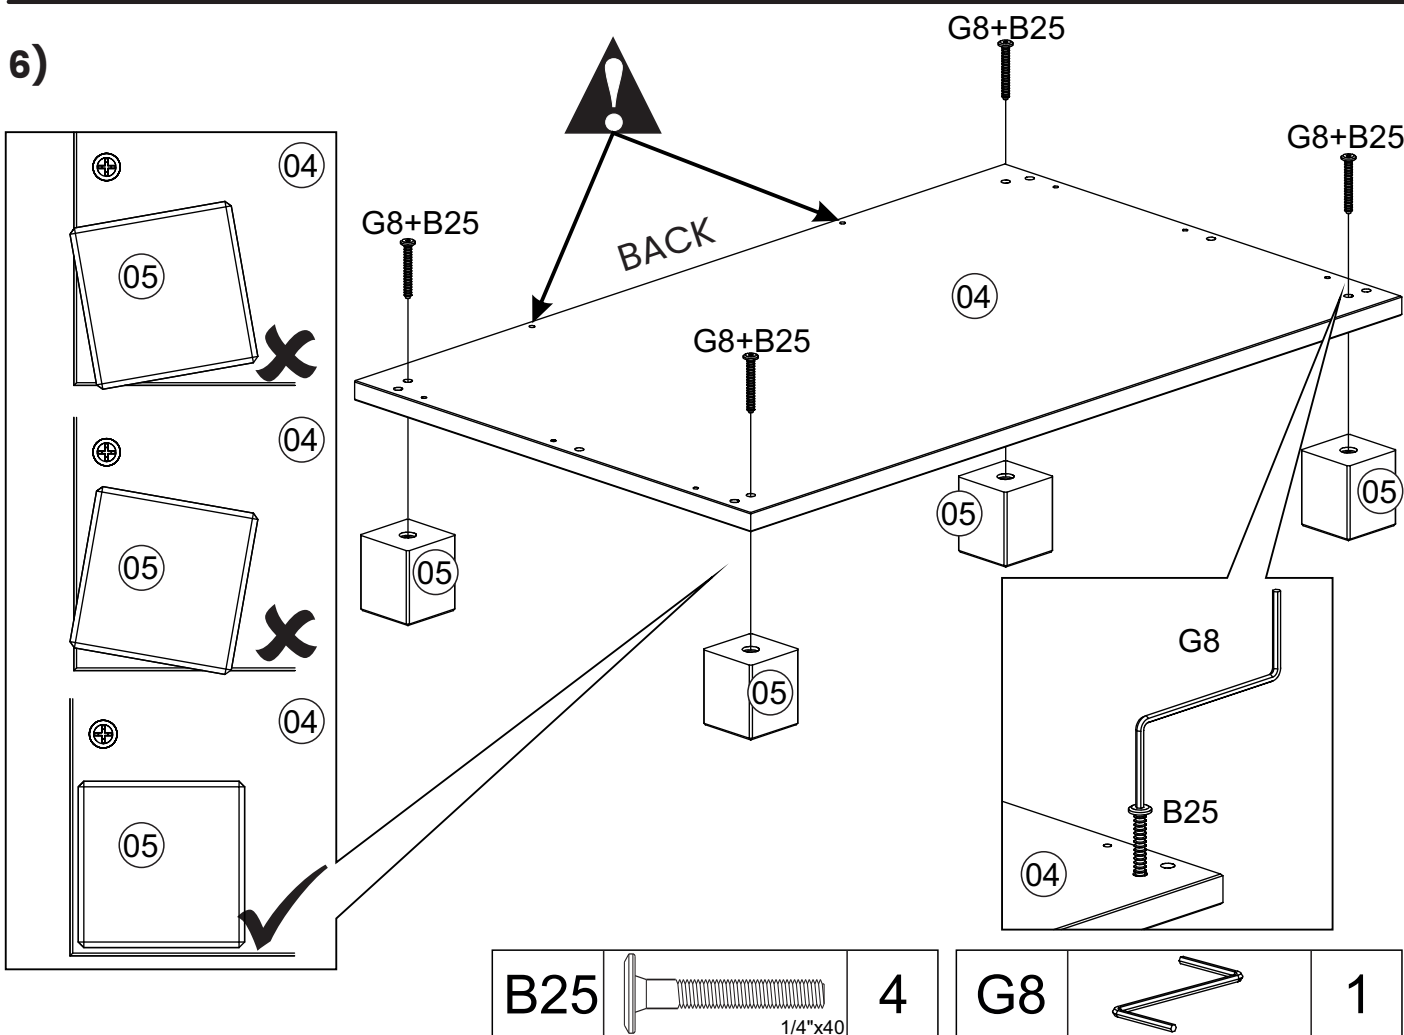

7)

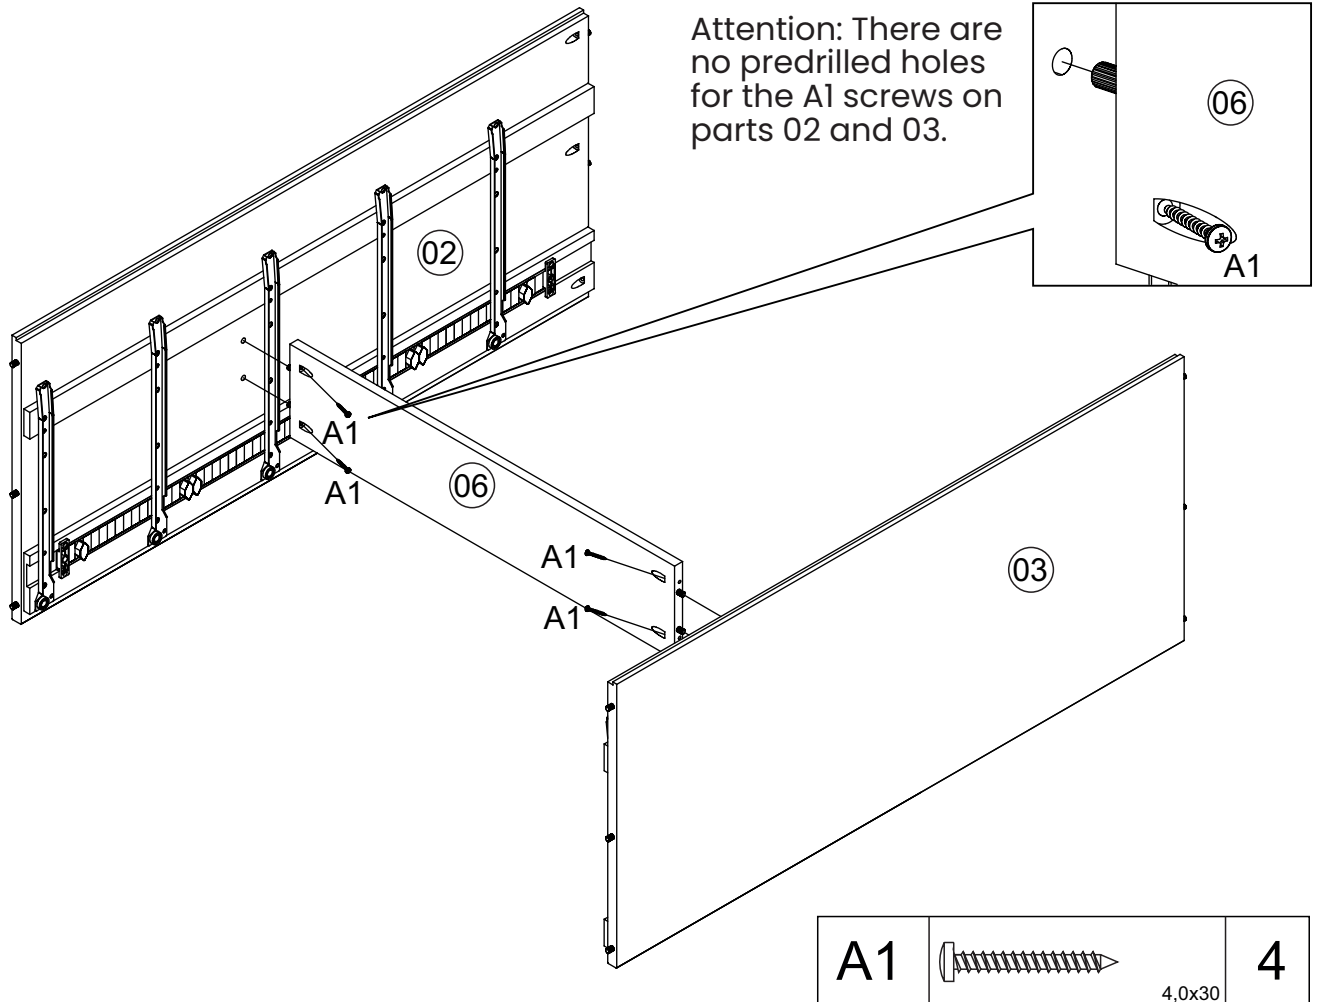


8)

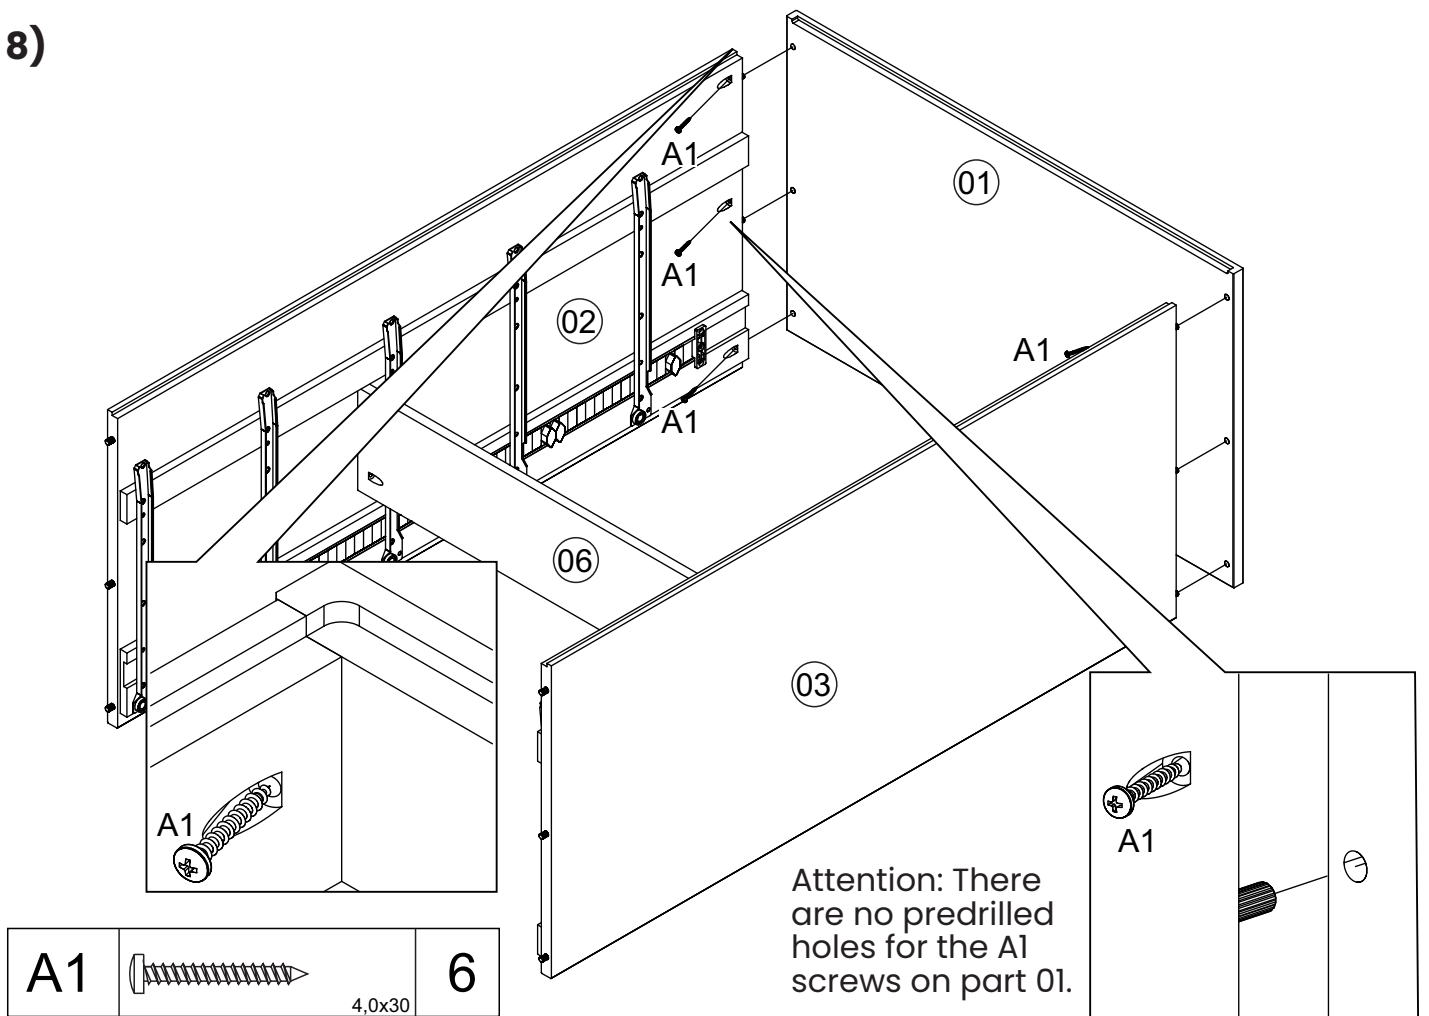



9)

BACK



Attention: There are no predrilled holes for the A40 screws on parts 02 and 03.


A40		6
4 0x45		

Make sure back panels are perfectly aligned with side panels and top and there are no gaps.


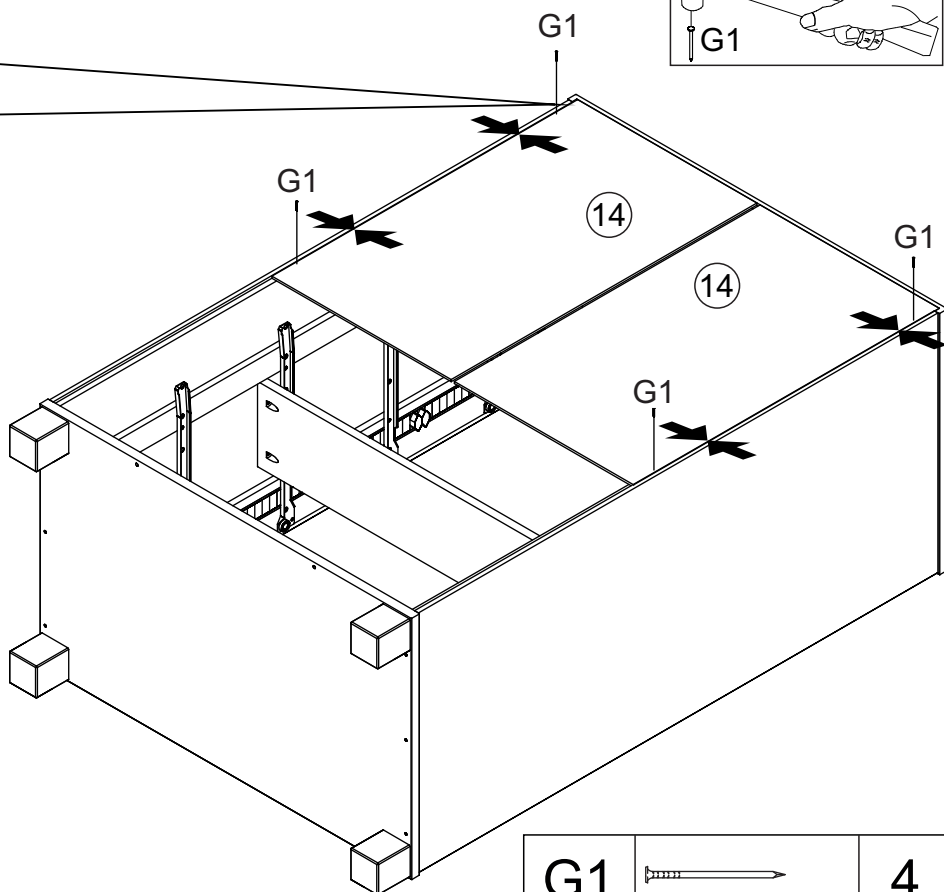
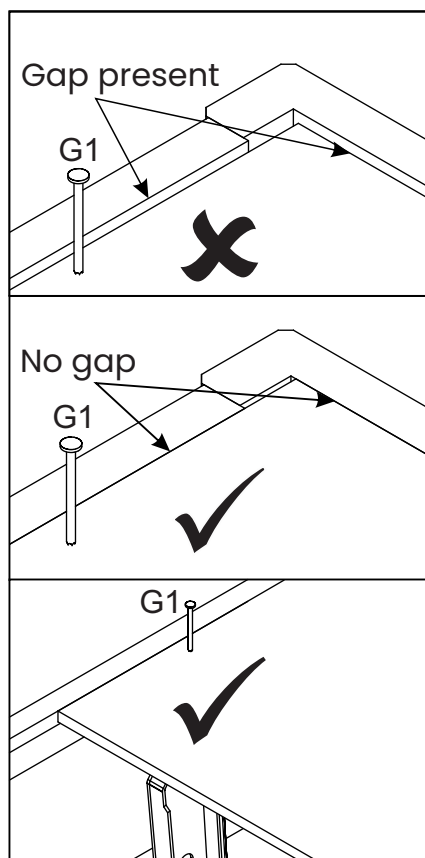



11)

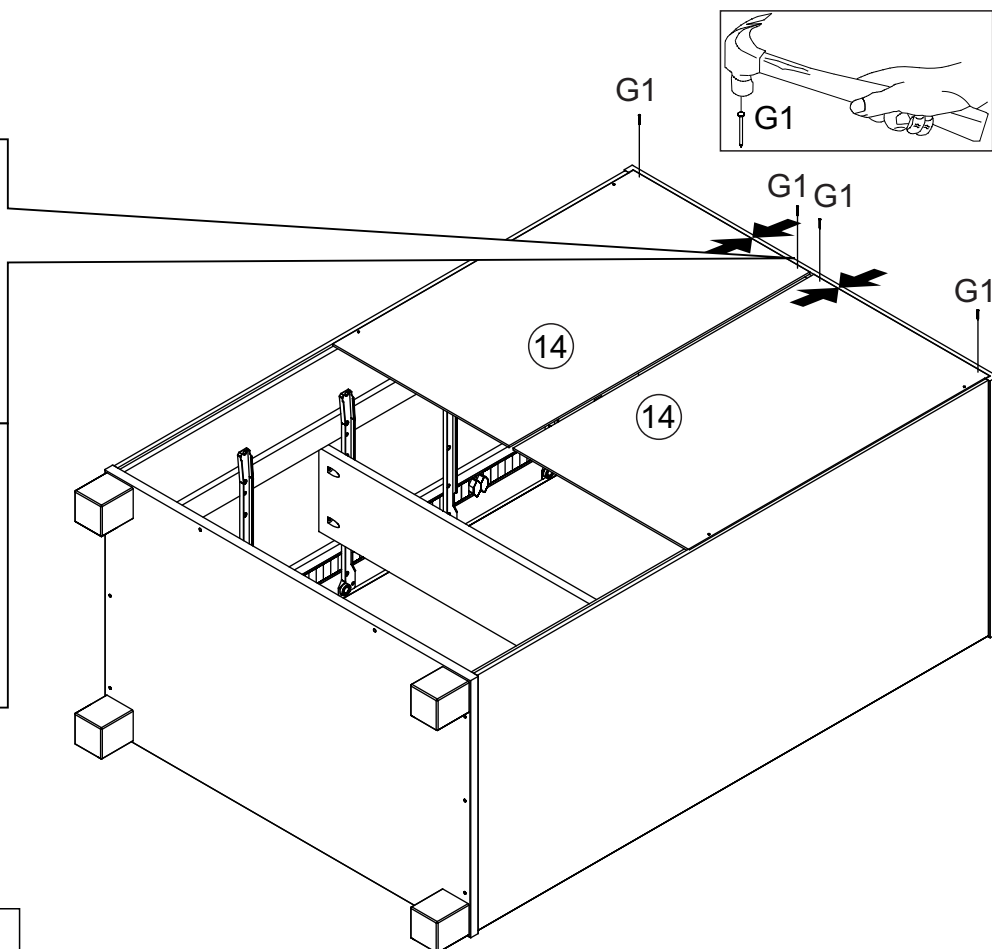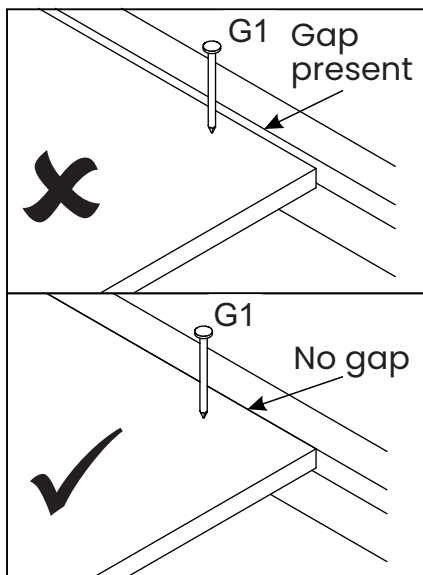


G1		4
	10x10	


12)

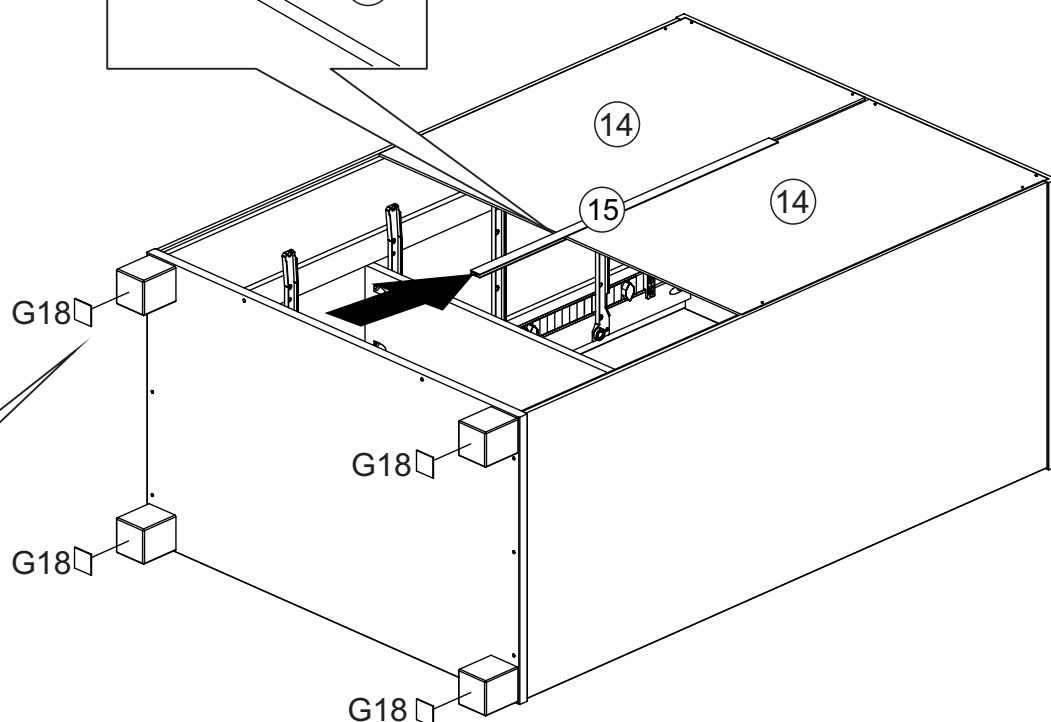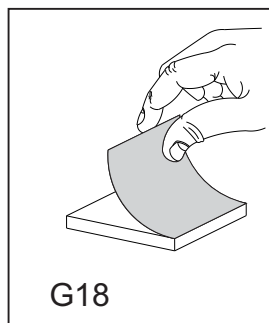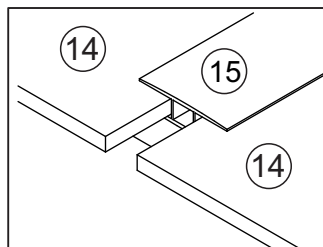




G18		4
-----	---	---

13)

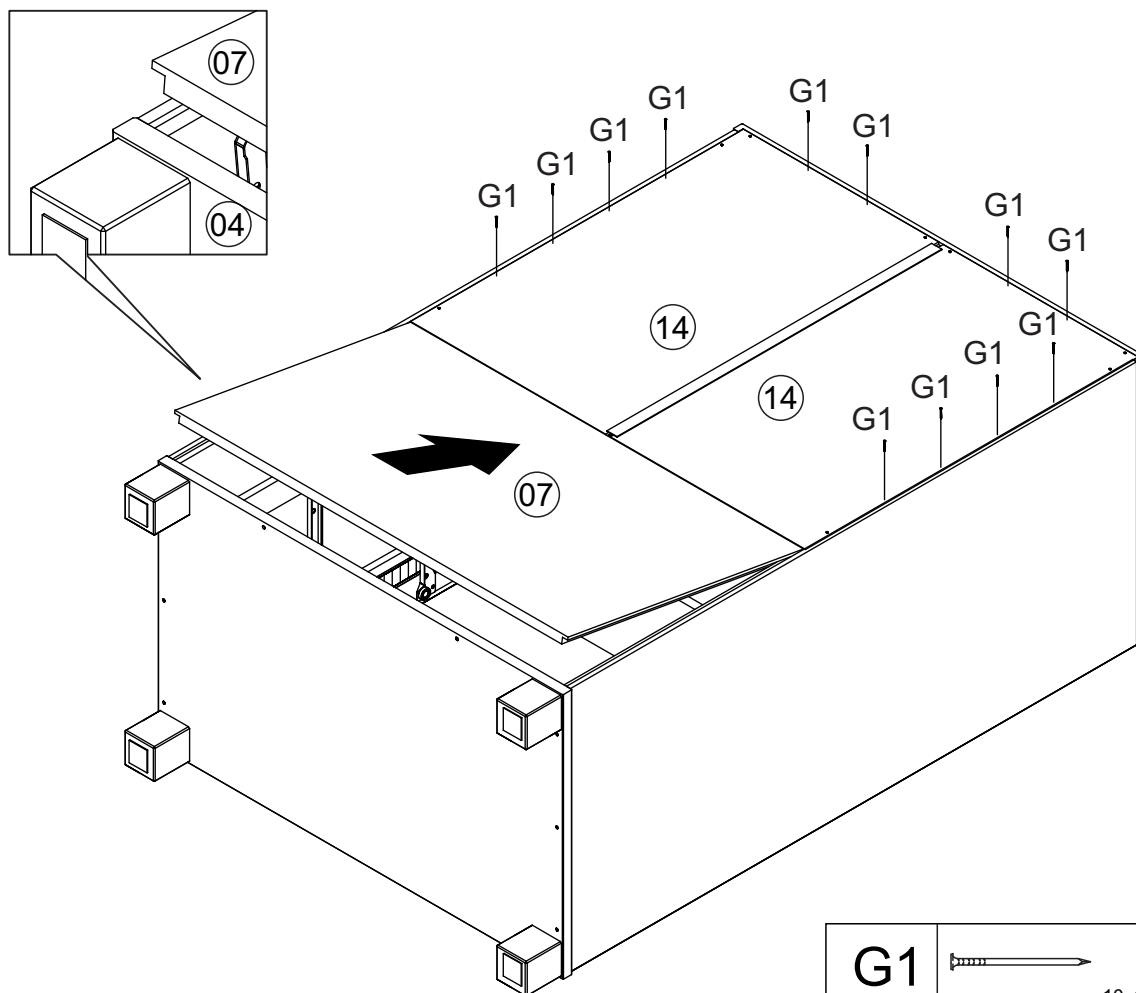



G1		12
	10x10	


14)

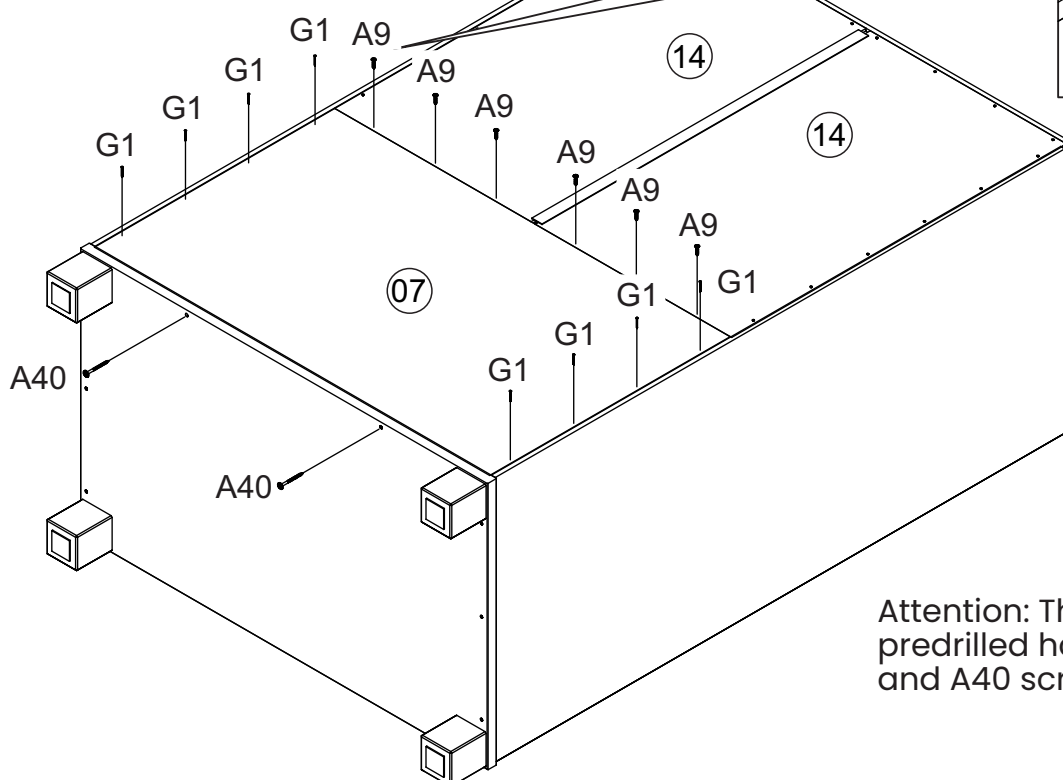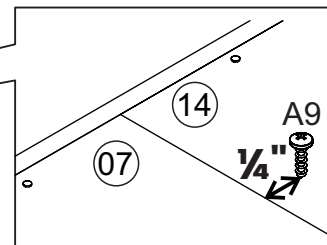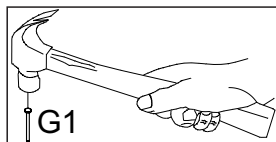

Attention: There are no predrilled holes for the A4 and A40 screws on part 07.

A9		6
	3,5x16	


A40		2
	4,0x45	


G1		8
	10x10	

15)


5x

Attention: There are no predrilled holes for the A1 screws on part 08.



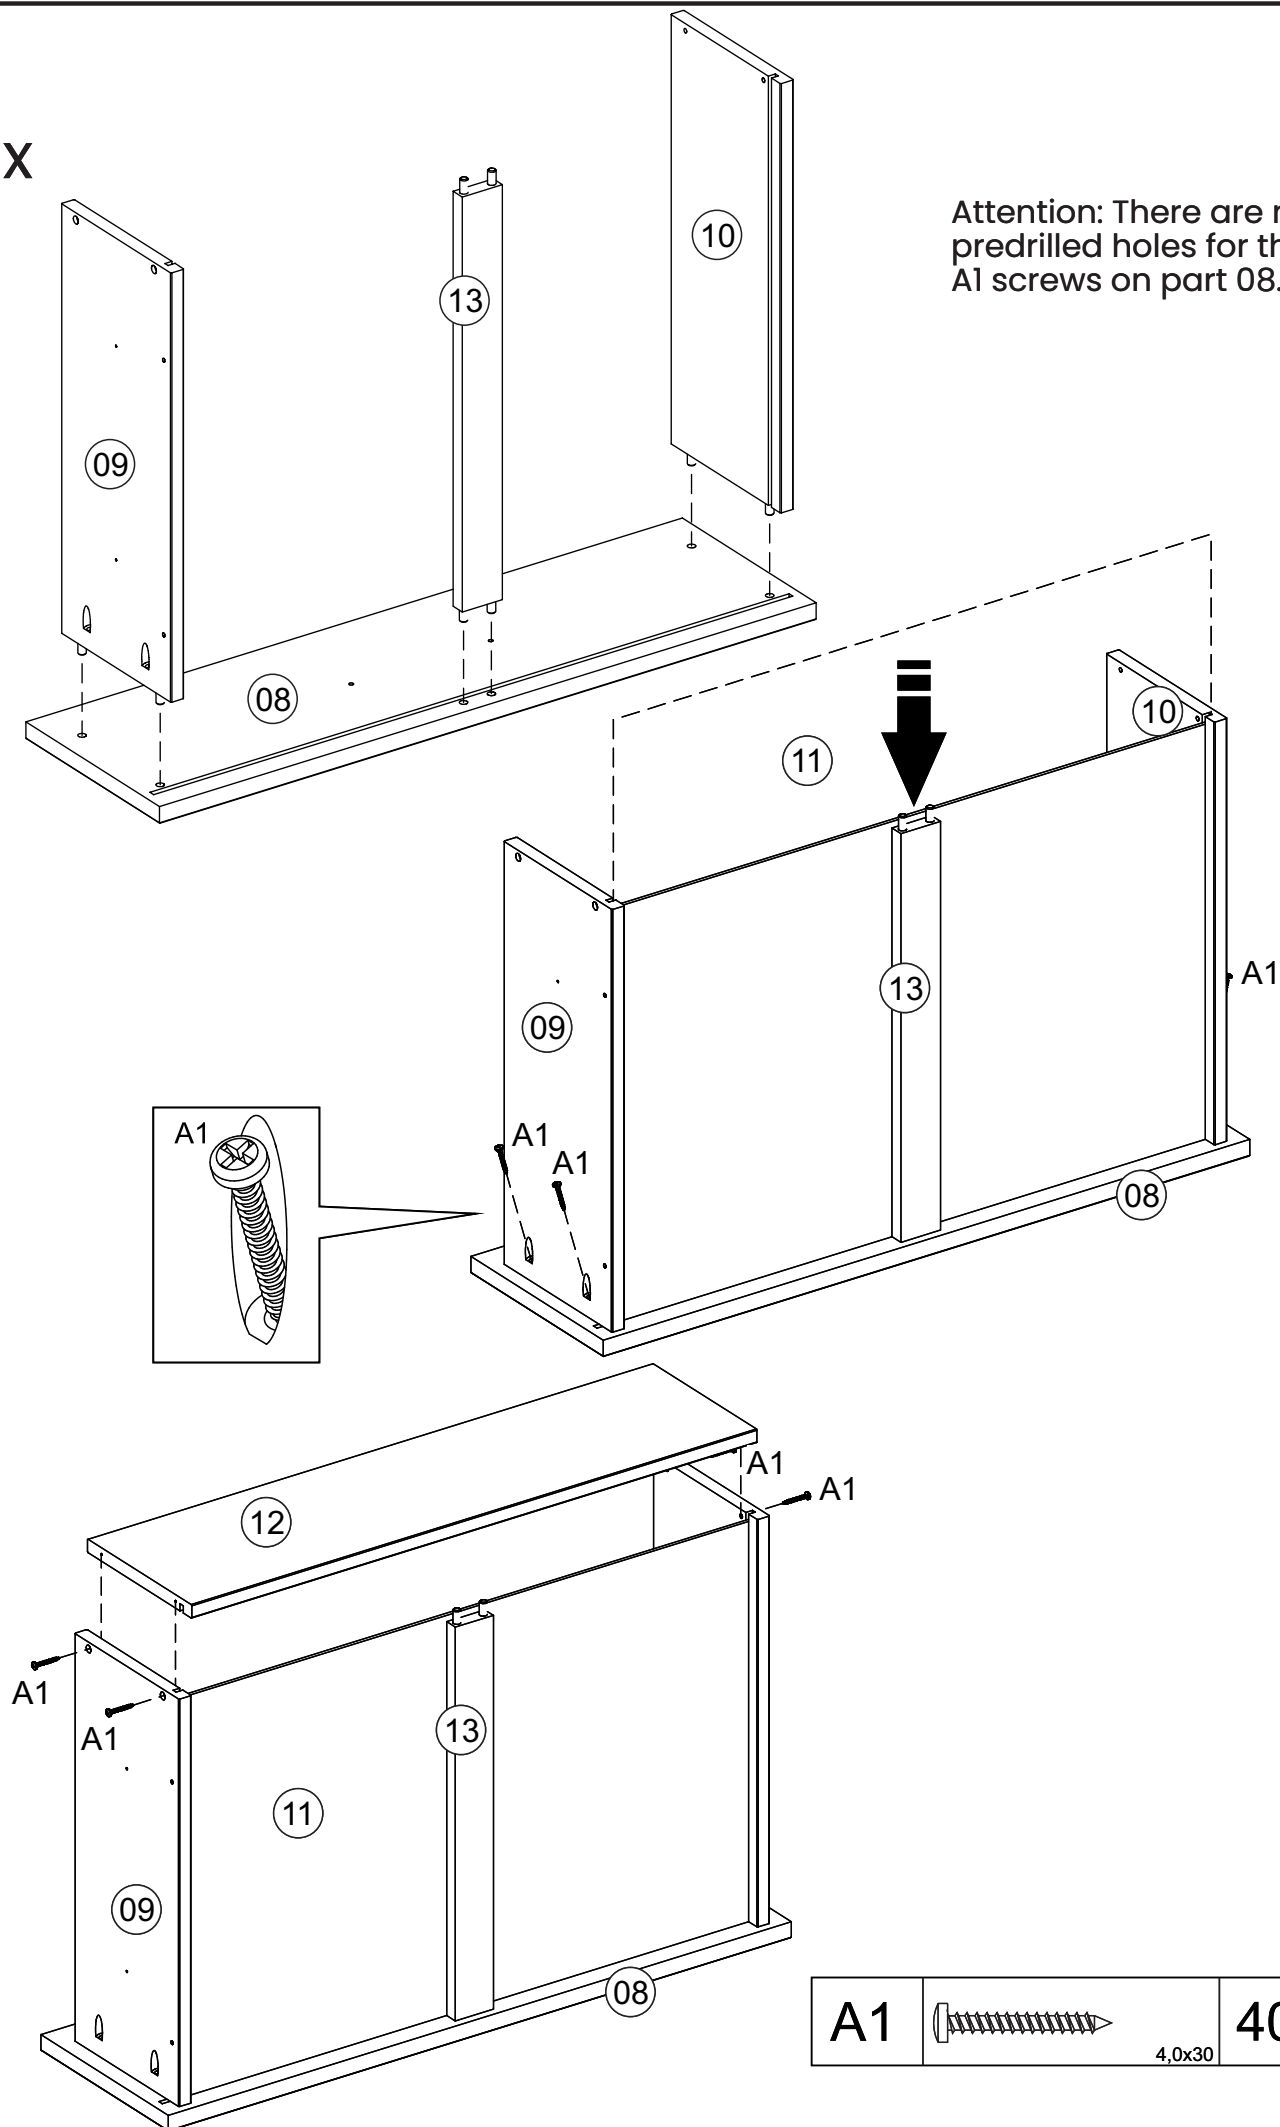



A1		40
4,0x30		

16)

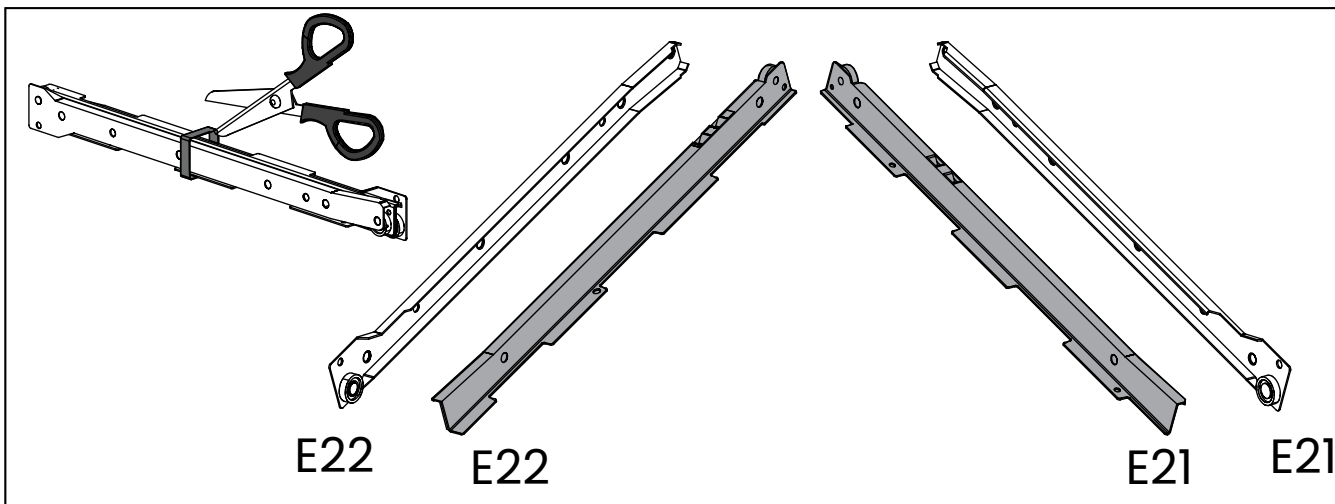

Flip the assembled drawer upside down to install glides.

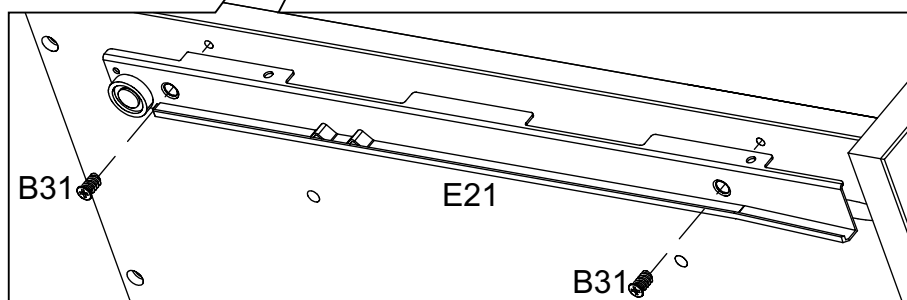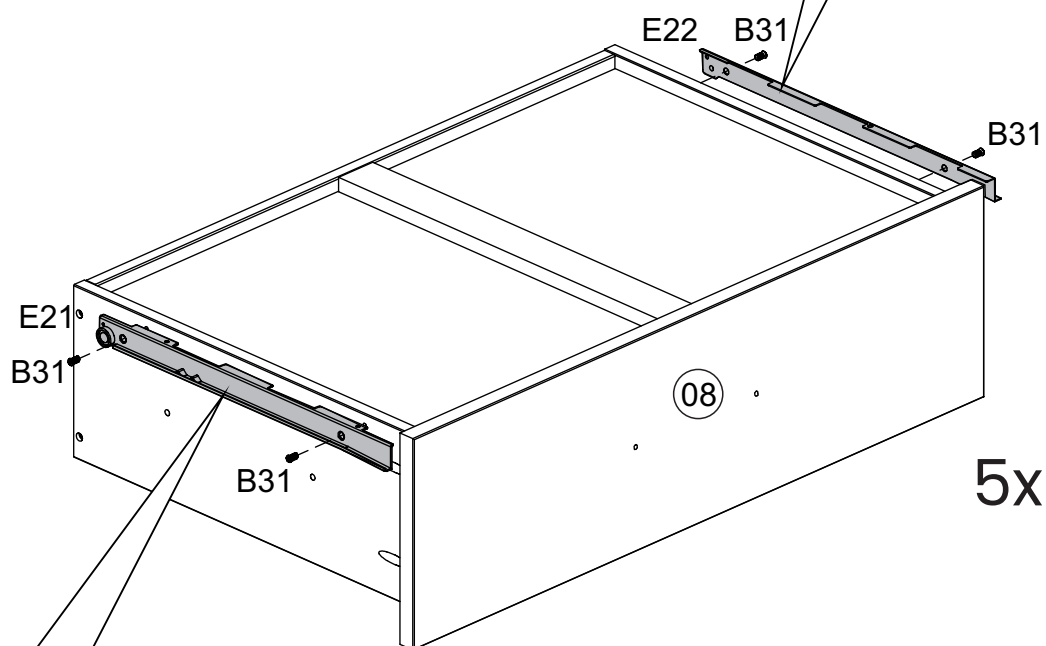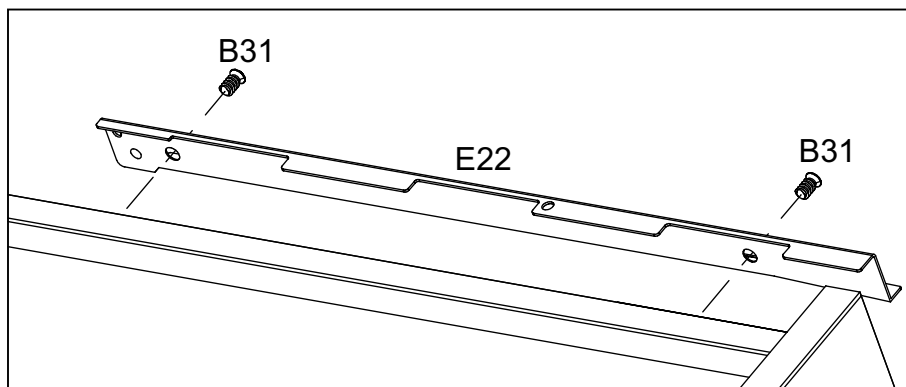




B31		20	E21	Drawer RIGHT	5	E22	Drawer LEFT	5
	6,0x10							

17)

5x





Observe the correct orientation as shown below.

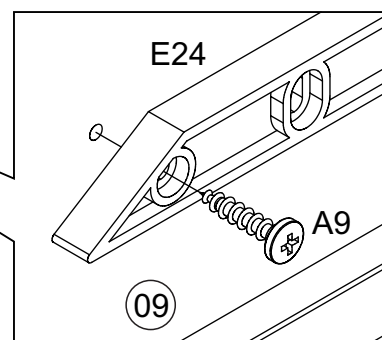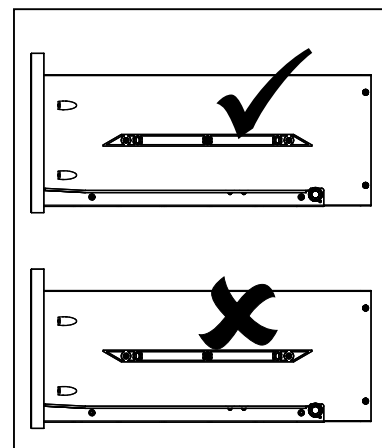
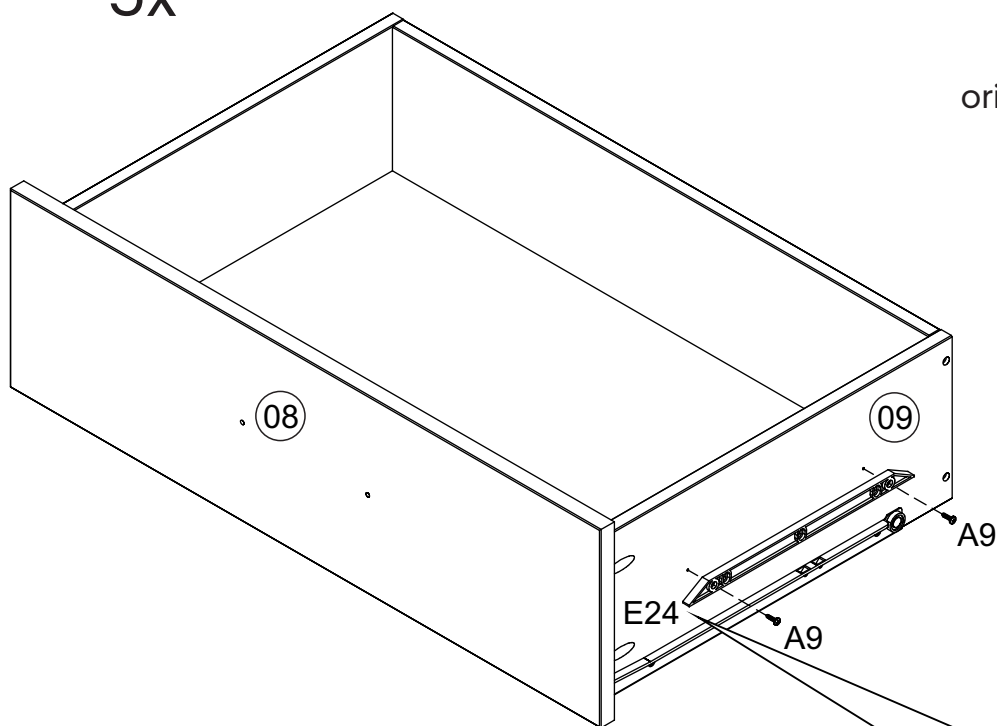



A9		10	E24		5
		3,5x16			

18)


5x

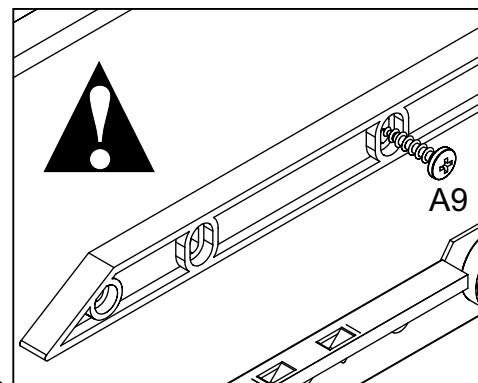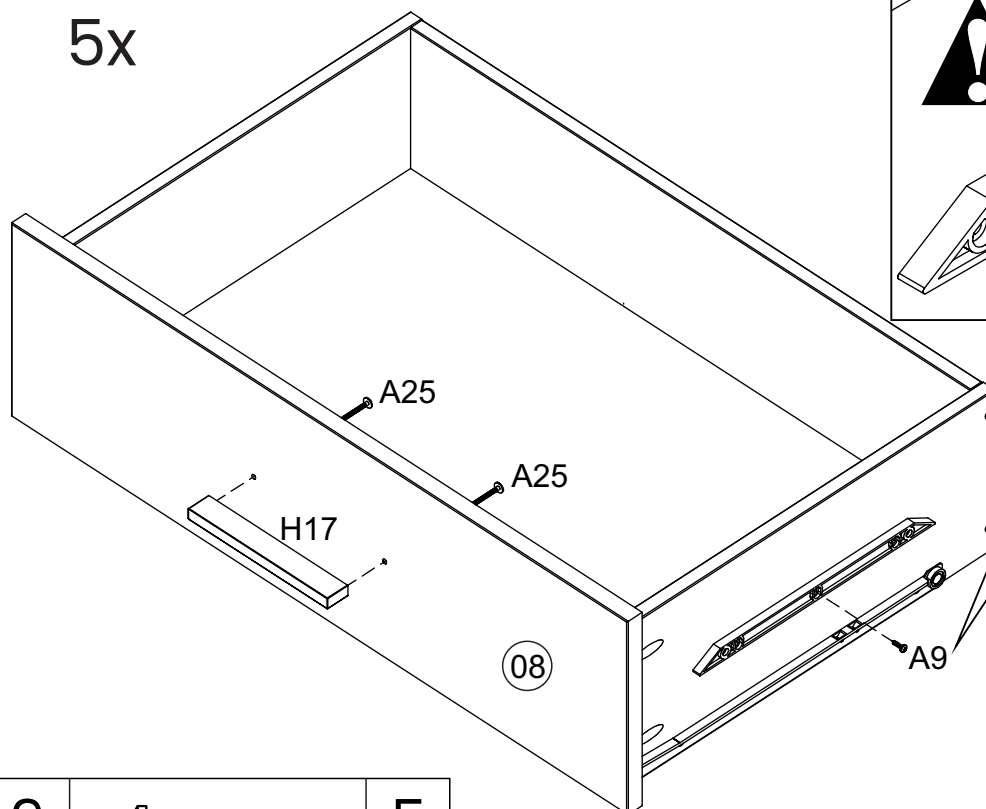

A9		5
		3,5x16
A25		10
		M4 x 25







H17		5
-----	---	---




19) Place the labeled drawer in the top position

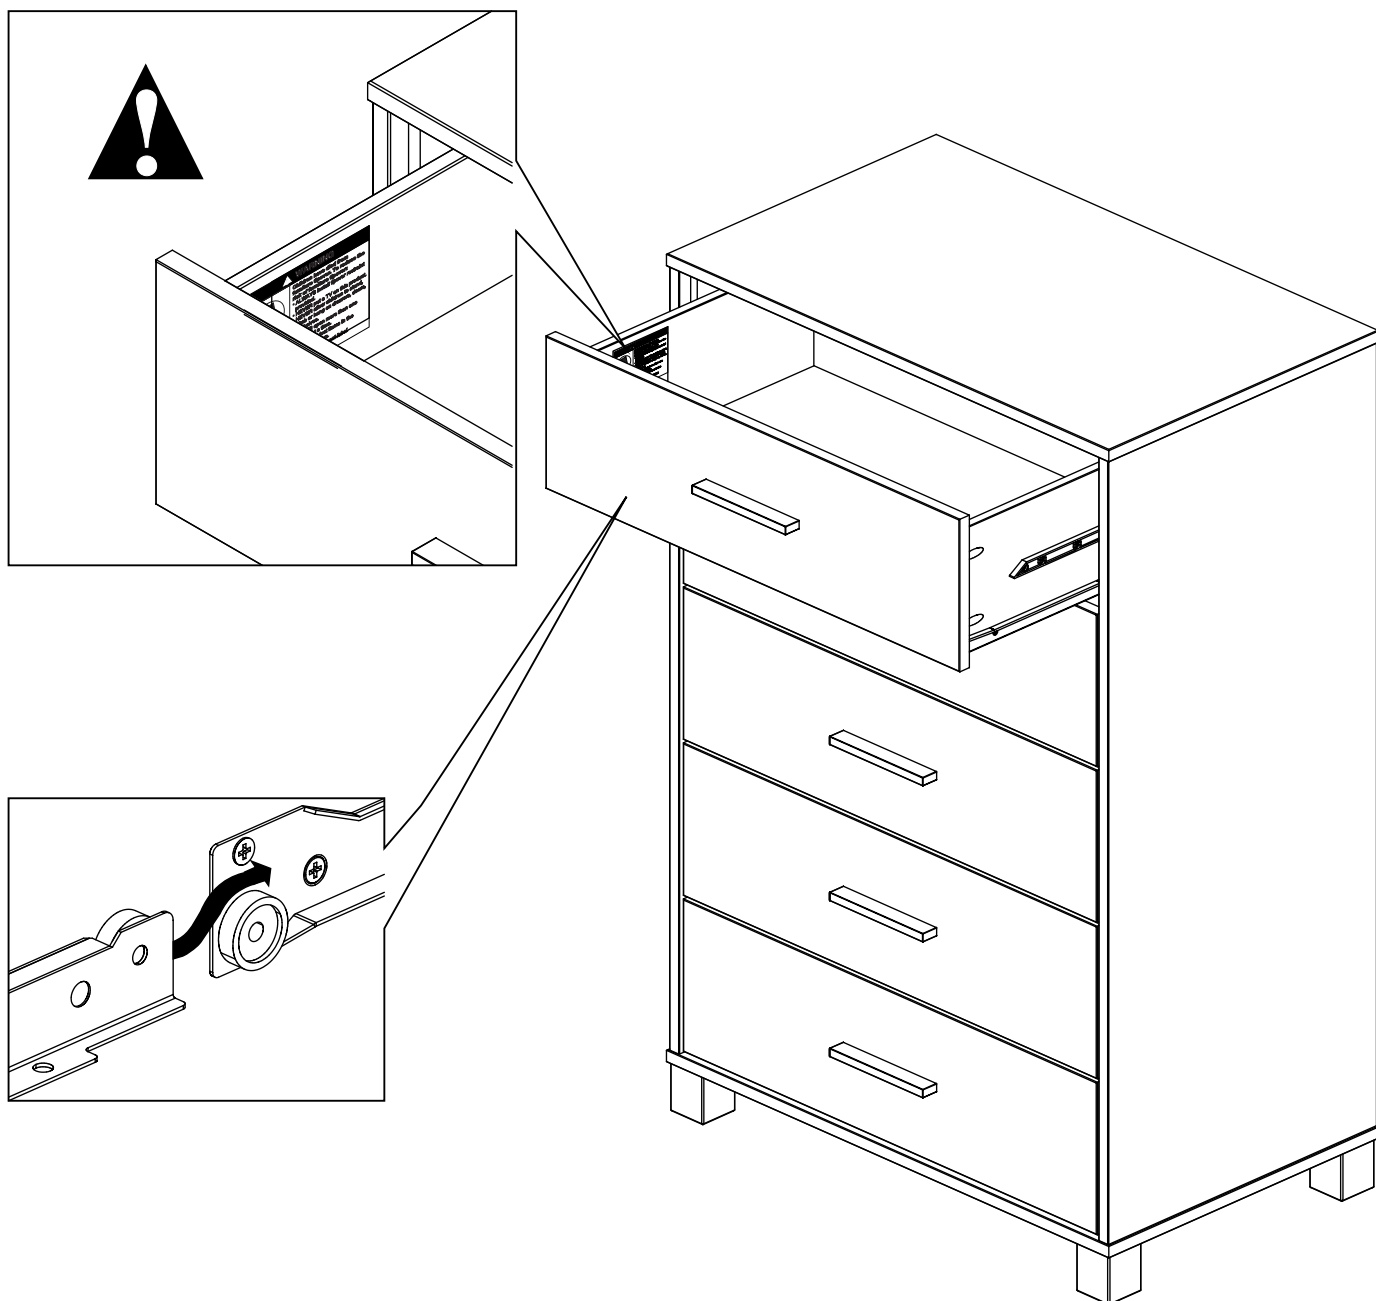

20)

ANTI-TIPPING RESTRAINT KIT

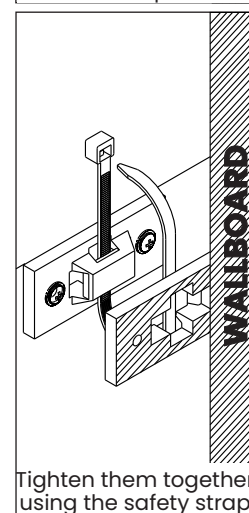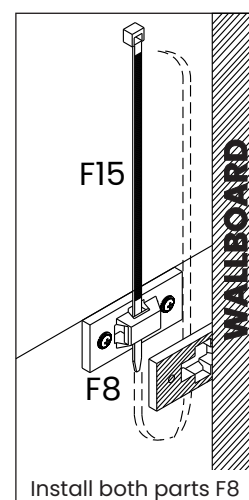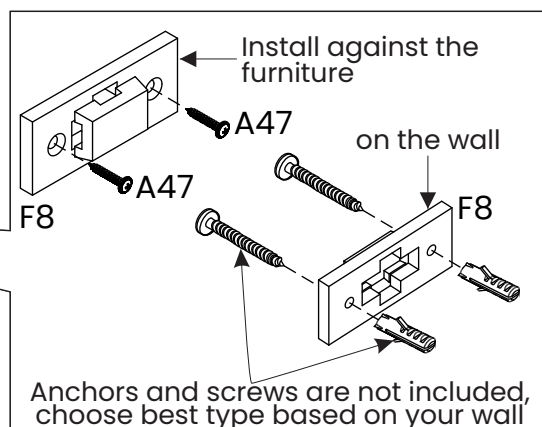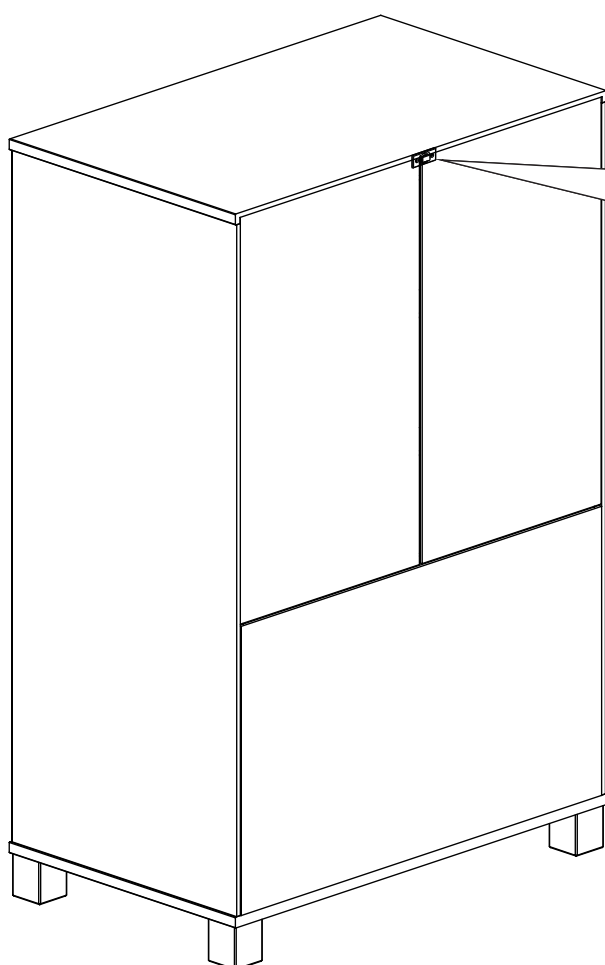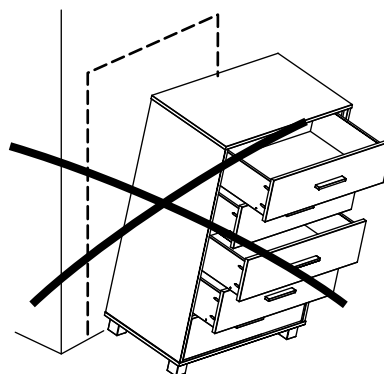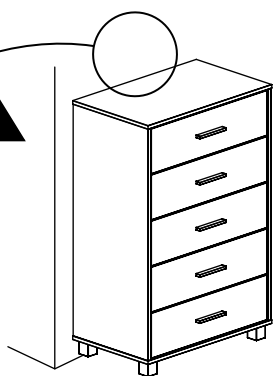

A47		2
F8		2
F15		1