
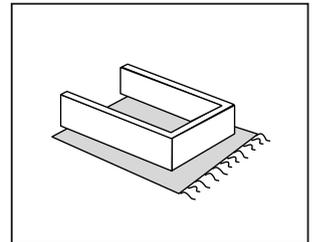
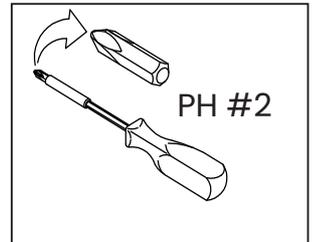
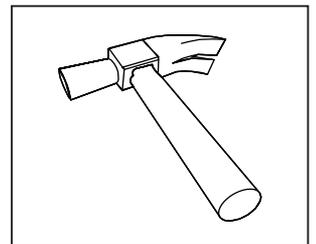
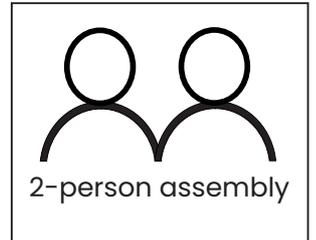


Assembly Instructions

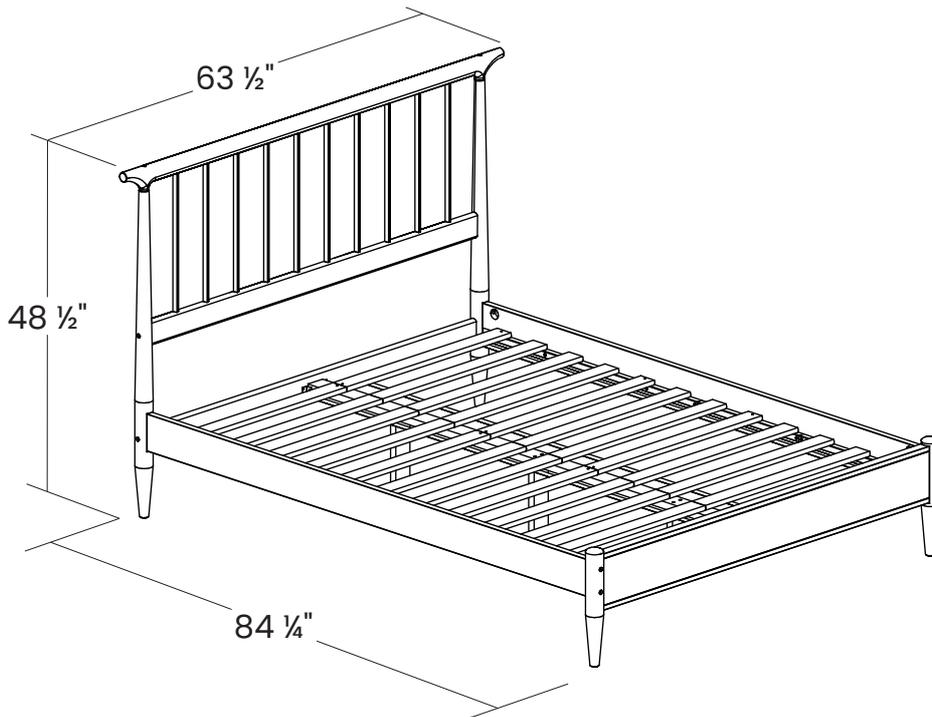

Model #	Finish
MC1305	Brushed Walnut

Thank you for choosing Grain Wood Furniture, it is an honor to be in your home!
If you have any questions, feedback, or need replacement parts please contact us at:
grainwoodfurniture.com/help or support@grainwoodfurniture.com

**Mid Century
Queen Spindle Bed**

GrainWood
FURNITURE.COM

PLEASE READ BELOW BEFORE BEGINNING ASSEMBLY






- Enlist help from a friend or family member, as most items require two people for proper assembly.
- Choose a spacious, open area near where the piece will be located once assembled. Moving parts is easier than relocating the fully assembled furniture.
- Only throw away packaging material once assembly is complete.
- Assemble the item on a soft surface, such as cardboard or an old blanket, to protect the finish from possible dents or scratches.
- Lay out the parts in order and count them twice. If any parts are missing or damaged, document the problem with pictures and contact support so we can make it right.
- Solid wood furniture may present imperfections such as wood knots, minor splits, or cracks which are a natural aspect of the material. Whenever the stability of the furniture is not compromised, we recommend customers perform cosmetic touch-ups with wax crayon fillers sold at all major hardware stores.
- It is best to use the tools provided in the box, such as a hex key, because they may be specially sized for the piece of furniture.
- We do not recommend using power drills as they can damage your furniture if not used correctly.
- Use a carpenter's square or hardcover book to check angles when assembling drawers and doors. If they are not at 90 degrees, they will not close properly.
- If you have any problems, we are here to help. Just go to grainwoodfurniture.com/help.
- See grainwoodfurniture.com/care-guide for suggestions that will help your furniture last for years.



grainwoodfurniture.com/assembly-troubleshooting

Enjoy your 100% solid wood furniture!

HARDWARE LIST


A9		3,5x16	16 + 1
A14		3,5x35	16 + 1
B5		1/4"	8 + 1
B12		1/4"x100/Ø13	10
B14		1/4"x60/Ø13	8
B19		7,0x70/Ø17	6
C3		10x40	12 + 1
D43			2
G8			1
G14		Ø20	7
H21			10 + 4

ATTENTION

Before starting assembly please verify the hardware set is complete.

For missing hardware please contact us at grainwoodfurniture.com/help

WARNING:
CHOKING HAZARD
Small parts, not for children.
To be assembled by an adult.



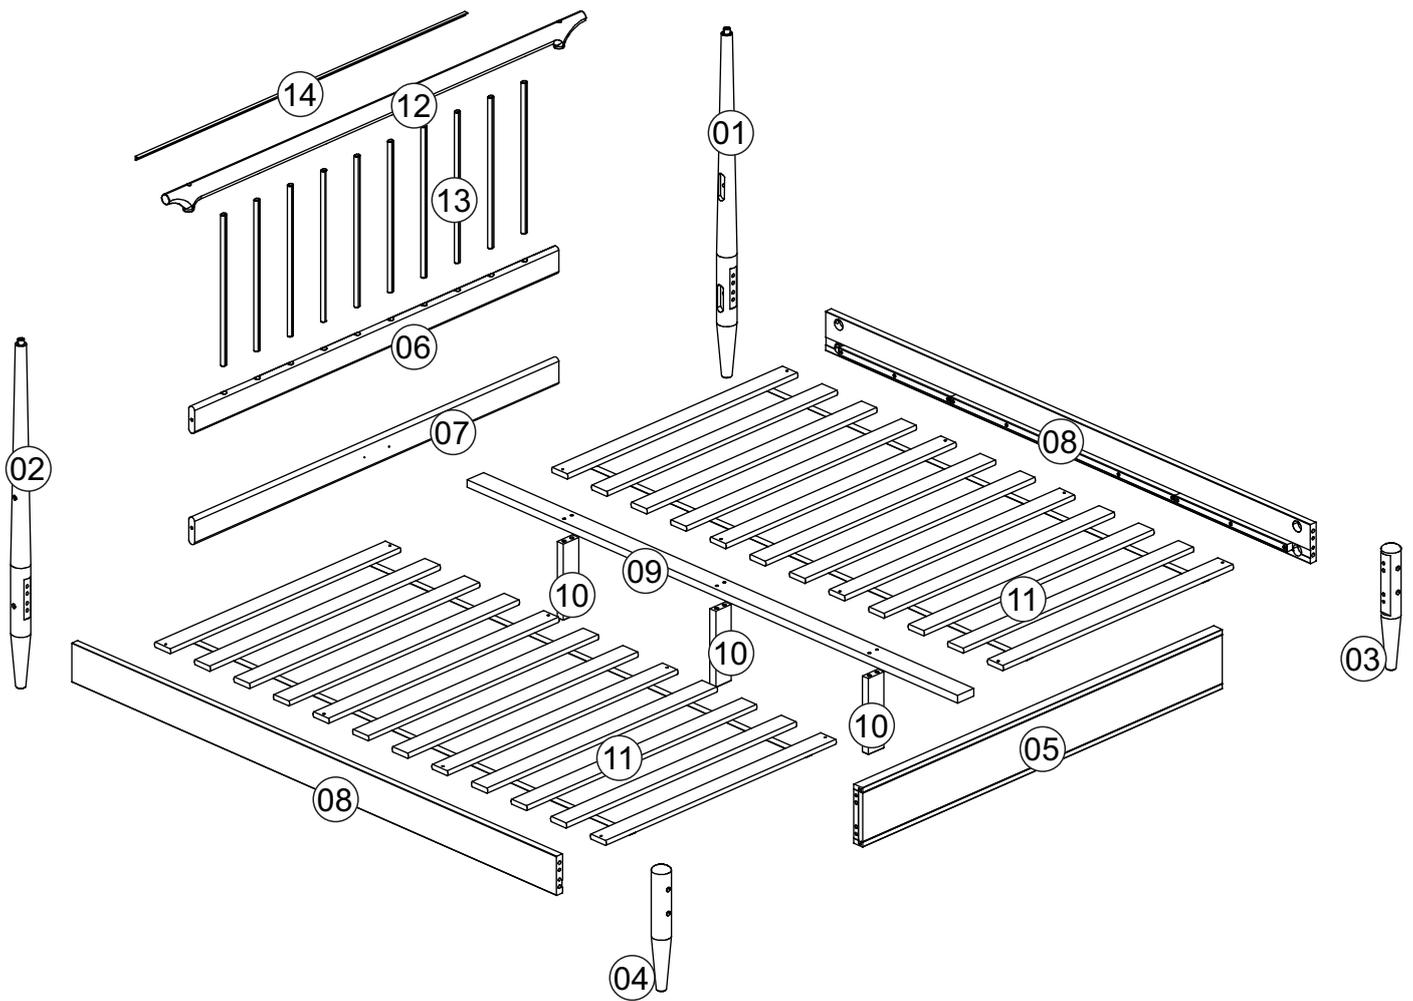


Box A - 1 of 2		
Part #	Description	Qty.
01	Right headboard post	1
02	Left headboard post	1
03	Right footboard post	1
04	Left footboard post	1
05	Footboard cross piece	1
11	Slat roll	2
13	Spindles	10

Box B - 2 of 2		
Part #	Description	Qty.
06	Headboard crosspiece	1
07	Headboard lower crosspiece	1
08	Side rail	2
09	Center rail	1
10	Center support	3
12	Upper crosspiece	1
14	Metal angle	1
HW	Hardware	1



1)

Tip:
Use a hammer in case dowels
are hard to install by hand.

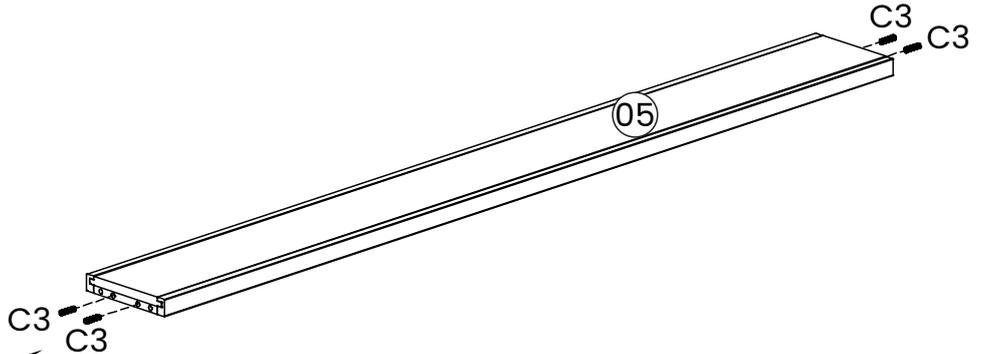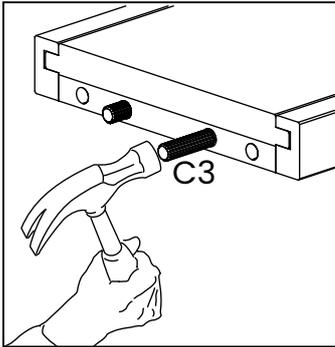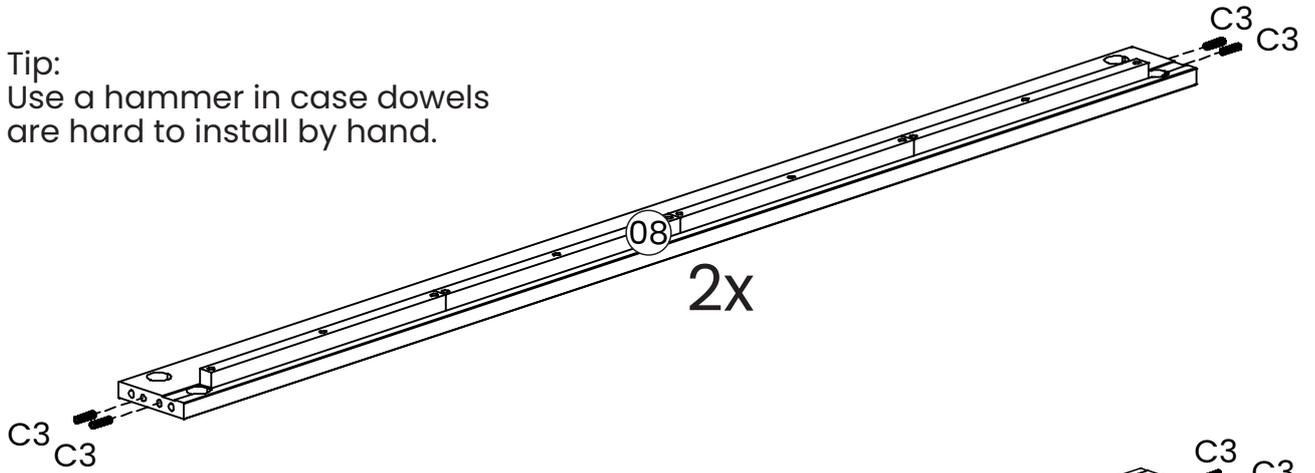

C3		12
	10x40	


2)

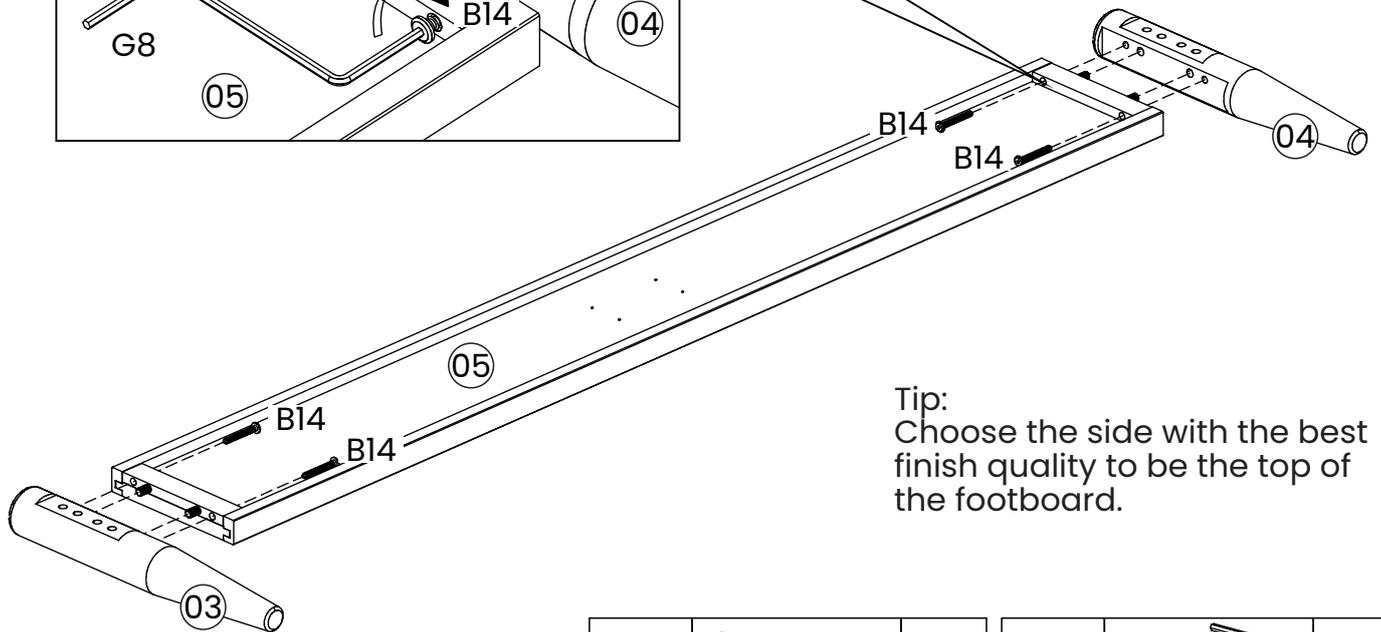
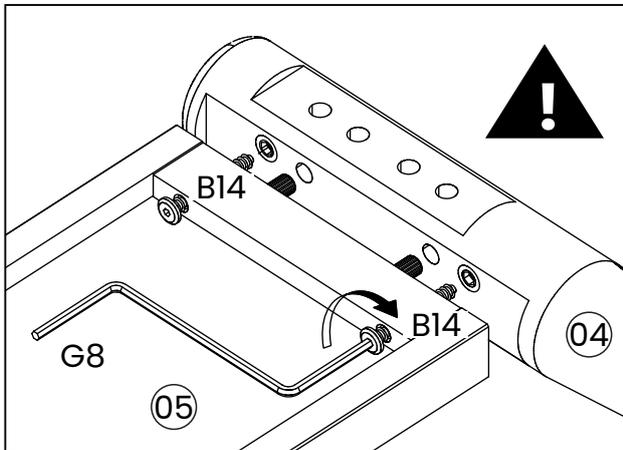


Tip:
Choose the side with the best
finish quality to be the top of
the footboard.


B14		4	G8		1
	1/4"x60				

3)

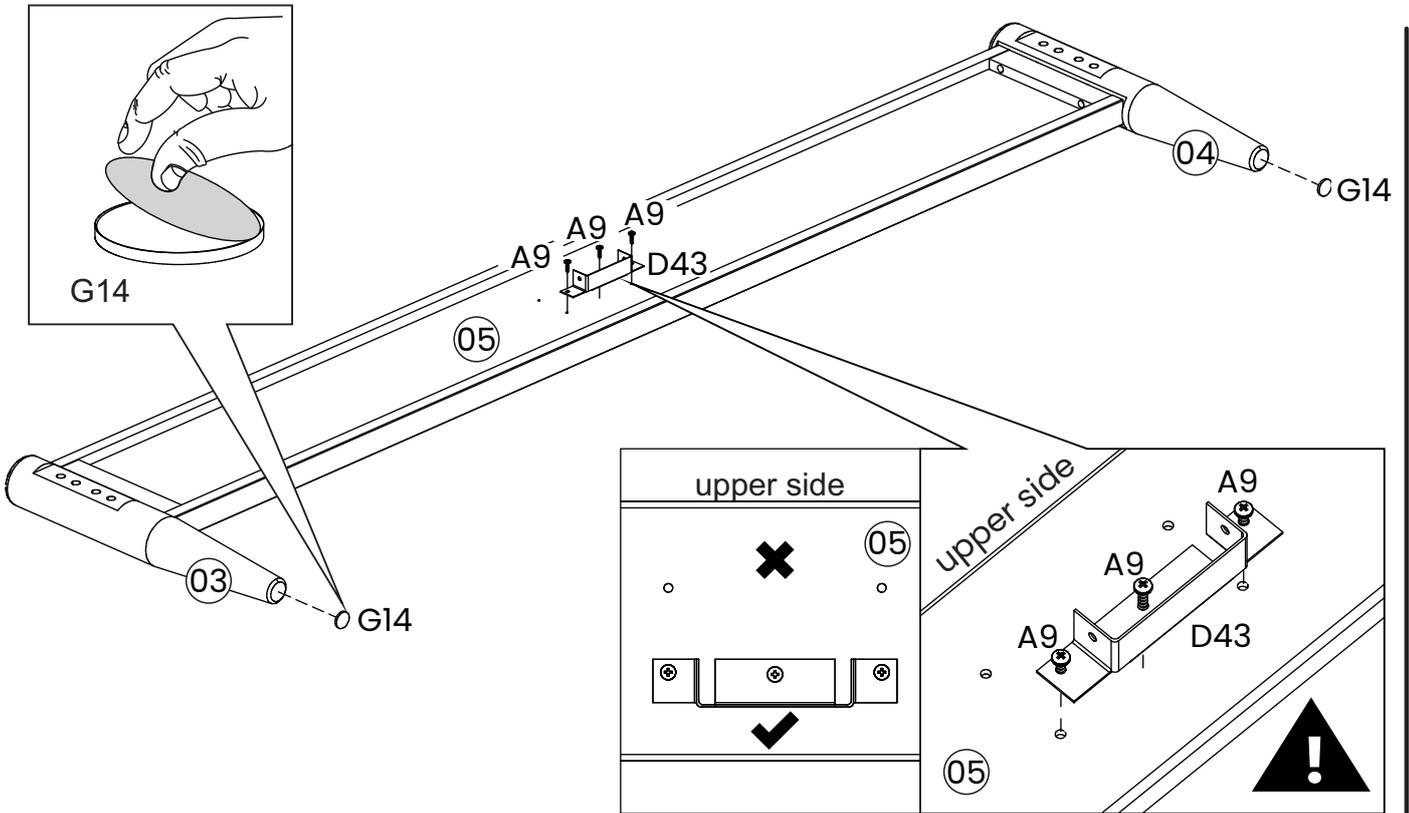



A9	 3,5x16	3	D43		1	G14	 Ø20	2
----	---	---	-----	---	---	-----	--	---

4)

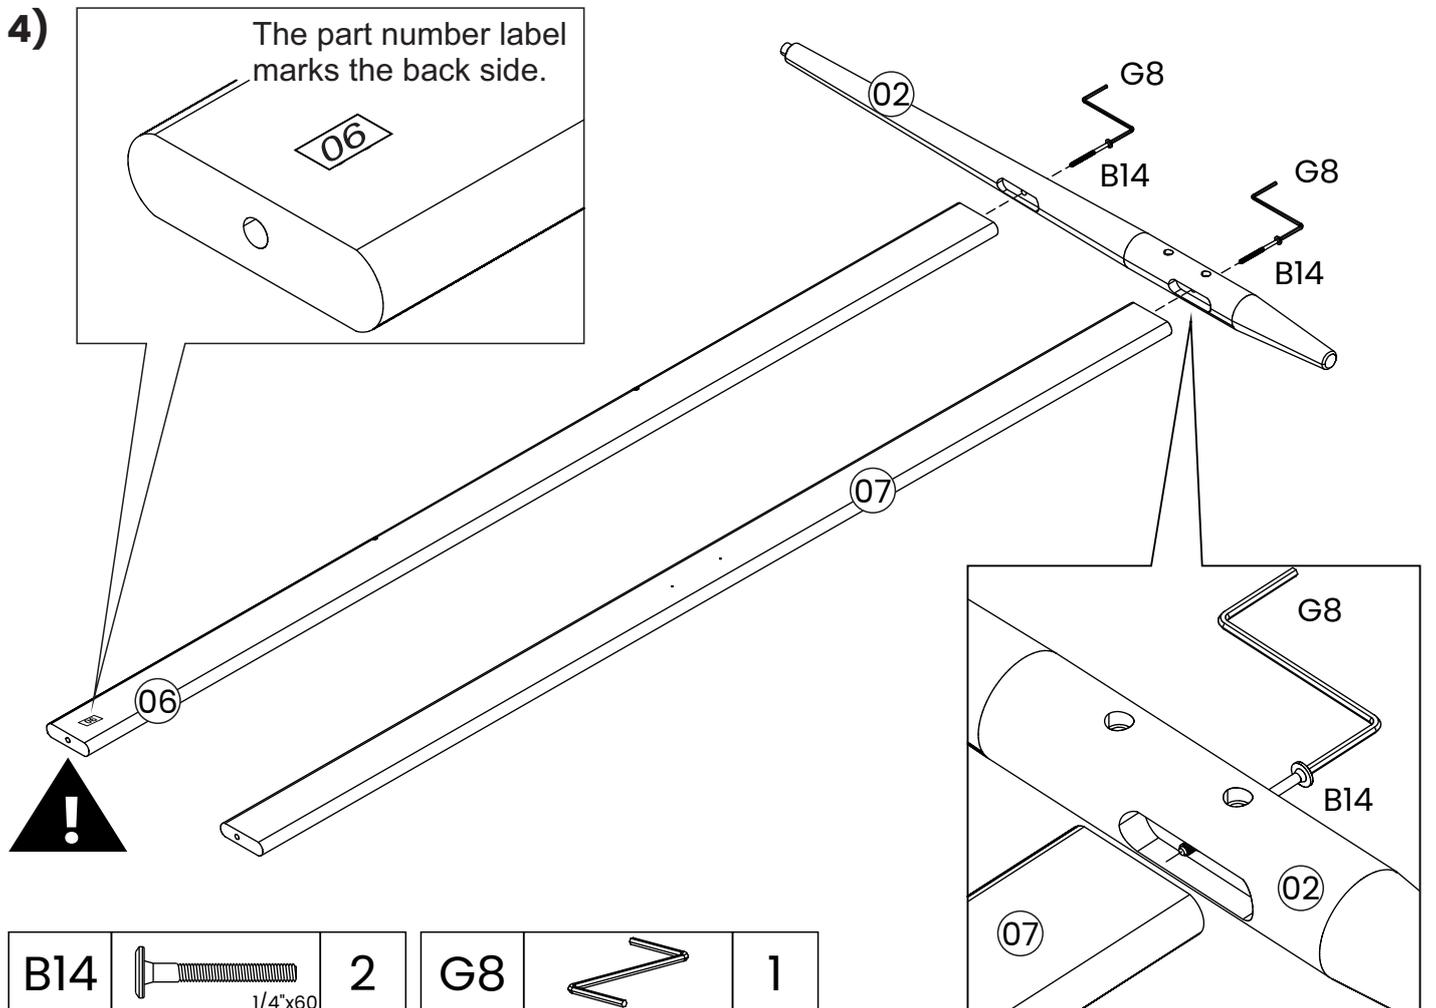



B14	 1/4"x60	2	G8		1
-----	--	---	----	---	---

5)

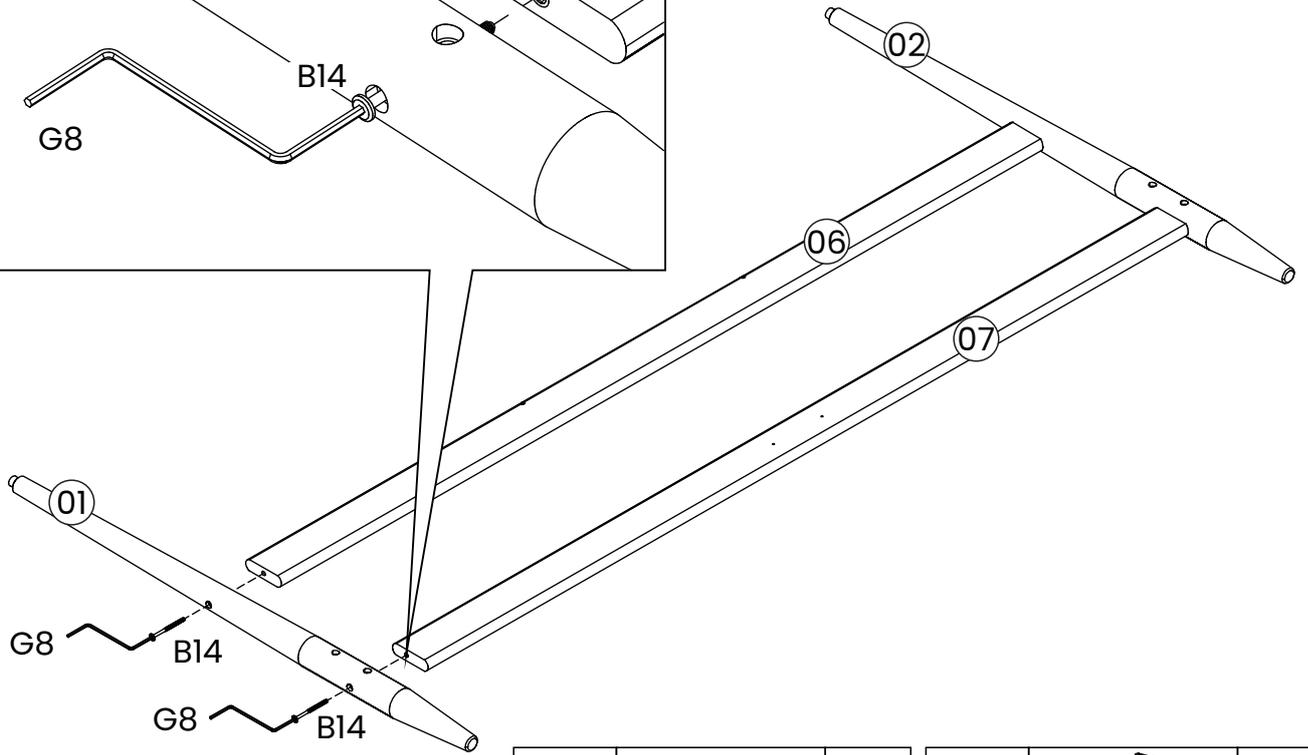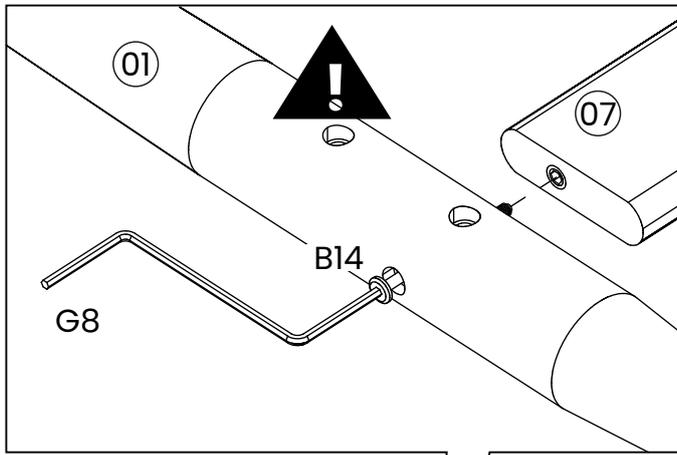




B14	 1/4"x60	2	G8		1
-----	--	---	----	---	---

6)



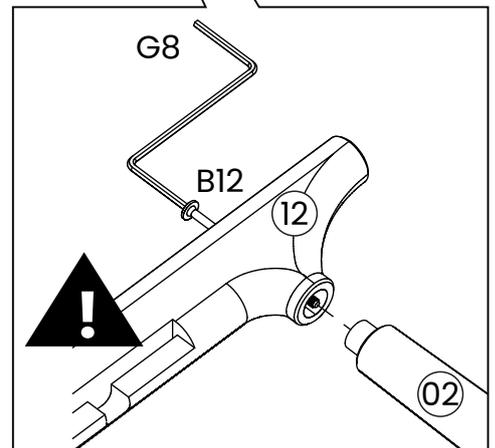
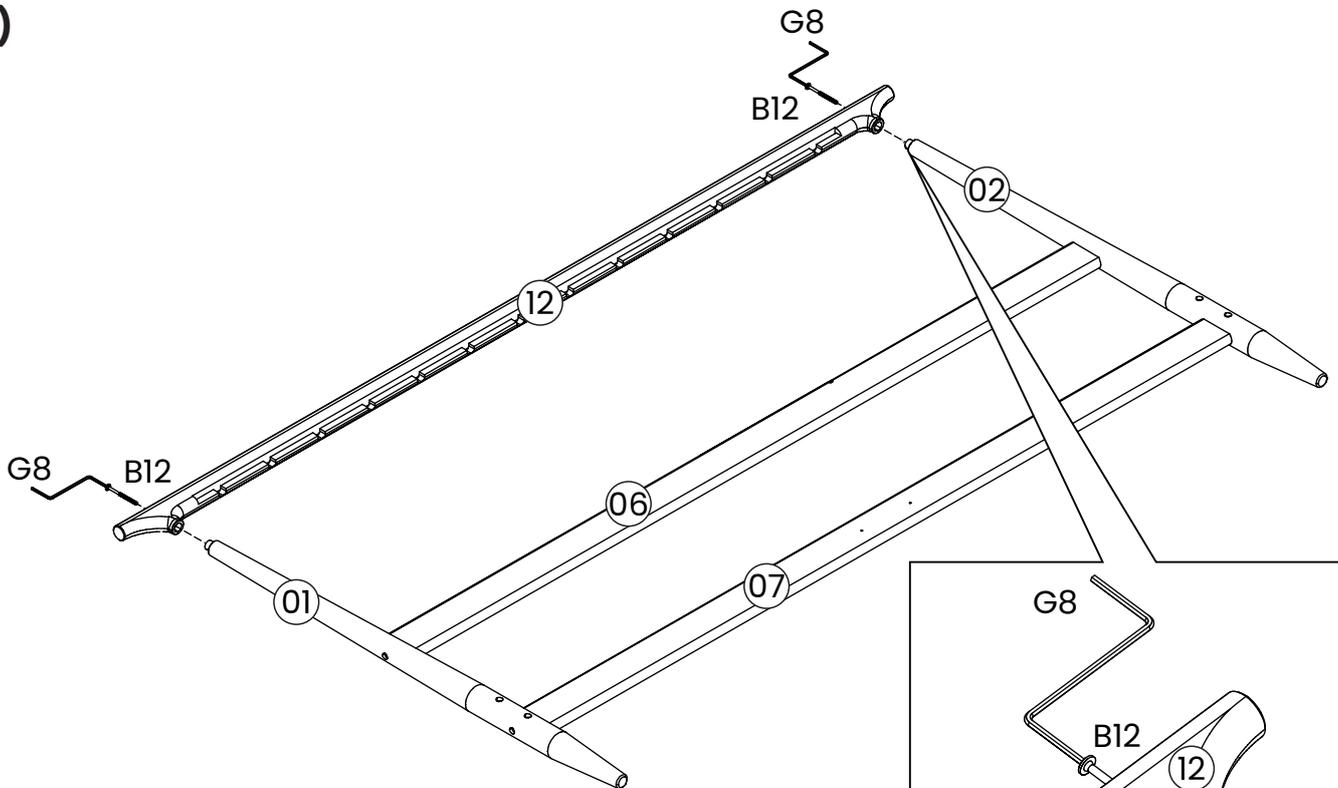



B12	 1/4"x100	2	G8		1
-----	---	---	----	---	---

7)

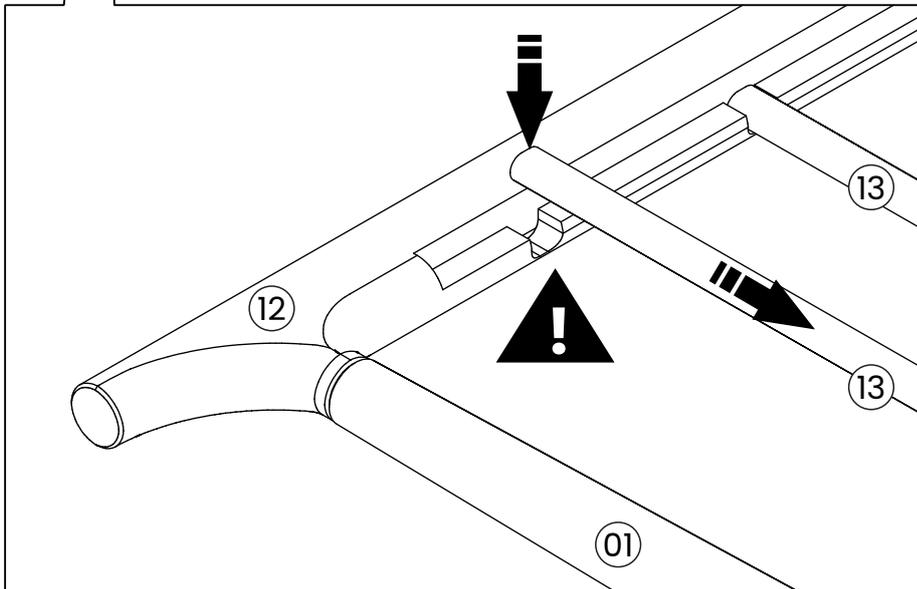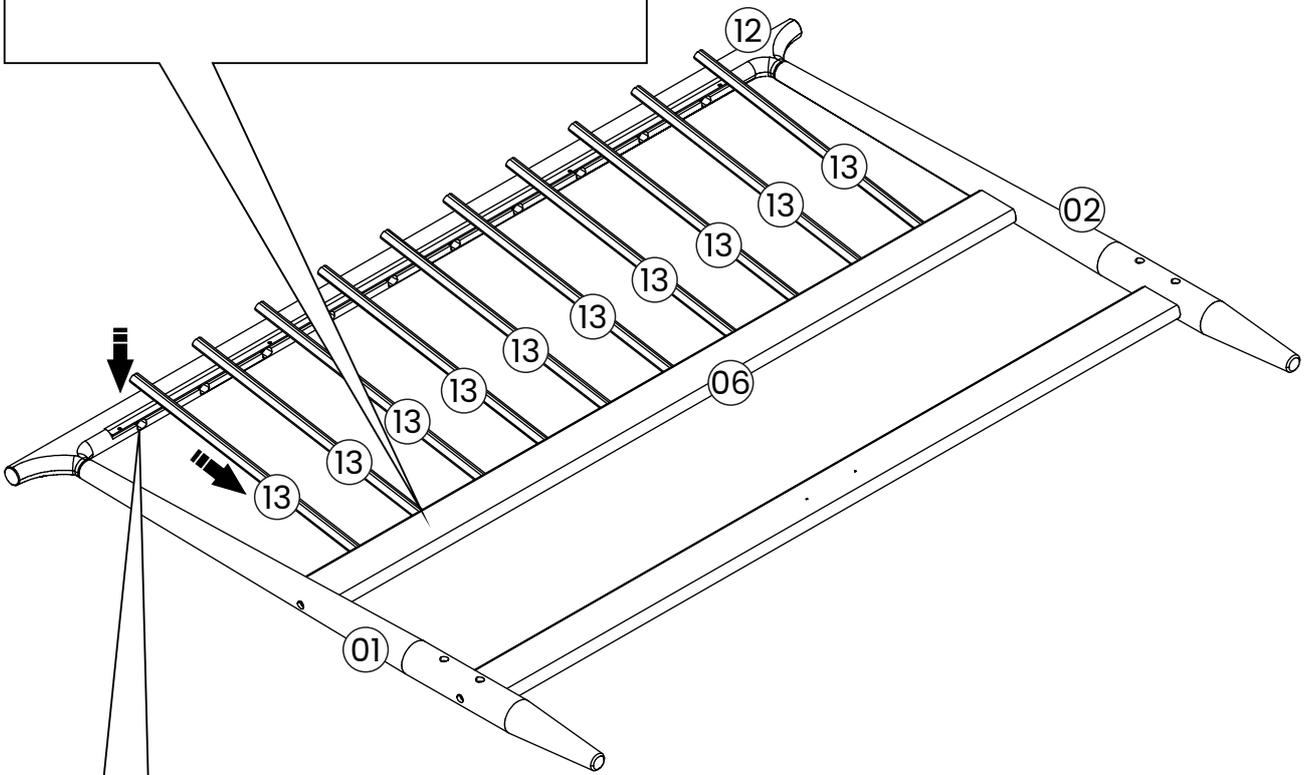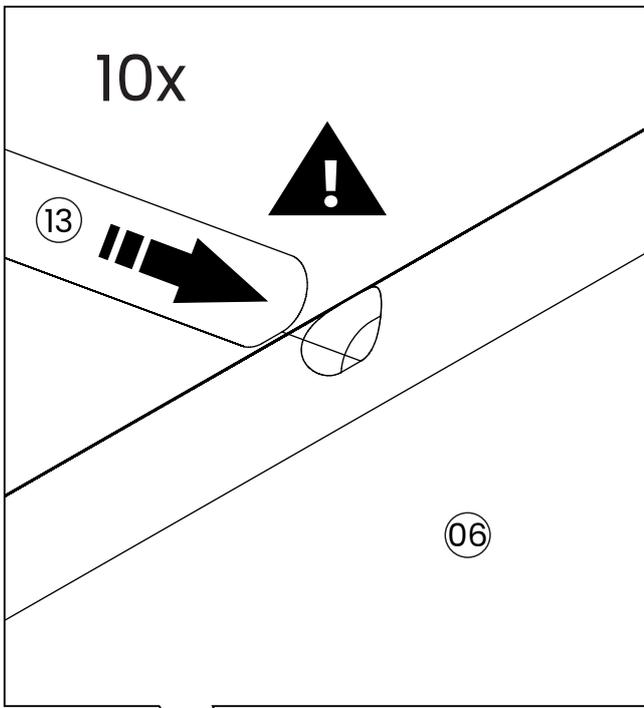




8)

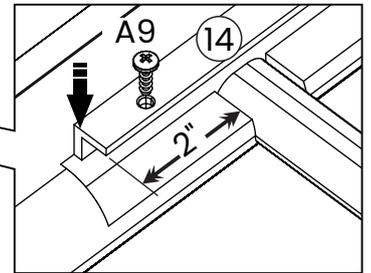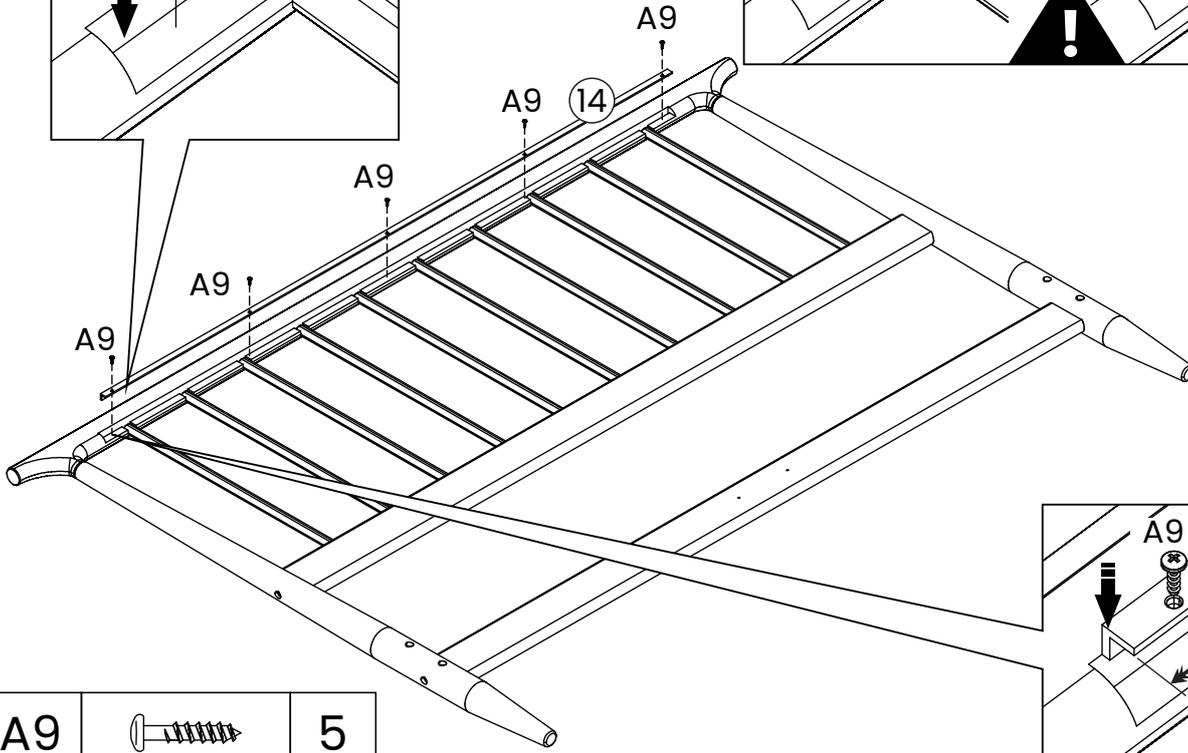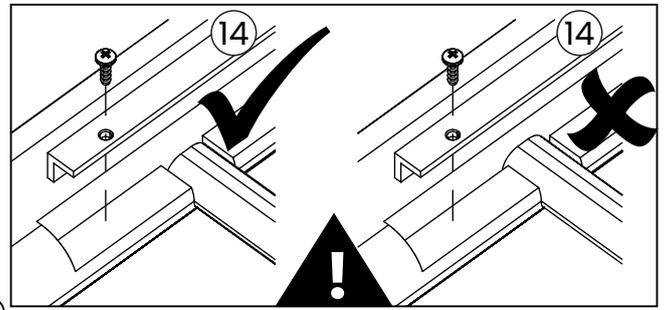
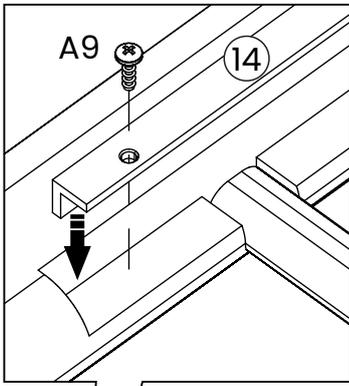


A9		5
	3,5x16	


9)

Flip the headboard to install support D43.

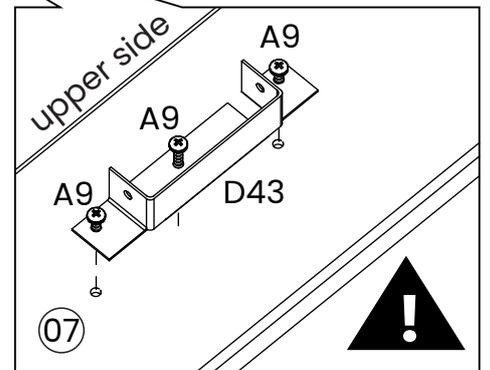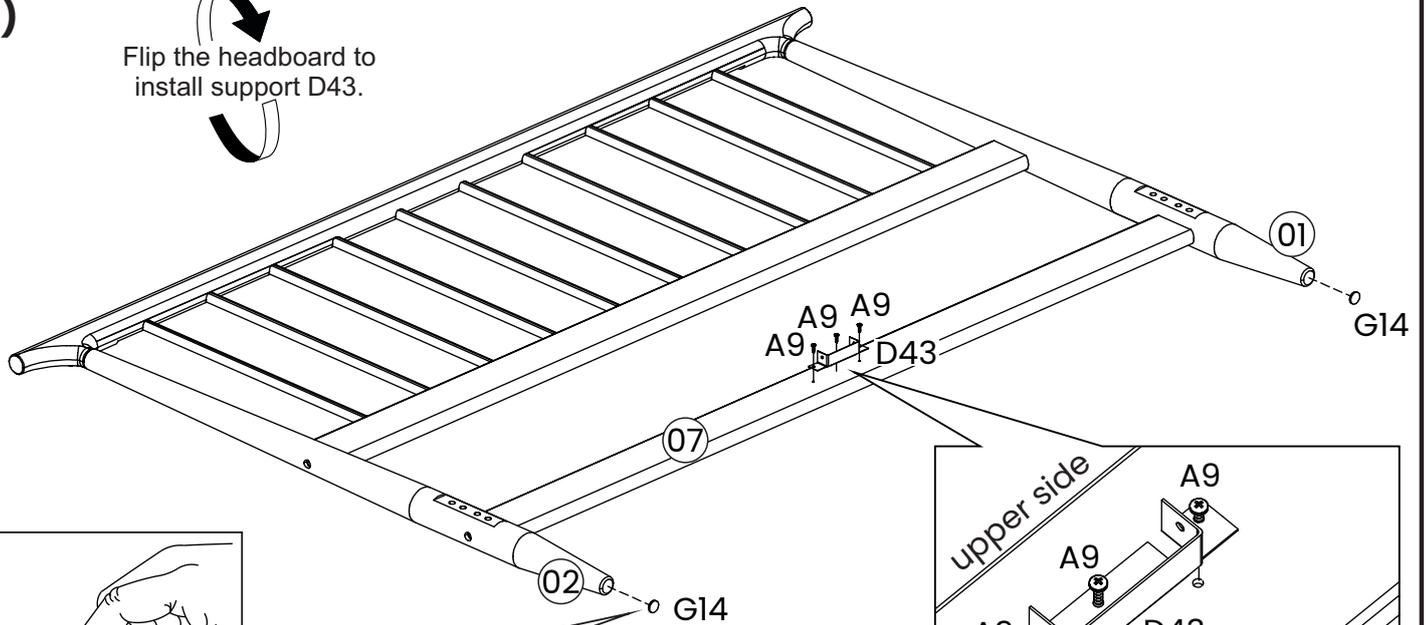


A9		3	D43		1	G14		2
	3,5x16						ø20	


10)

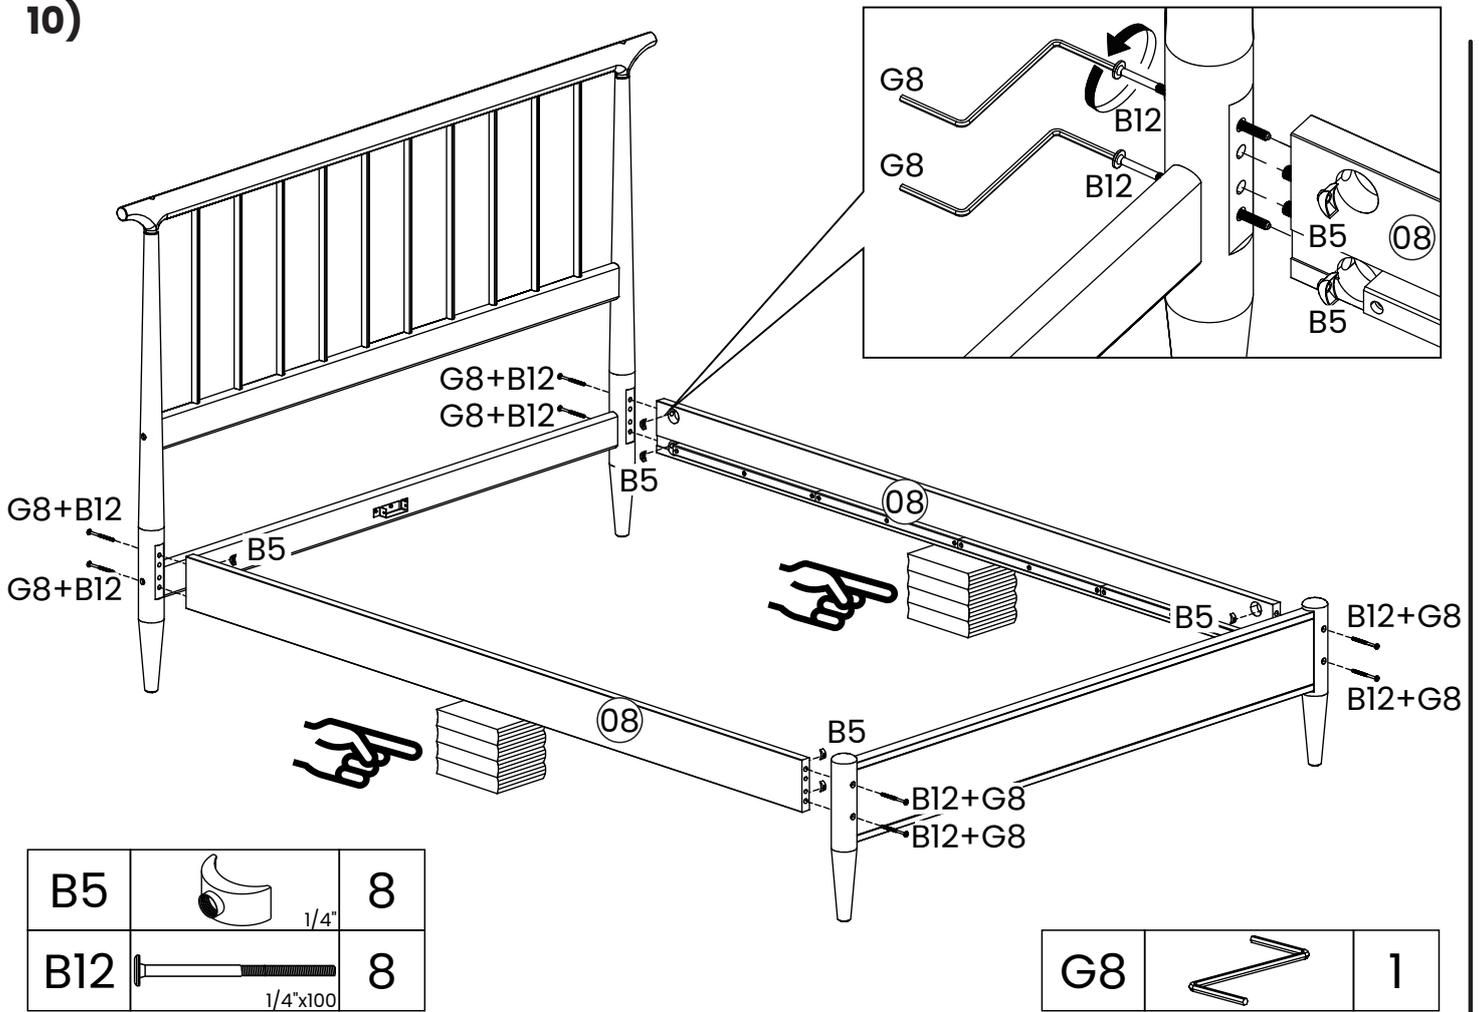


11)

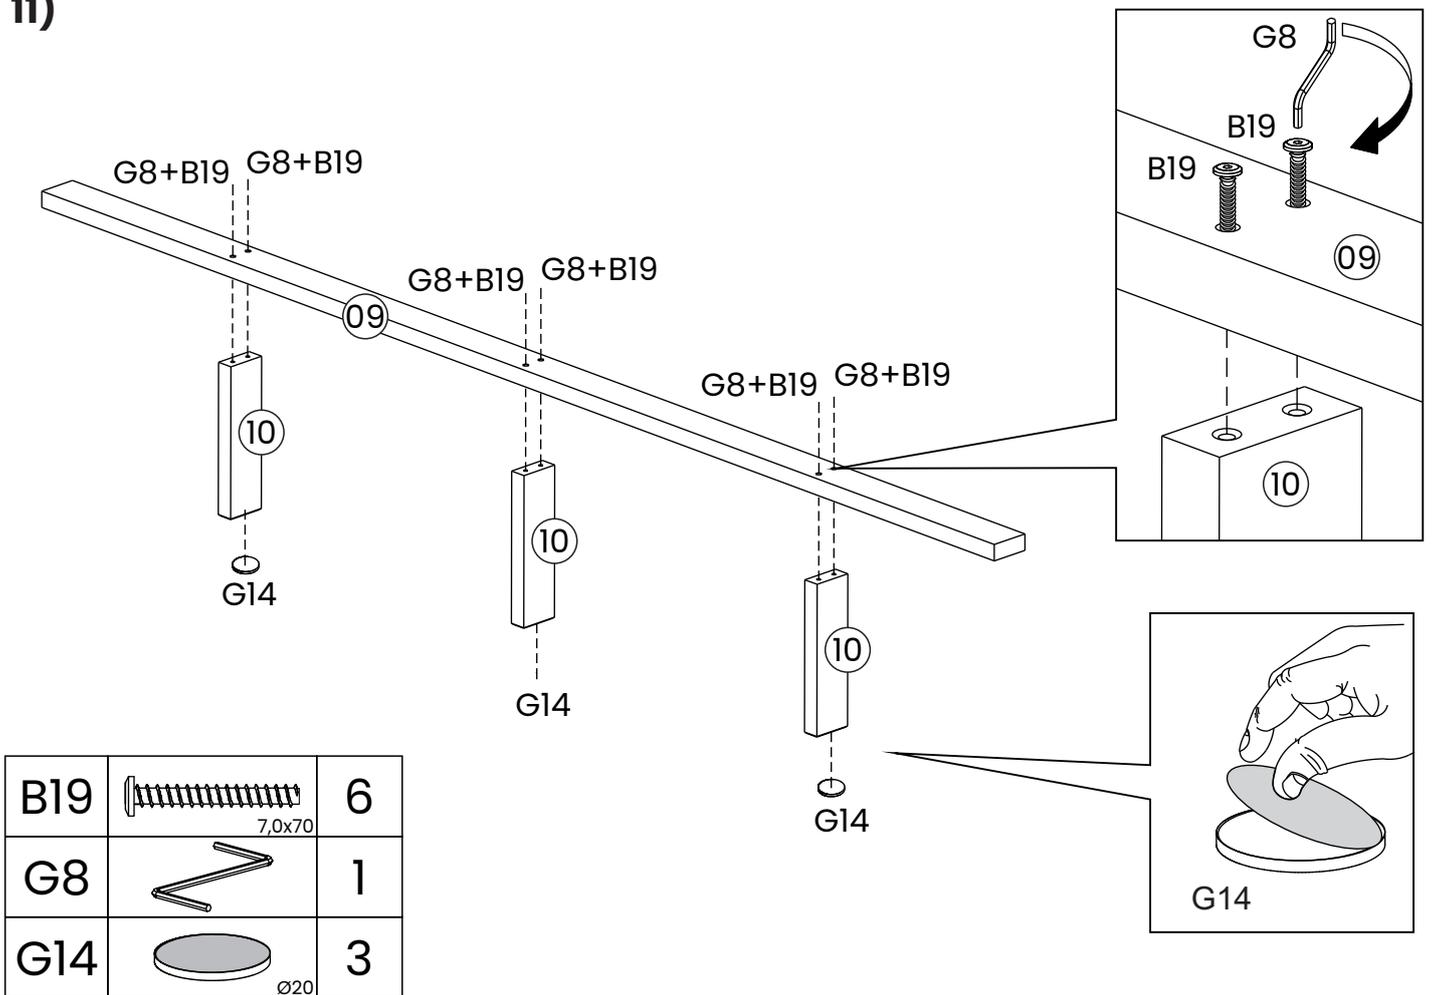


12)

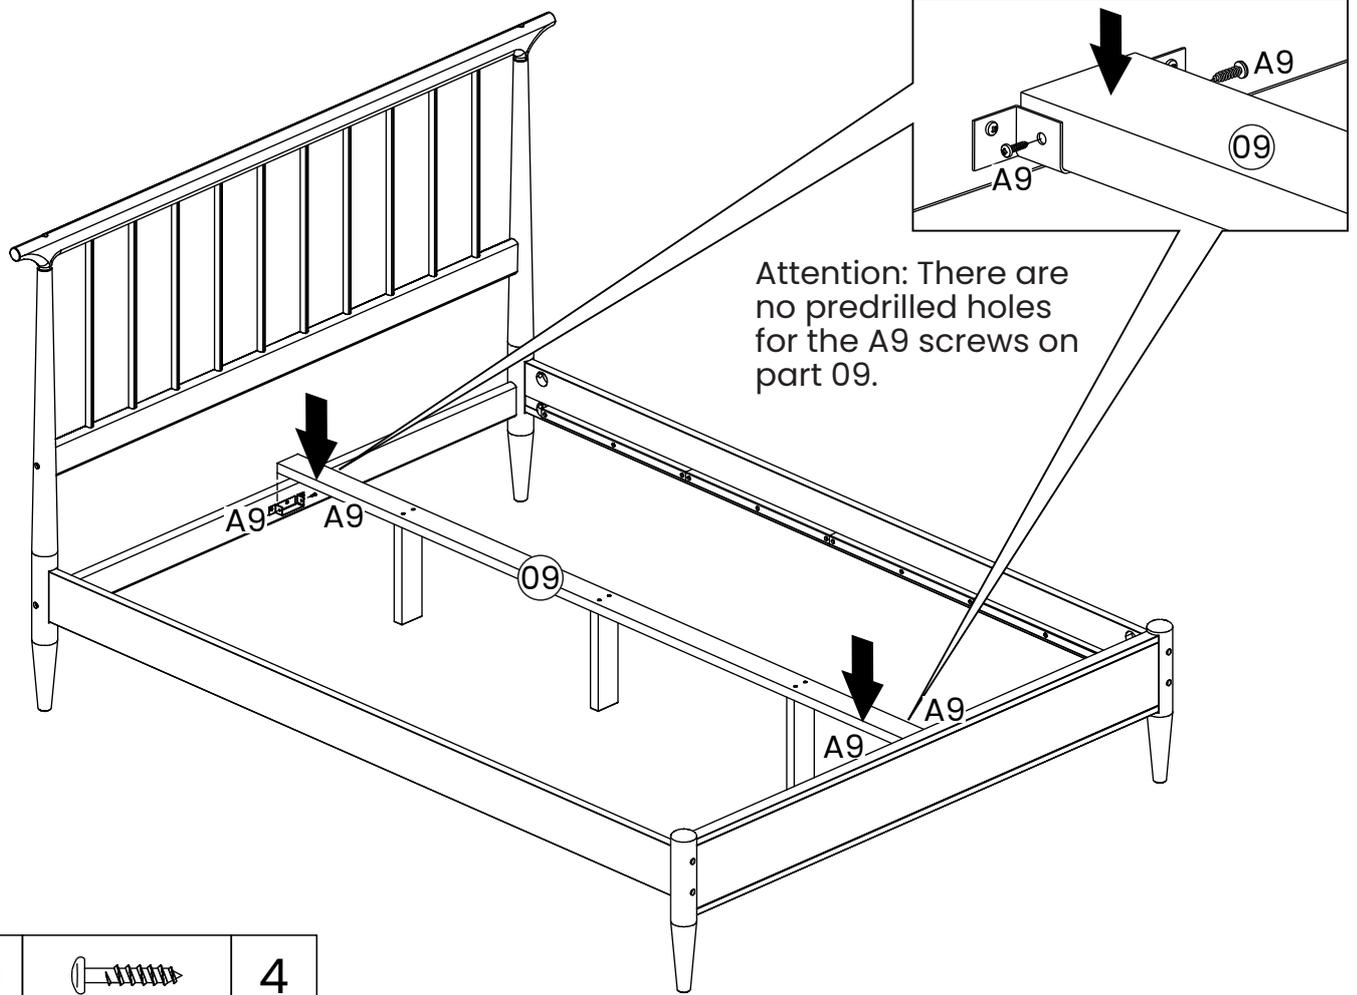


A9		4
<small>3,5x16</small>		

13)

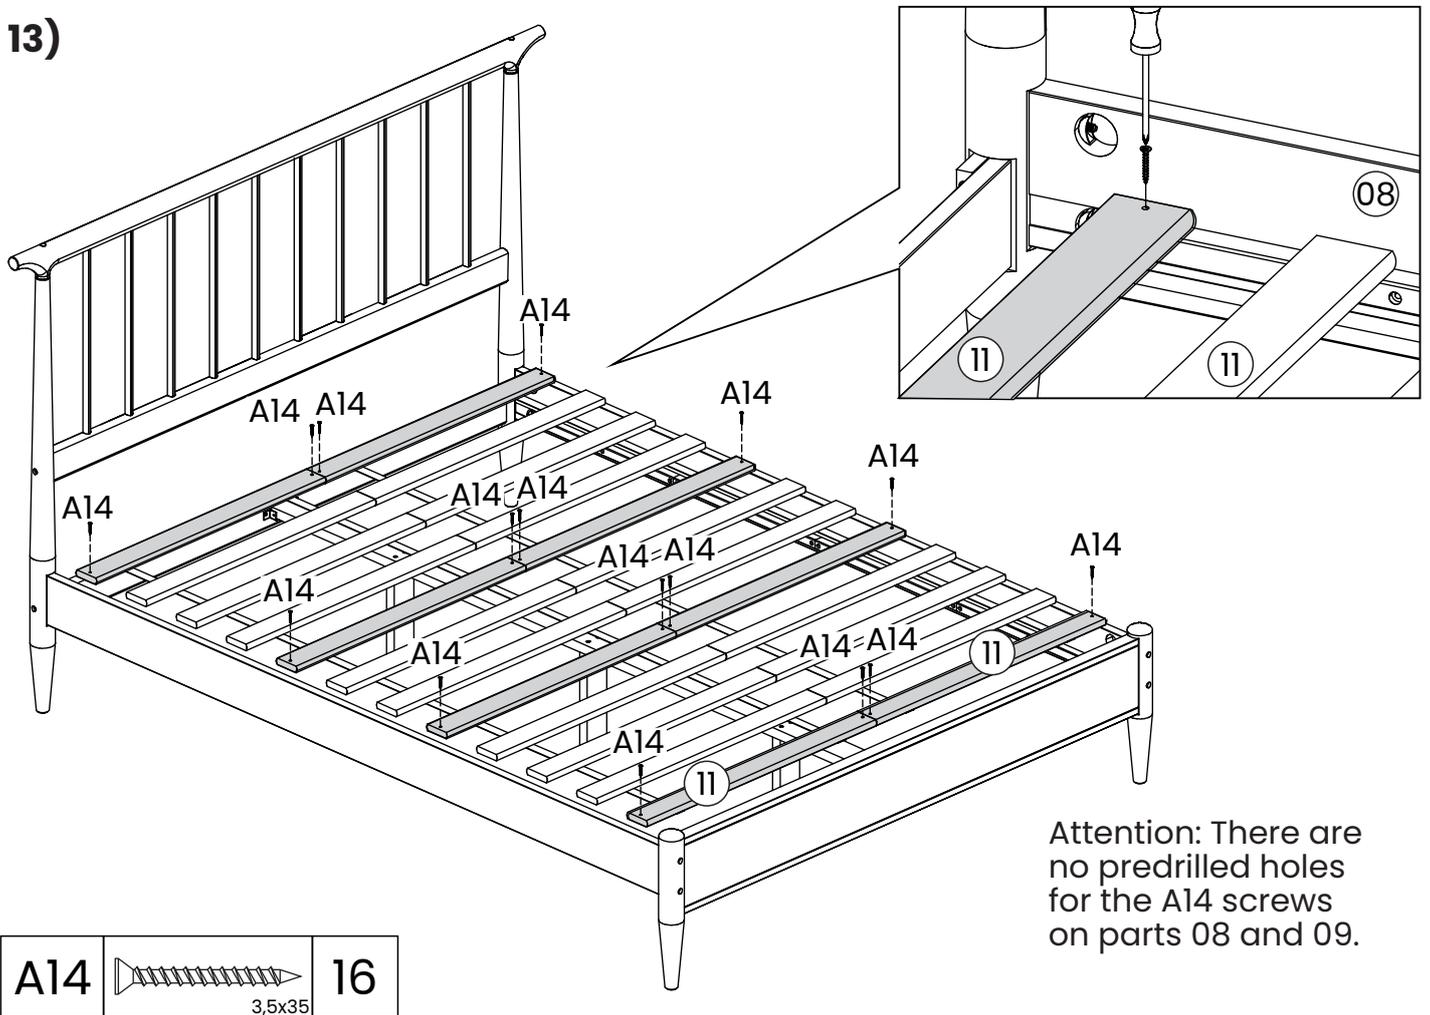

A14		16
<small>3,5x35</small>		

- 14)** Tip:
Do not install wood caps in the back of the headboard posts.
Instead, save these 4 caps for eventual future use.

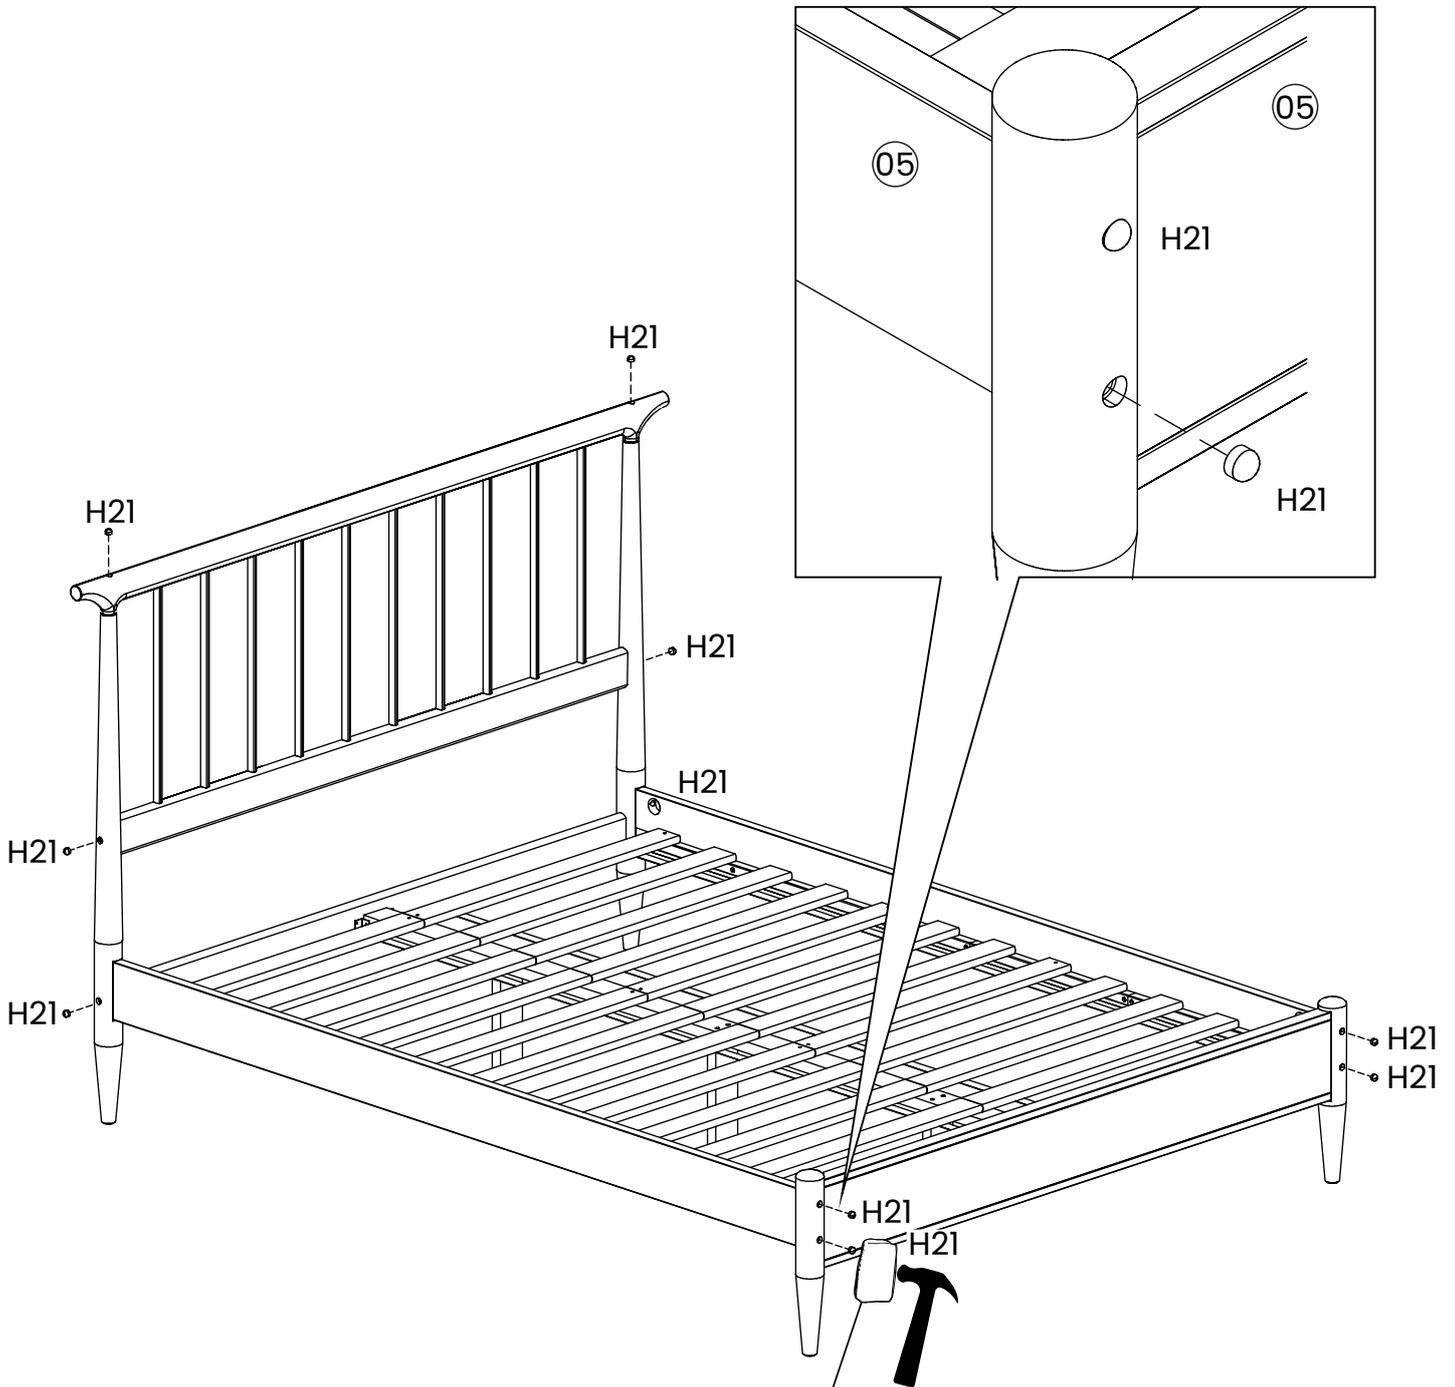

Tip:
Use a rubber mallet or a piece of wood to protect the finish when hammering the wood cap.

H21		10
-----	---	----