

# Installation Instructions

## eGo<sup>®</sup> Plus Mini External Tag

16-0028-002 Rev B

This document describes how to install the eGo Plus Mini External Tag. This versatile tag can be mounted on almost any flat or slightly curved surface made of glass, plastic, or metal. This tag is ideal for applications that need a weather-resistant and exterior-mounted solution.

### **General Installation Information**

The eGo Plus Mini External Tag should be installed on your vehicle on a flat or slightly curved surface. The tag is attached with two strips of durable non-removable adhesive.

---

### **Required Materials**

You need the following supplies to install your new tag:


- eGo Plus Mini External Tag
- Rubbing alcohol, 50/50 isopropyl alcohol and water, or solvent/cleaner for metal
- Sponge and dry cloth

---

### **Tag Installation Procedures**

#### **Positioning the eGo Plus Mini External Tag**


Mount the eGo Plus Mini External Tag with the long edges oriented horizontally. Refer to [Figure 1](#) for correct tag orientation.

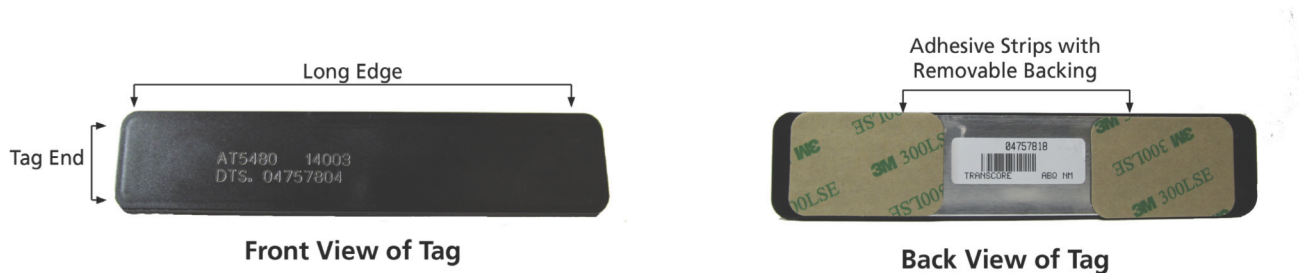

**Figure 1 Correct Tag Orientation - Front and Back Views**

1. The front of the tag should be pointed toward the front of the vehicle. Position the tag so that no part of the vehicle hangs over the tag. The tag should have a minimum field-of-view of 90 degrees. Refer to [Figure 2](#) for correct tag placement.
2. The tag can be attached to any flat or slightly curved surface made of glass, metal, or plastic. For best results, find a location where the back of the tag makes maximum contact with the surface, close to the centerline of the vehicle.

3. Make sure the area within 45 degrees of the center of the tag is free of obstructions.

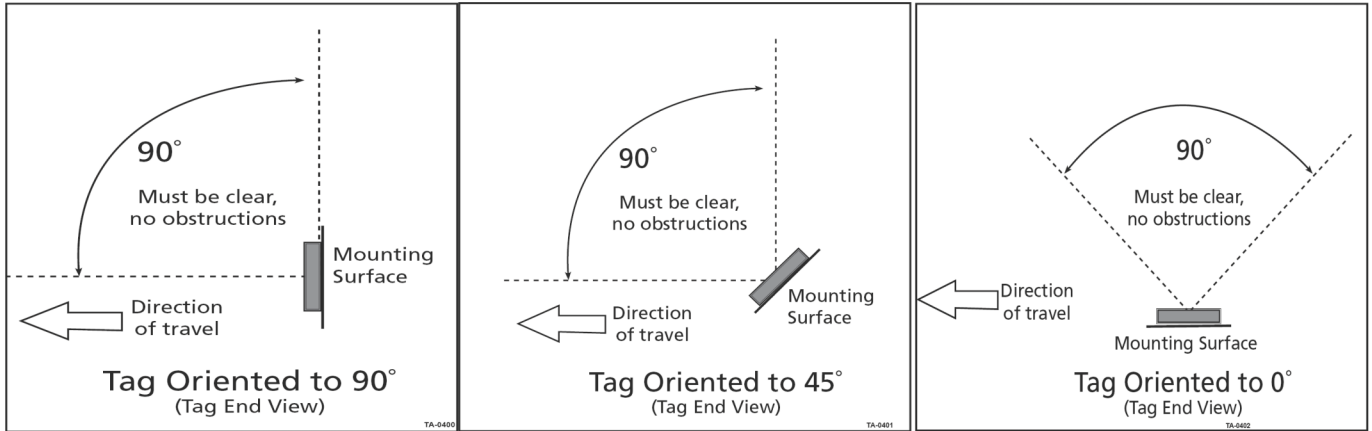


**Figure 2 Correct Exterior Tag Placement**

## **Installing the eGo Plus Mini External Tag**

Once you have identified a location for the tag, prepare the area where the tag will be installed. The ideal temperature range for mounting the tag is between 70°F to 100°F. Dust, grime, or greasy residue can adversely affect the bond strength of the adhesive on the tag.

1. Clean and degrease the tag installation area with solvent or cleaner. Dry the area thoroughly using a clean, dry cloth.
2. Remove the backing from both of the adhesive strips located on the back of the tag, as shown in Figure 3.

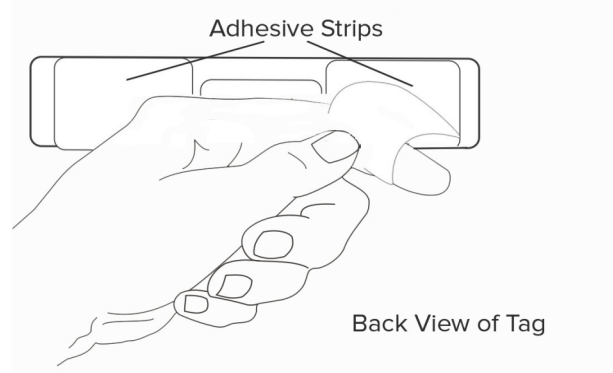

**Figure 3 Exterior Tag with Adhesive Strips**

3. Position the tag over the installation area.
4. Press both ends of the tag firmly against the mounting surface.
5. Allow the adhesive to cure for a minimum of one hour to ensure a firm bond.

  
atlasRFIDstore.com  
1.888.238.1155 • Inside USA  
1.205.383.2244 • Outside USA  
info@atlasRFIDstore.com • www.atlasRFIDstore.com