


## INSTALLATION STEPS

### Step 1


Start by building both vertical sides.

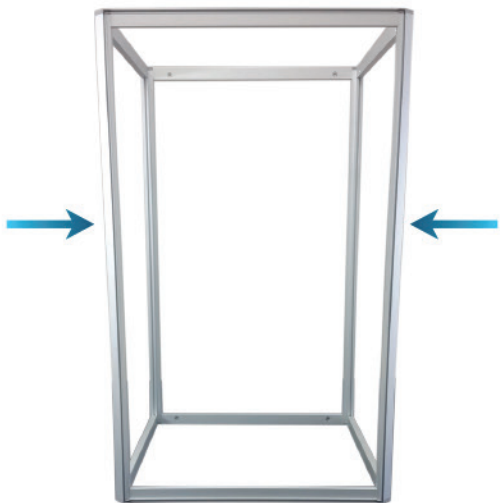

(2nd FOLD HERE)

### Step 2

Take (1) 40" extrusion and (1) 22" extrusion and connect them. Lock the 22" extrusion by tightening the exposed Torx head with the supplied Torx key.

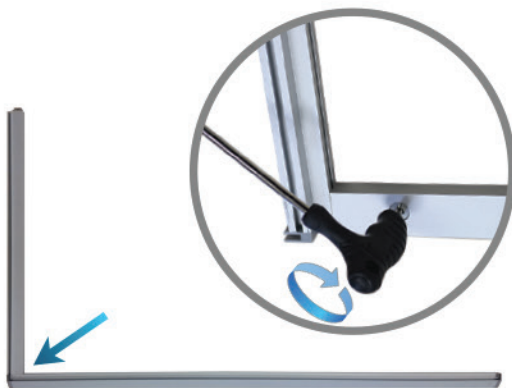

(1st FOLD HERE)

### Step 3

Continue until you have (1) complete perimeter, as shown above. Repeat the same process so that you have (2) of these completed.




### Step 4

Take (1) side and attach the remaining 22" extrusions.



### Step 5

Once you have the remaining 22" extrusions locked in place (shown below), you are now ready to place the 2nd side that was completed in Step 3 on top.

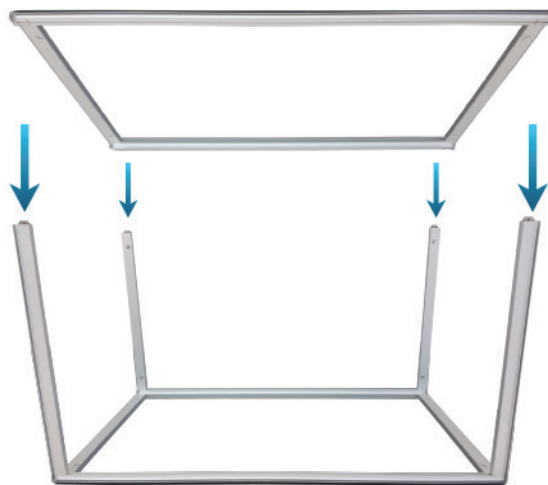

### Step 6

Tighten/lock the top and rotate the frame on to its vertical side (shown below). The frame is ready to have the graphics and acrylic counter installed.

