## RNG-0804

## SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
- 2. CONNECT SIDE TUBES
- 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE 4. CAREFULLY REMOVE FABRIC COVER FROM BAG
- 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
- 6. PULL COVER CAREFULLY UP TO THE TOP
- 7. CLOSE ALL ZIPPERS
- 8. ADJUST FABRIC AROUND THE FRAME
- 9. CONNECT CABLE HARNESS TO THE EYEBOLTS
- 10. COMPLETELY TIGHTEN THREADED CONNECTORS

## BREAK DOWN INSTRUCTIONS:

REVERSE SET-UP STEPS TO BREAKDOWN FRAME


## FABRIC CARE INSTRUCTIONS:


- 1. UNZIP COVER ZIPPERS
- 2. CAREFULLY REMOVE FABRIC COVER
- 3. CLOSE ALL ZIPPERS
- 4. FOLD OR ROLL NEATLY
- 5. PLACE FABRIC IN COVER BAG

QTY	CODE	DESCRIPTION
12	RNG-08-T1	TUBE FOR 8' DIAMETER RING HANGING FABRIC STRUCTURE
6	SPDR-30-C-4	30MM CURVED SPREADER FOR
9	TC-30-T	T JUNCTION FOR 30MM TUBING
3	TC-30-T-EYEBOLT	T JUNCTION FOR 30MM TUBING

TOTAL WEIGHT:35.5 (lbs)

MAX SIZE:46.8 (in) HARDWARE:19.7 (lbs) GRAPHIC:13.9 (lbs

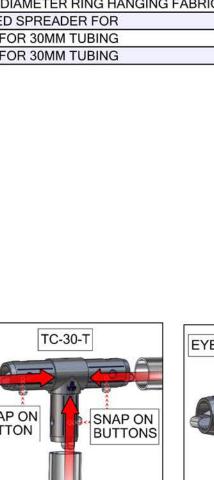

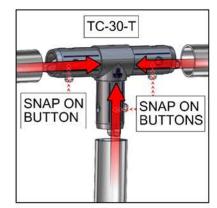




TC-30-T-EYEBOL

TC-30-T-EYEBOLT

SPDR-30-C-4

RNG-08-T1

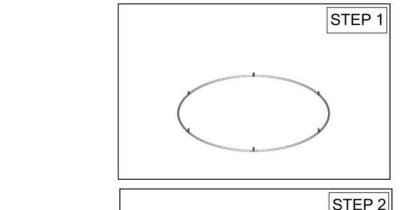

TC-30-T-EYEBOLT

NOTE: SNAP BUTTONS FACE

THE SAME WAY

