
TNFB Instructions

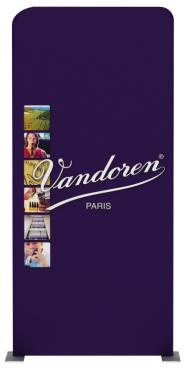

Setup Instructions

1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.


2. Make sure that all the corresponding numbers are correct.


3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.

4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.

5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.

6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

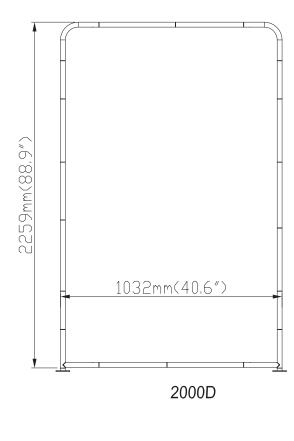


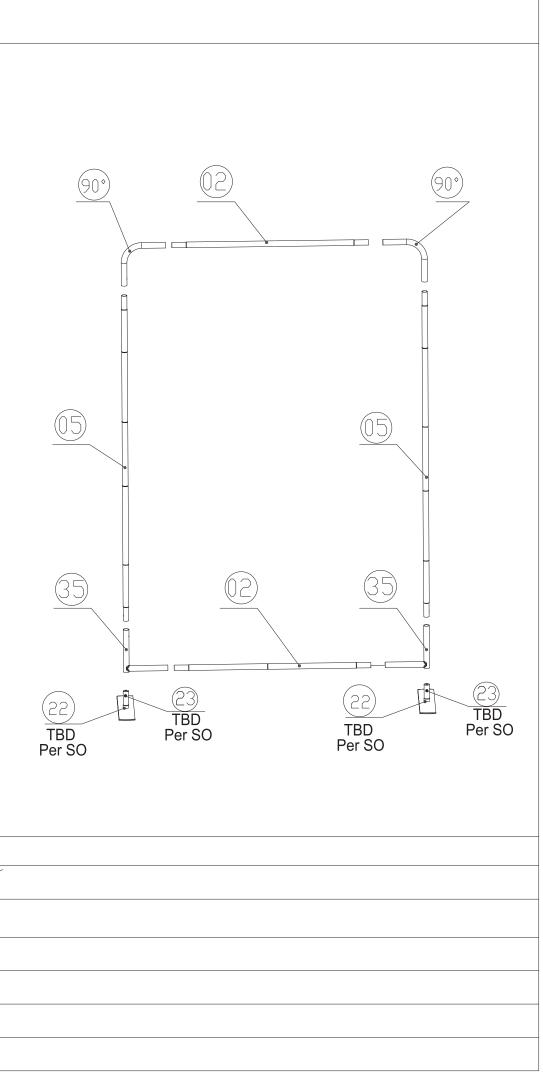

Frame		Frame			Frame			Frame			Frame		Frame)	
35	2	23	TBD Per SO													
05	2															
02	2															
(22)	TBD Per SO															
90°	2															
NO.	Quantity Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirr

Monitor Stand

Single Monitor Stand							
Qty.	Part Number						
2	WLM#035						
2	WLM#090						
2	WLM#005						
2	WLM#076						
1	Black Cotton Bag						
1	WLM#124						

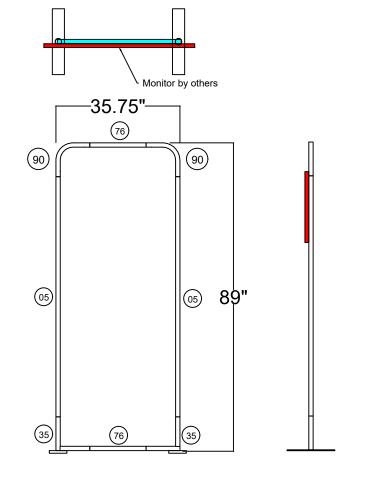

Monitor Bracket

Front View


Side View

Front View

How to attach monitor to WLM-SMS36089:

- * Assemble both frames and put graphics on front panel
- * Make sure to keep monitor bracket WLM#124 assembled while determining location on WLM-SMS36089
- * Remove Monitor Bracket from Horizontal bars
- * Position WLM-SMS36089 behind graphic frame
- * Press Fabric against WLM-SMS36089 locating bolts that secure monitor
- * Take Sharp or Hot knife and puncture a slit into fabric, front and back panels where holes for the bolts are located
- * Fabric will not run or frail where cut
- * Press Monitor bracket onto front of fabric panel and Press bolts thru fabric, then tighten



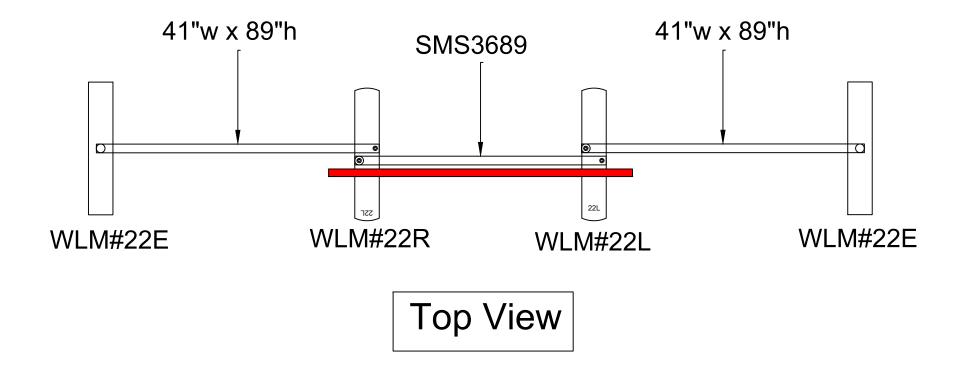

Case to Counter Setup Instructions



1. Hardcase with wheels and handle



5. Secure all 4 poles



2. Release fasteners



6. Cover the black skirt or graphic on the bottom



3. Get all parts out



4. Screw the poles into the case



7. Connect the top and poles



8. Place top on poles



9. Pull the black skirt or graphic up 10. Place countertop on display



