



Parts List

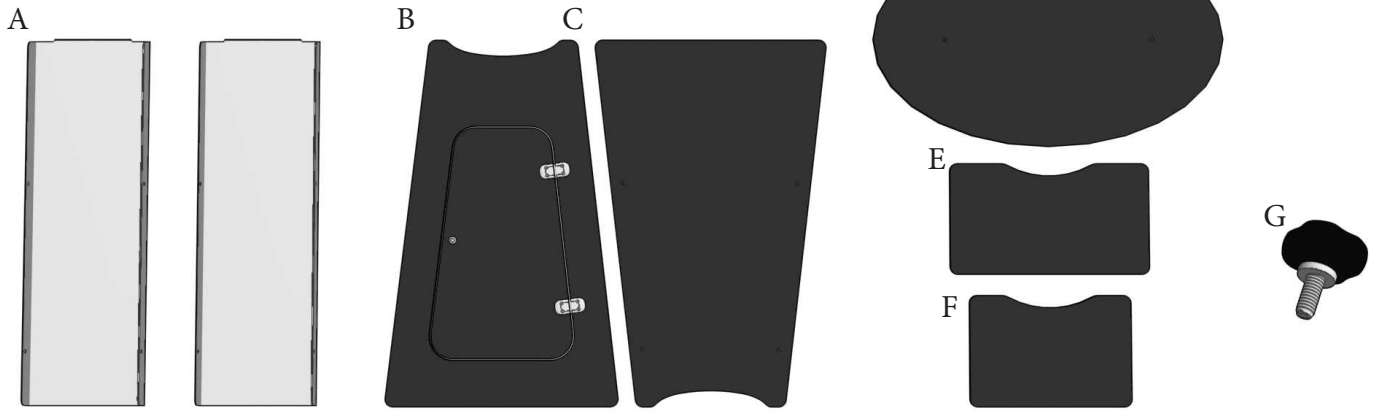

Step 1. Lay back(B) down attach left&right(A) dibond side using x2 Short Knobs(G) each.

Step 2. Tilt cabinet up; open door; attach front(C) to dibond sides using x4 Short knobs(G).

Step 3. Drop shelves(E&F) onto knobs.

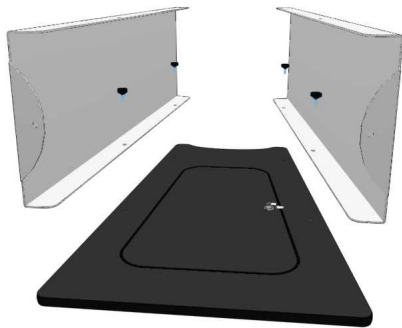

Step 4. With door open attach top(D) to dibond using x2 Short Knobs(G).

Complete

