WILL A DIGNITY LIFT FIT IN MY BATHROOM?

DIGNITY LIFTS TOILET LIFTS FIT IN ALMOST ALL BATHROOMS. HERE IS HOW TO MEASURE YOURS.



Check these things:

How far is your toilet from other things, like side walls, a tub, or vanity? The DL1, BL1, and WL1 lifts all need 24" of width, so your toilet needs to have 12" of

clearance from the center-line of the toilet to any obstruction. (see picture below). Our CL1 needs 14" of clearance on each side.

Does the bathroom door need to swing there? The swing of the door might interfere with your toilet lift. Measure 6 inches in front of your toilet's bowl and then be sure there is 24" of width available there.



MOST BATHROOMS WILL FIT A LIFT.



Like most modern bathrooms, this one has plenty of space for Dignity Lifts.



Like most modern bathrooms, this one has plenty of space for Dignity Lifts.



Most commercial bathrooms are ADA compliant, so they have lots of space, most can even fit our Commercial lift.



This bathroom has lots of room. You might have to push that toilet brush holder back into the corner, but otherwise, this is great.



Even green bathrooms can fit a toilet lift.

THESE EXAMPLES WILL NOT FIT A LIFT.



This bathroom is so small that the entire thing is inside the shower. Our lift cannot be doused with water, so this will not work.




This toilet appears to be too close to that wall to fit a lift. As a reminder you need at least 12" of length from the center line of the toilet to the wall. That base molding looks a lot closer than 12".



The toilet nook in this bathroom is far too narrow to put a lift in there. The nook needs to be at least 24" wide.



This toilet is too close to the bath tub to fit a toilet lift. A toilet lift won't fit in that narrow space.

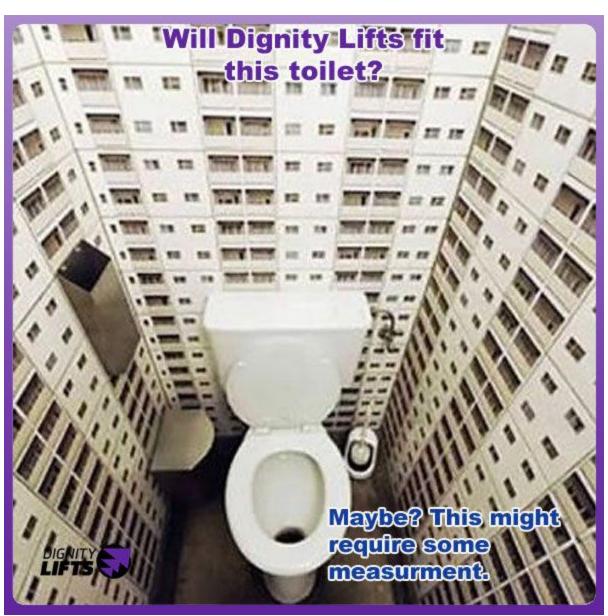

Without measuring we aren't sure if Dignity Lifts will fit in this bathroom, but we are fascinated with that wallpaper! Our initial guess would be that you would need to remove that shelf to provide clearance.