


ASSEMBLY INSTRUCTIONS FOR

112099


STEP 1 : Put granite glue on the wood cabinet edges then onto the granite top underside.

STEP1

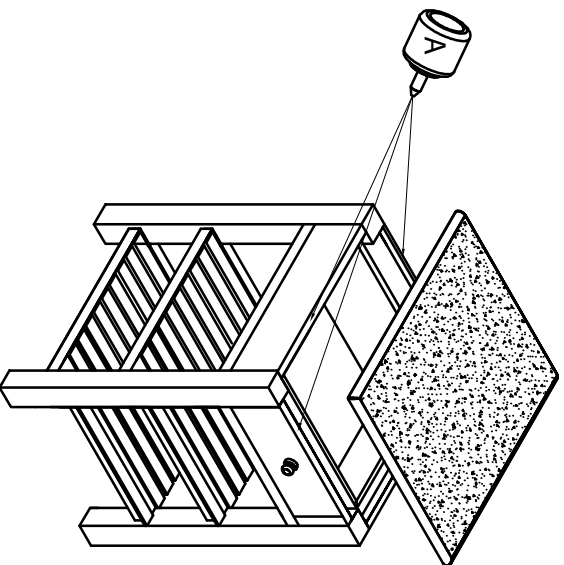

STEP 2 : Lower the granite top onto the wood cabinet. Press down firmly and fill any gaps between the wood cabinet & granite top with more glue.

STEP2

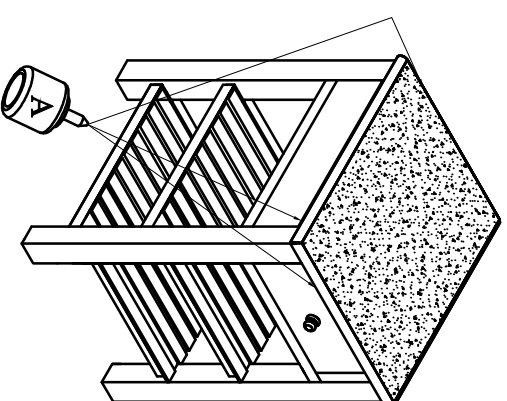

A



Granite Glue

1pc