

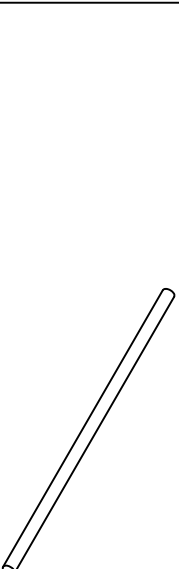
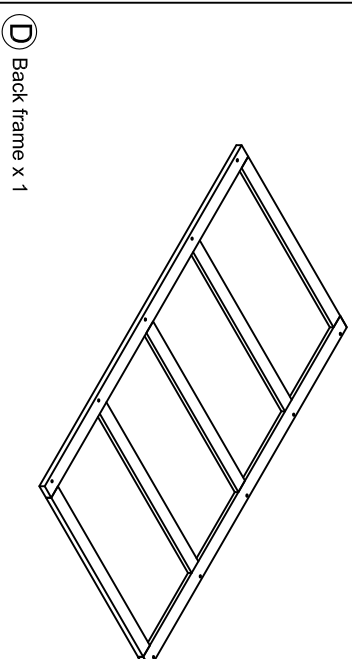
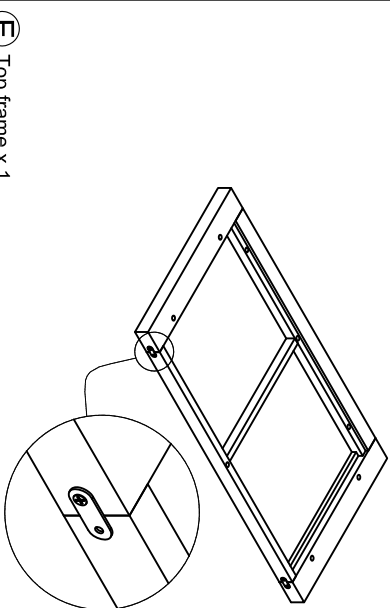
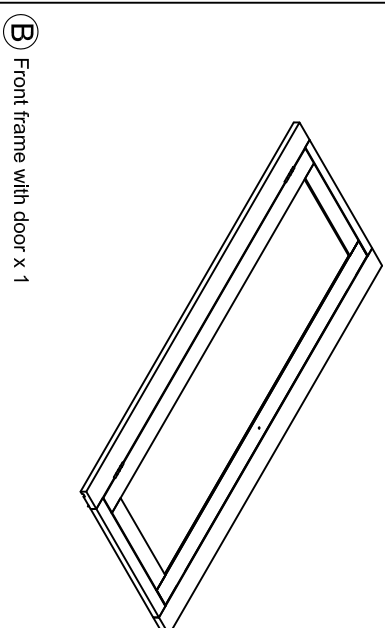
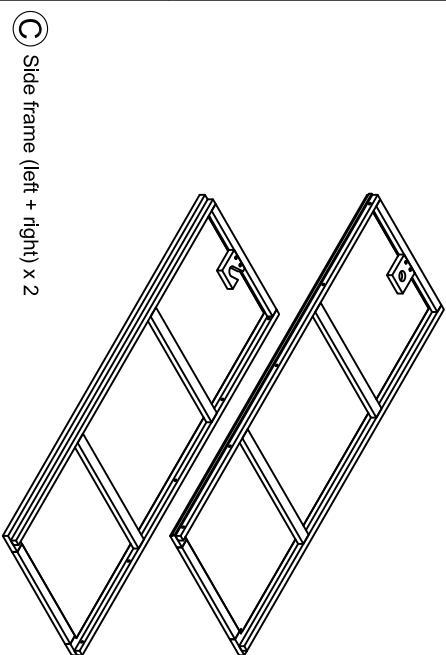
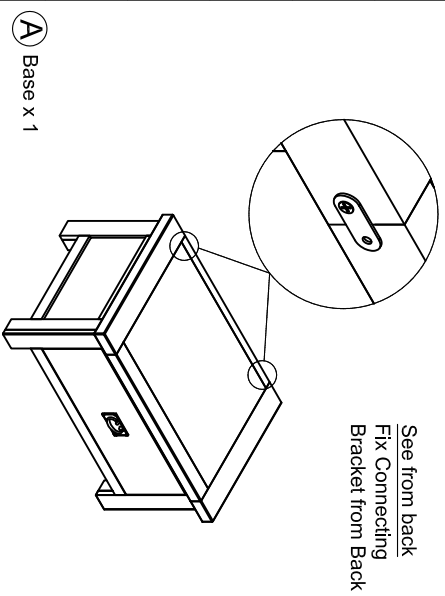



ASSEMBLY INSTRUCTION SINGLE WARDROBE

No	Name of Hardware	Q.ty
1	Bolt M6 x 35	10
2	Screw M5 x 30	18
3	Screw M4 x 15	6
4	Screw M4 x 45	3
5	Wood dowel Ø10 x 30	1
6	Handle with bolt	1 (Set)
7	Allen key	1
8	Washer Ø7/Ø15 x 1	10
9	Bracket	2
10	Tie	1
11	Screw M4 x 35	2

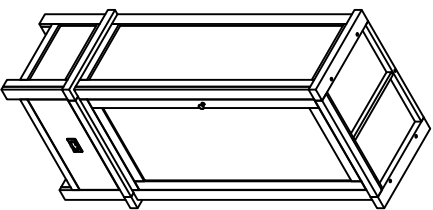


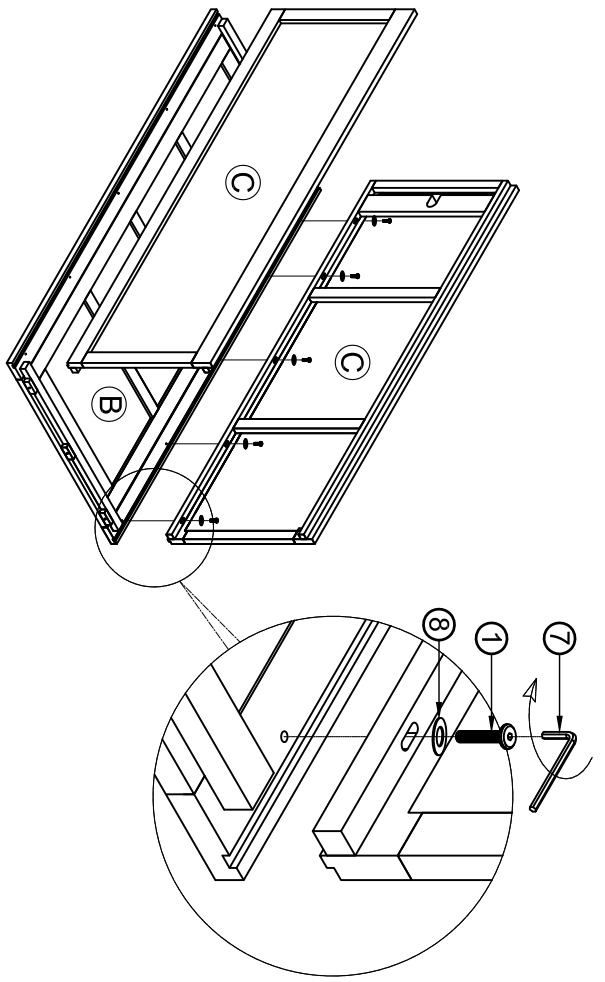


Step 1

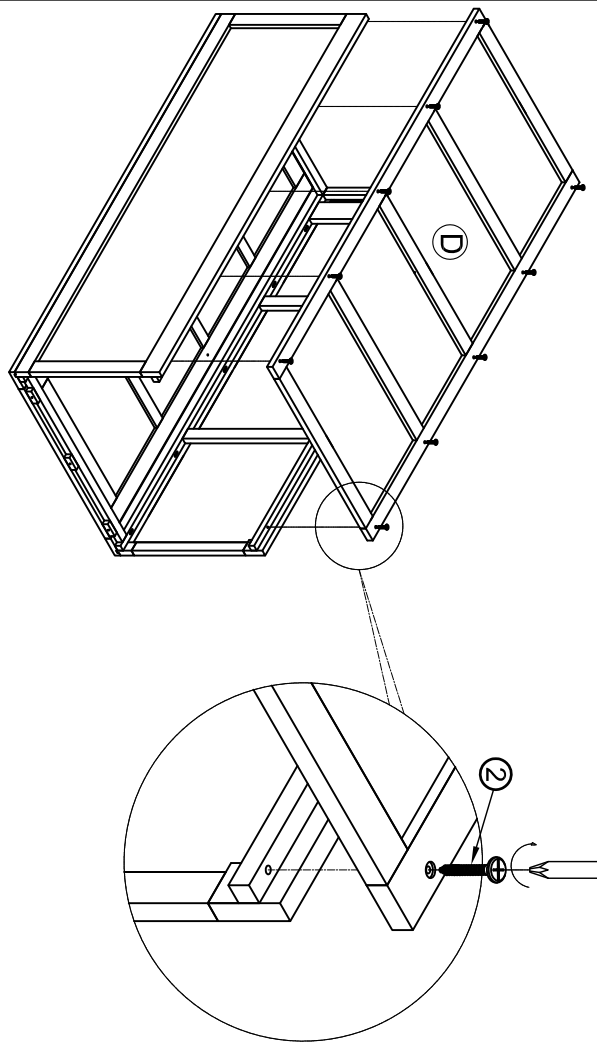





Step 2

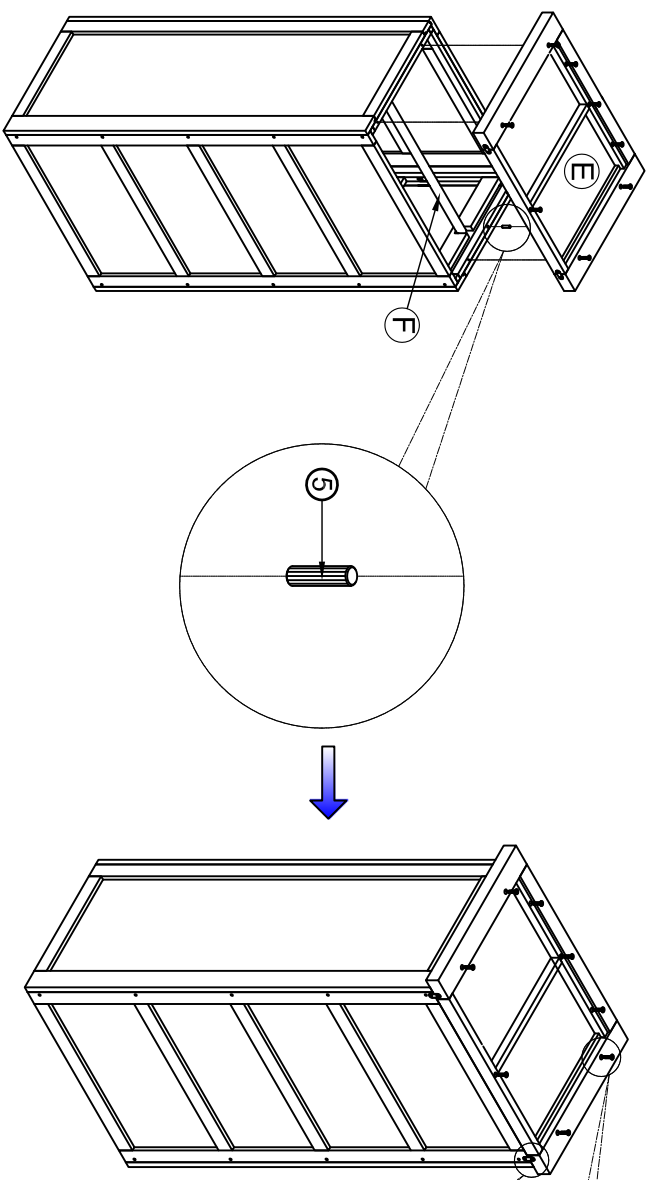



Step 3

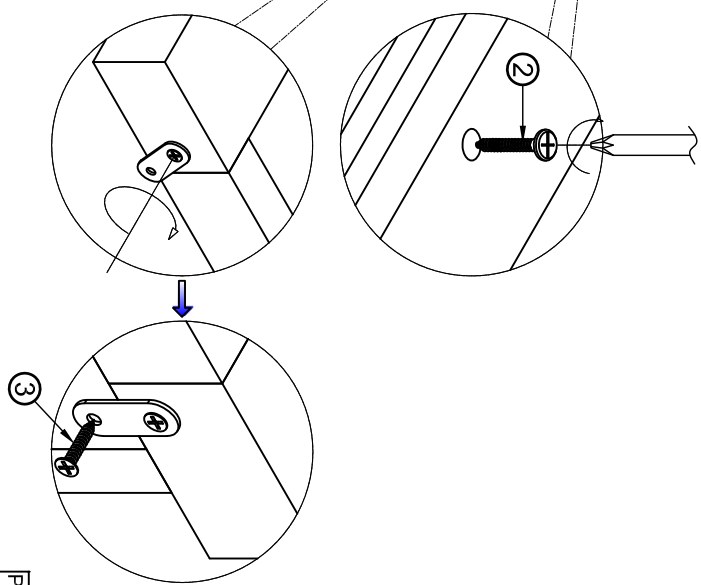


Step 4

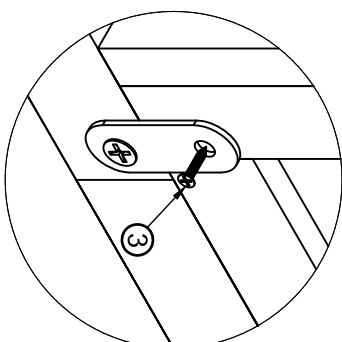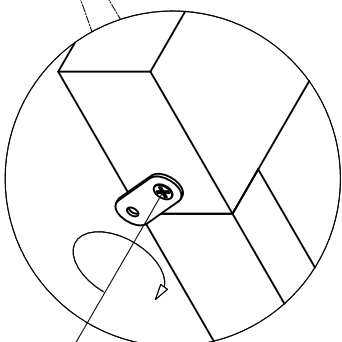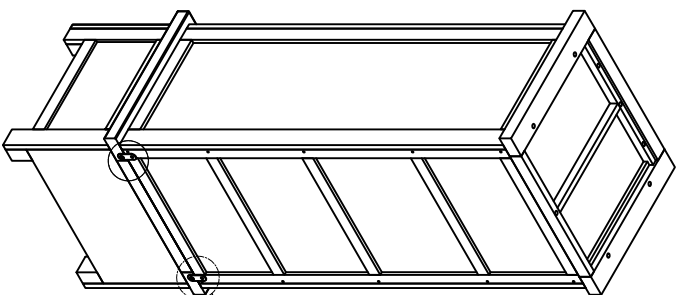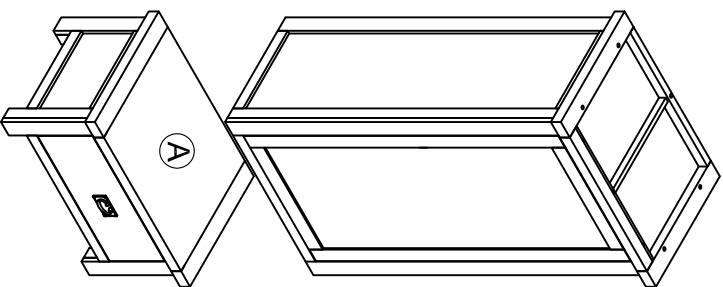






Step 5

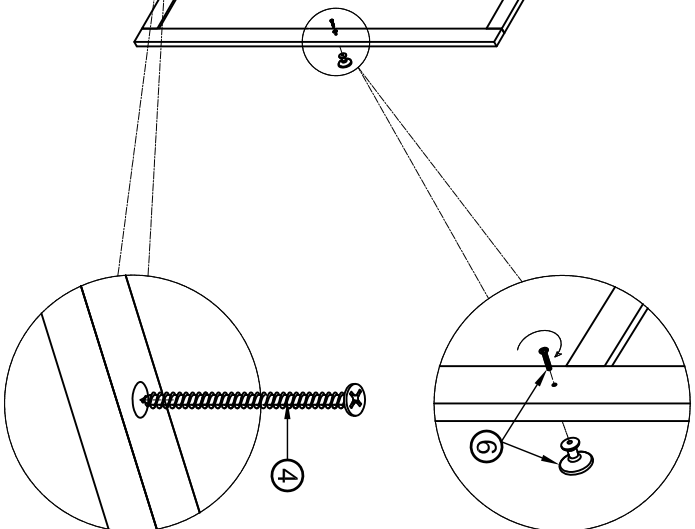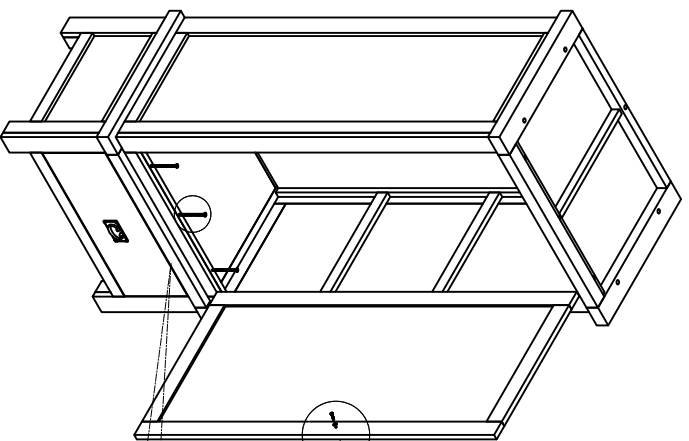

Step 6

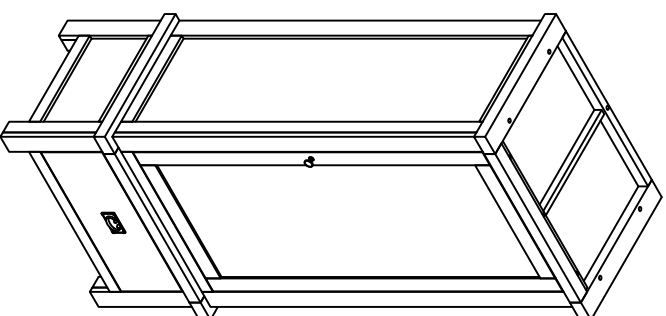

Step 7

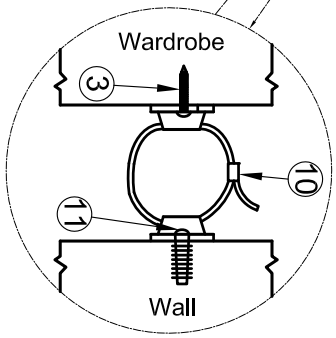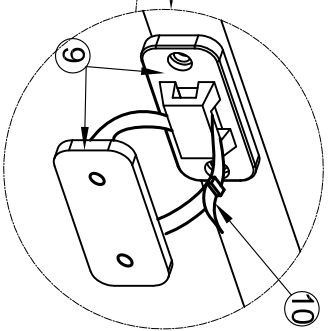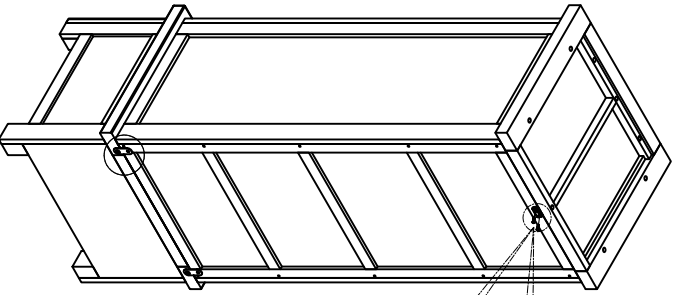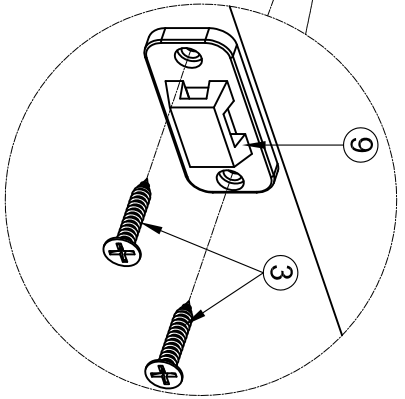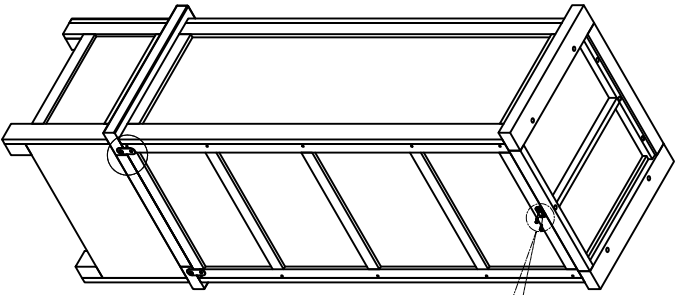

FINAL