


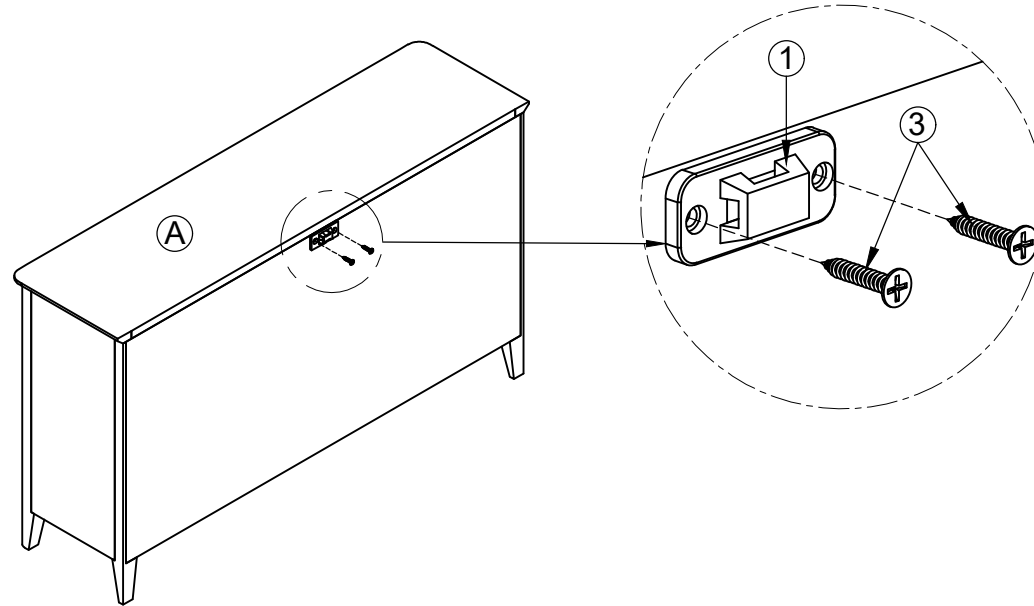


# ASSEMBLY INSTRUCTION

## G5731 - 3 DOOR LARGE SIDEBOARD

No	Name of Hardware	Q.ty
①	Bracket 	2
②	Tie 	1
③	Screw Ø4 x 20 	2

### STEP 1



### STEP 2

