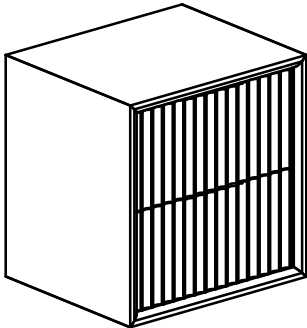
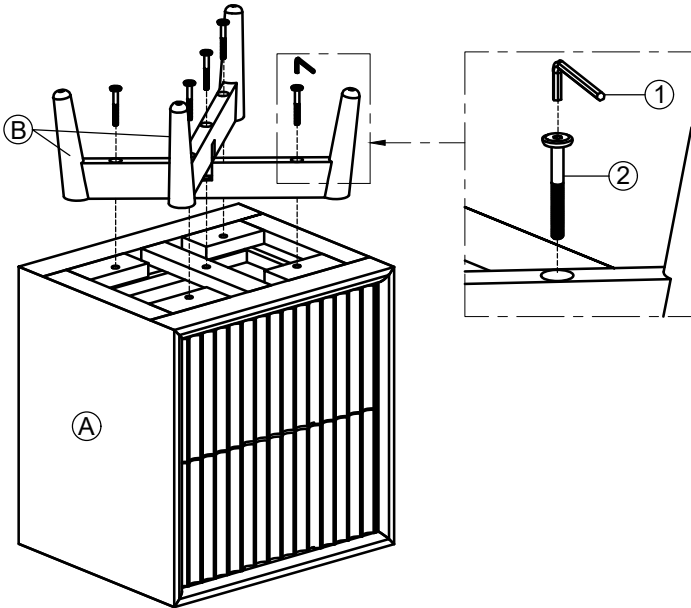
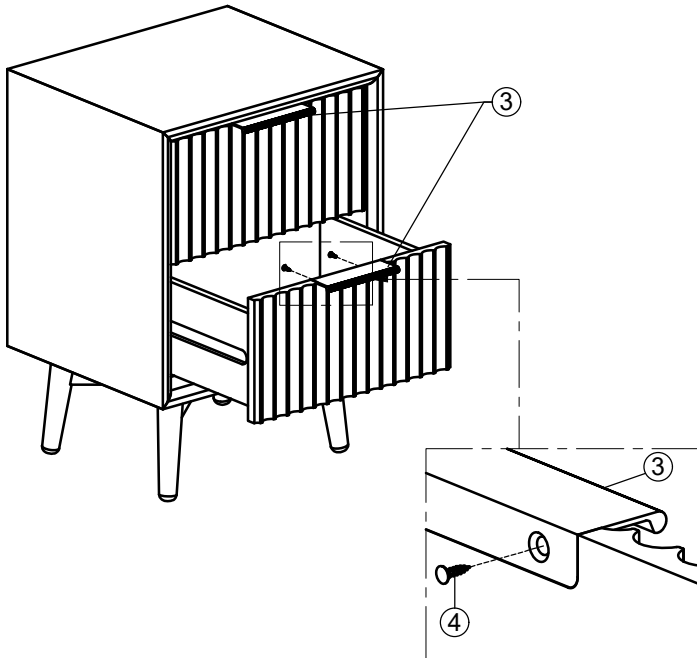
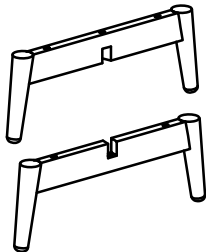

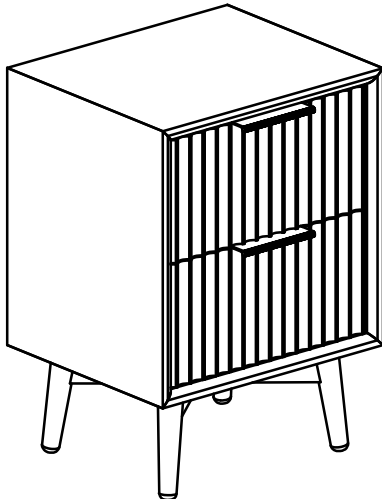





ASSEMBLY INSTRUCTION

G6912 - NARROW BEDSIDE

No	PARTS NAME	Q.ty (pcs)	STEP 1		STEP 2
Ⓐ	<div></div> <div>Narrow bedside</div>	1	<div></div>		<div></div>
Ⓑ	<div></div> <div>Legs Frame</div>	1 Set			
No	LIST OF HARDWARE	Q.ty (pcs)	FINAL		
①	Bolts M6x60 	5	<div></div>		
②	Allen key K4 	1			
③	Handles 	2			
④	Flat screw Ø3.5 x 12 	4			
Screwdriver (not included) 