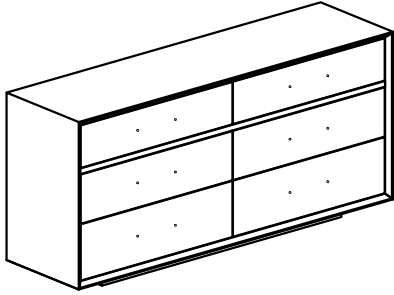
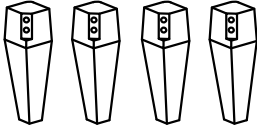



ASSEMBLY INSTRUCTION

CHEST 6 DRAWER


Page : 1 of 2

No	PARTS NAME	Q.ty (pcs)
(A)	 Cabinet	1
(B)	 Legs	4
No	LIST OF HARDWARE	Q.ty (pcs)
(1)	Bolts M6x50 	8
(2)	Spring Washers M6 	8
(3)	Flat Washers M6 	8
(4)	Allen key K4 	1
(5)	Anti tipping kits 	1 Set

STEP 1

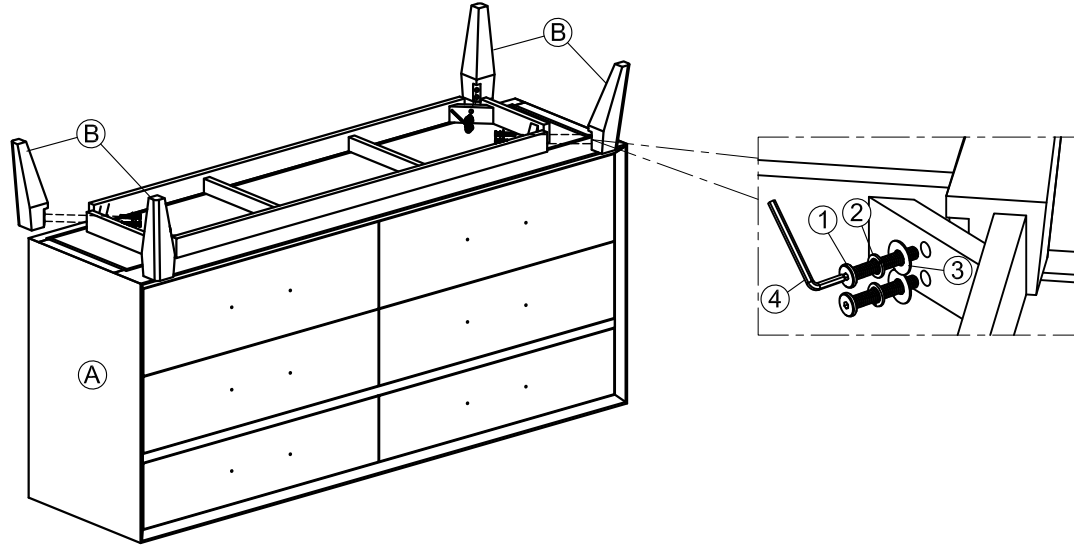

STEP 2

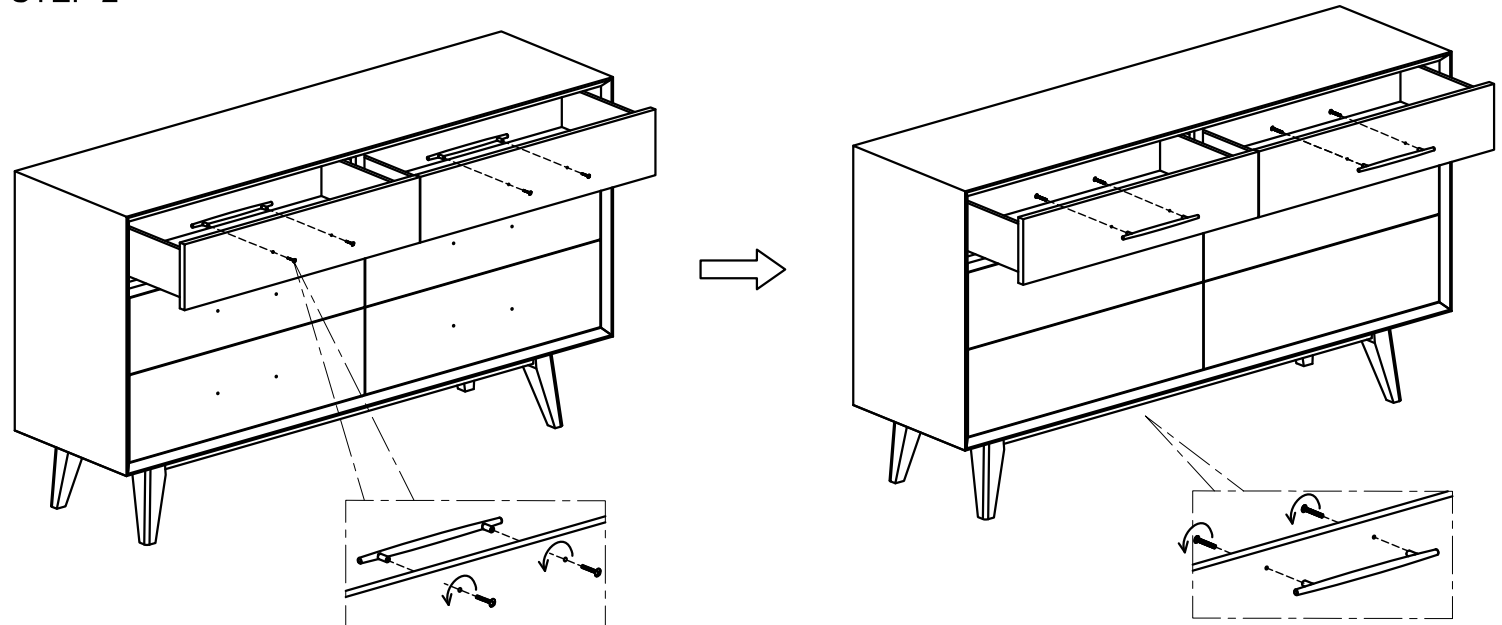


ASSEMBLY INSTRUCTION

CHEST 6 DRAWER

Page : 2 of 2

STEP 3

Assemble the tipping hardware with the back stretcher.

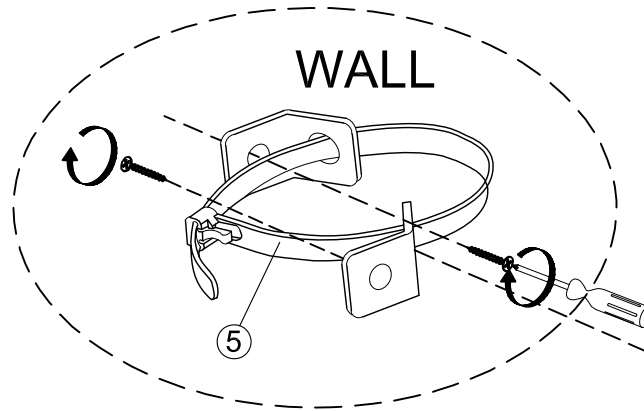

Remark: Tipping hardware attached to the back panel

