












ASSEMBLY INSTRUCTION

GENTS WARDROBE 3 DRAWER


No	Hardware	Qty
1	Hinge set 	6
2	Flats head Screw Ø3.5 x 15 	24
3	Screw M 5x18 	10
4	Round head Screw Ø4 x 15 	36
5	Handle with bolt 	6
6	Bracket 	4
7	Tie 	2
8	Screw Ø4 x 20 	4
9	Plastic nut 	4

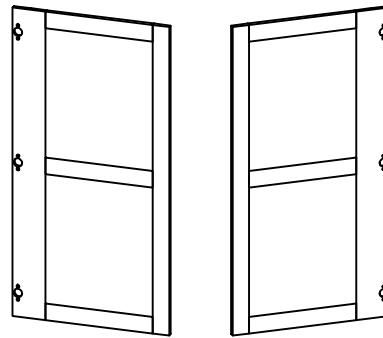


A x 2 (L-R) : Panel doors

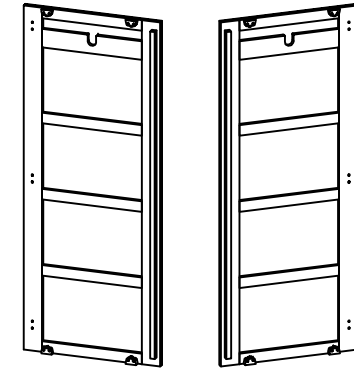


B x 2 (L-R) : Side panel

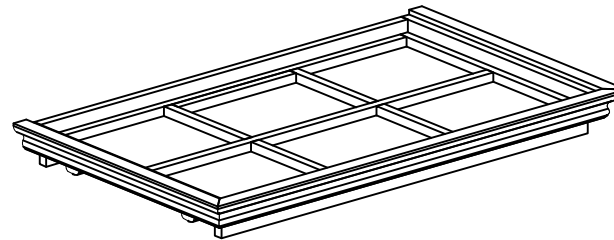



C x 1 : Top frame

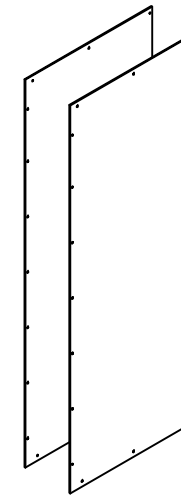


E x 2 : Back panels



F x 1 : Back vertical rail

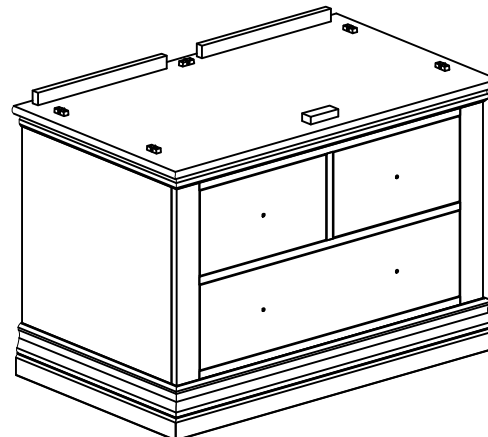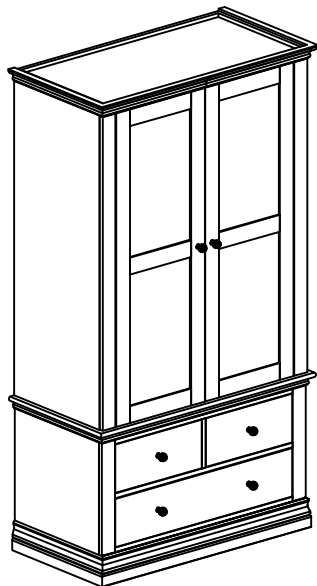

D x 1 : Base


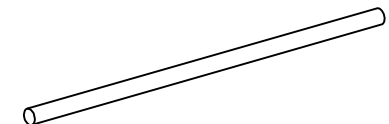


G x 1 : Hanging rail

ASSEMBLY INSTRUCTION



GENTS WARDROBE 3 DRAWER

STEP 1

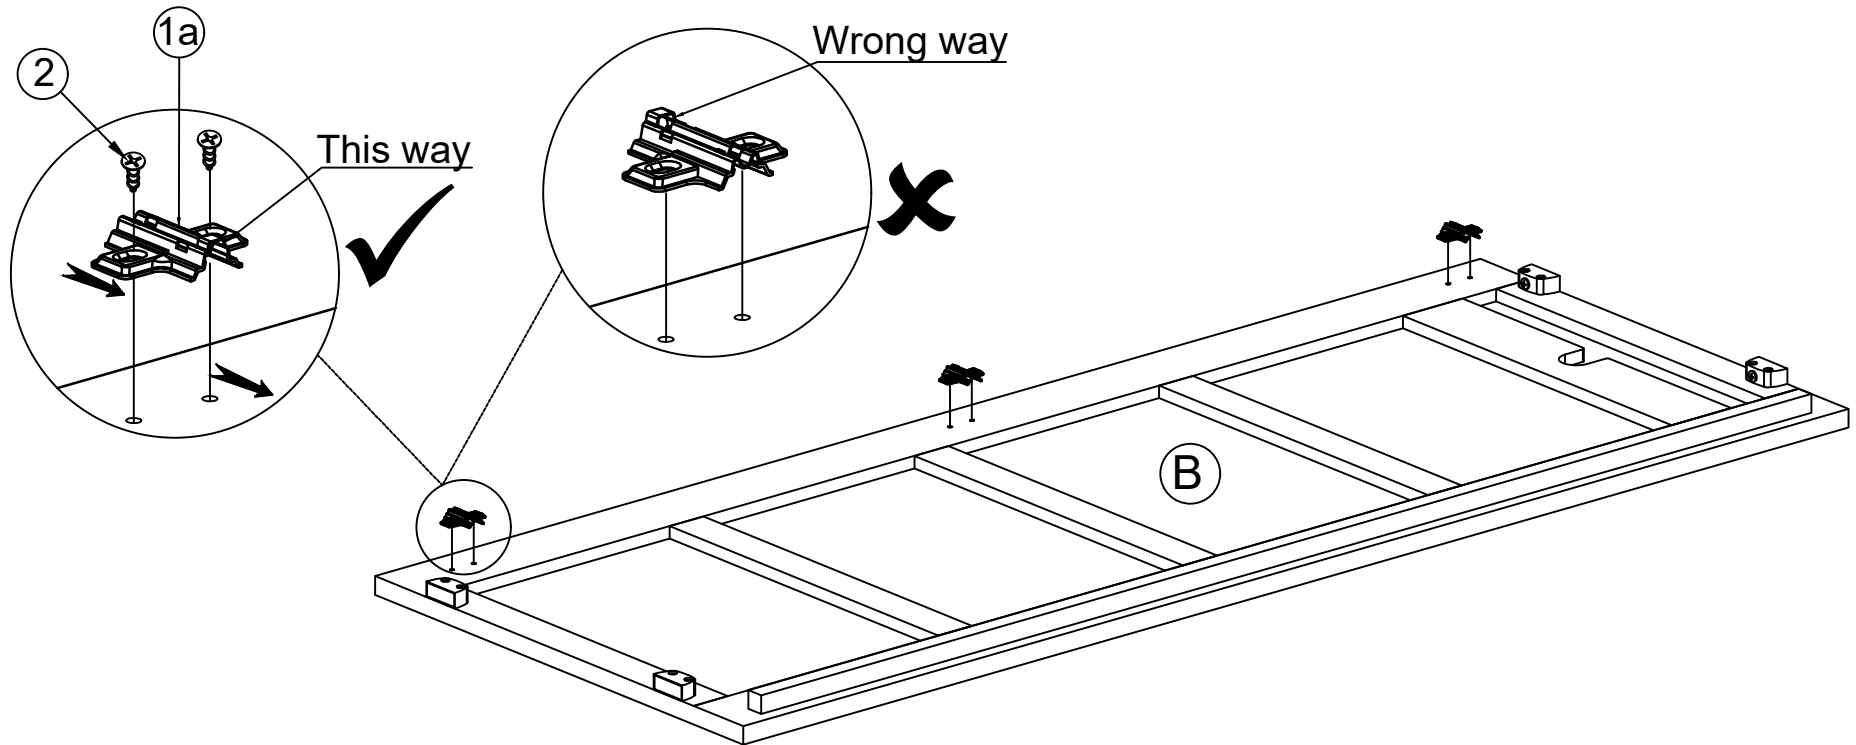
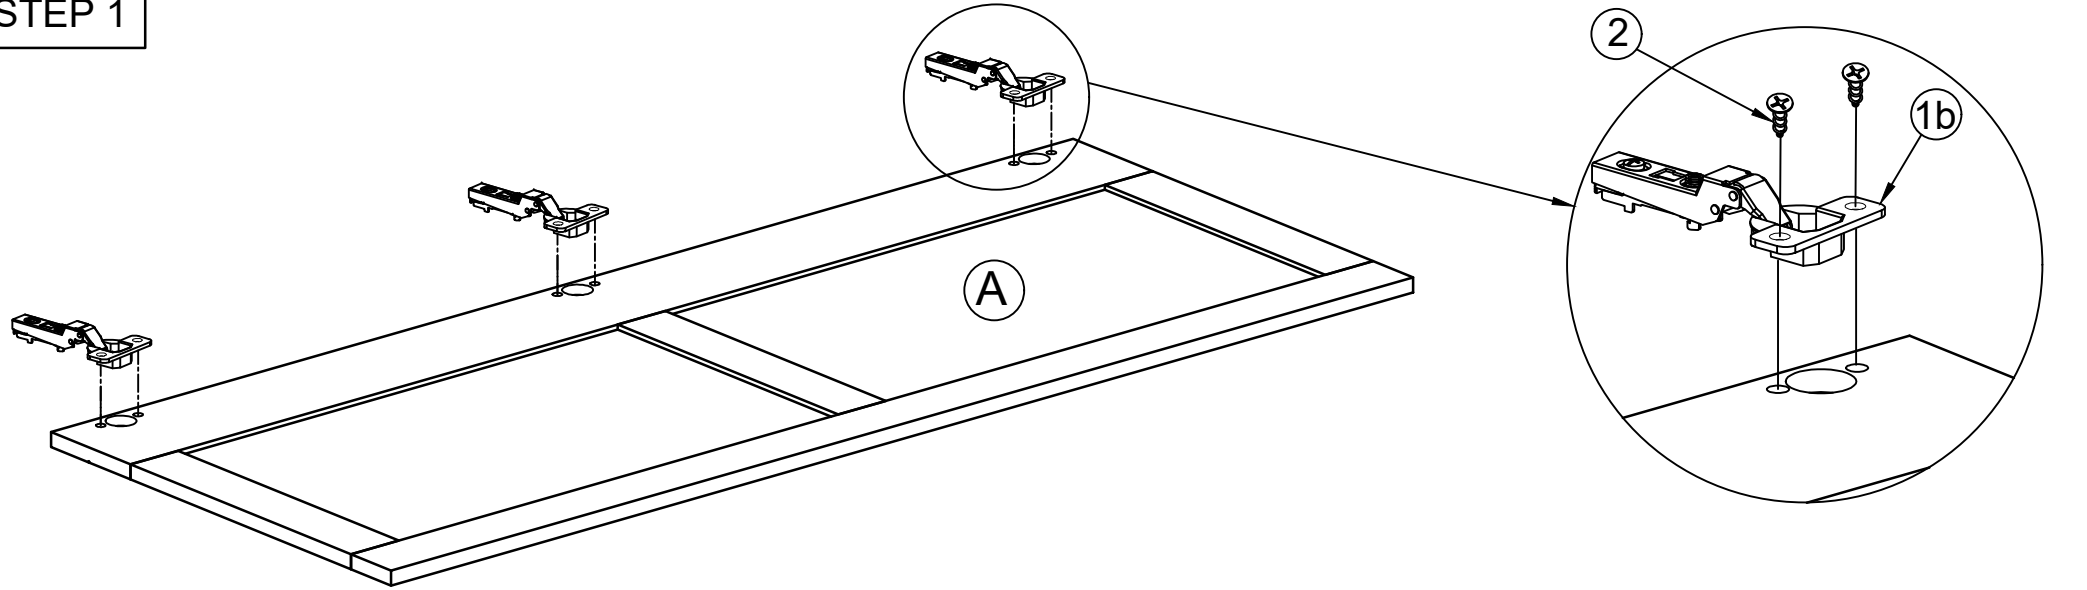


ASSEMBLY INSTRUCTION GENTS WARDROBE 3 DRAWER

STEP 2

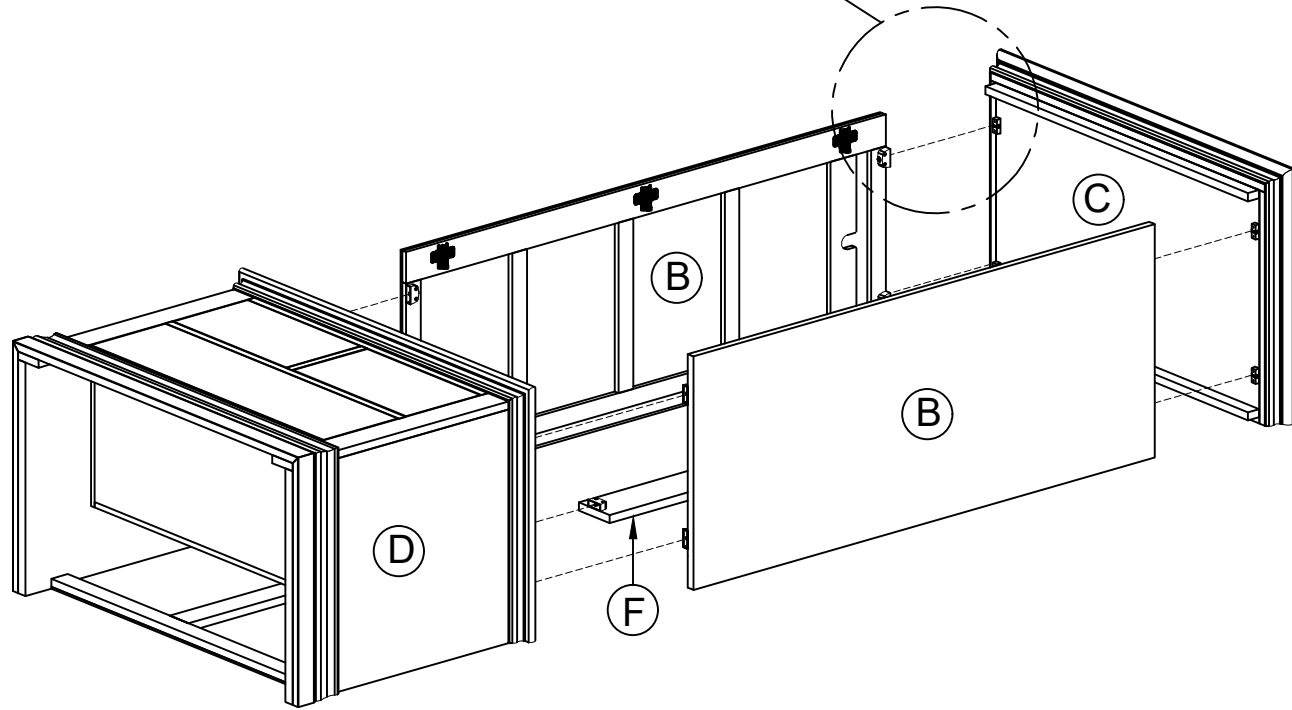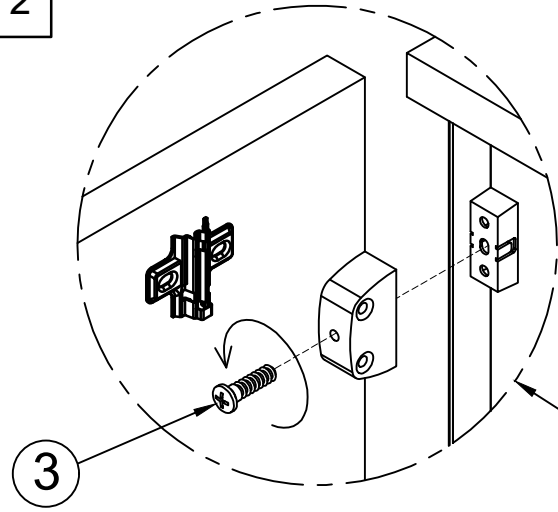


STEP 3

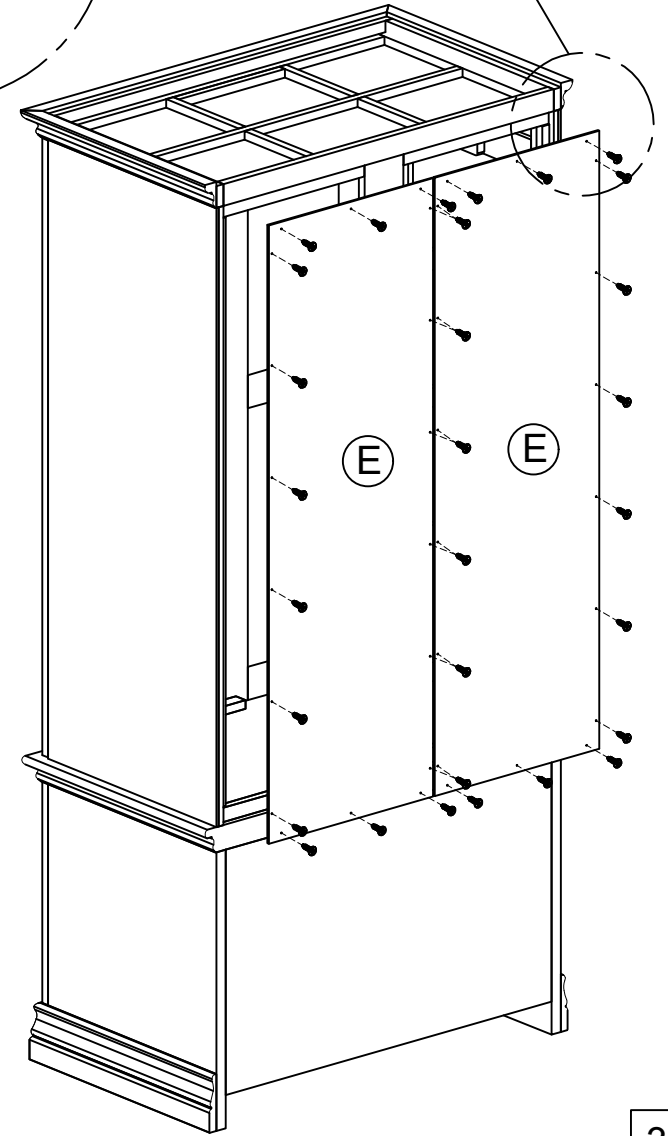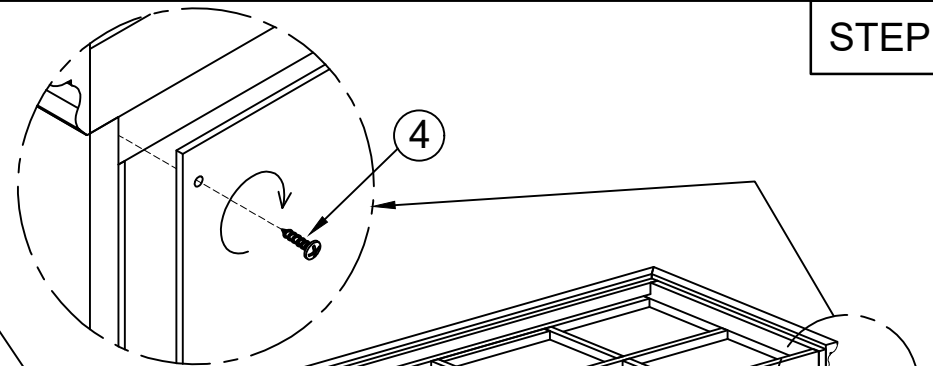


ASSEMBLY INSTRUCTION

GENTS WARDROBE 3 DRAWER

STEP 4

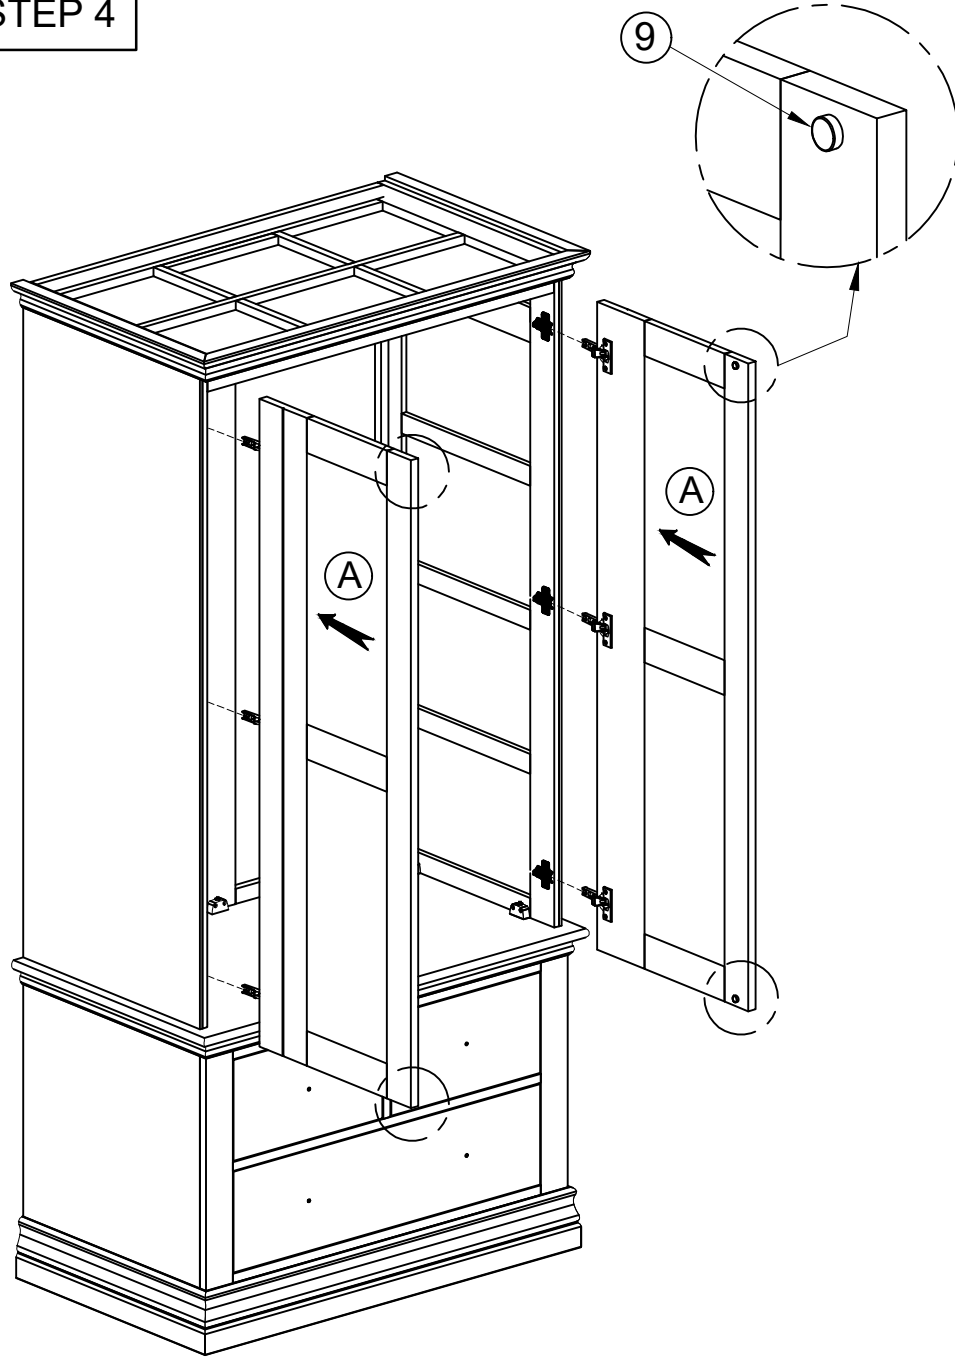


STEP 5

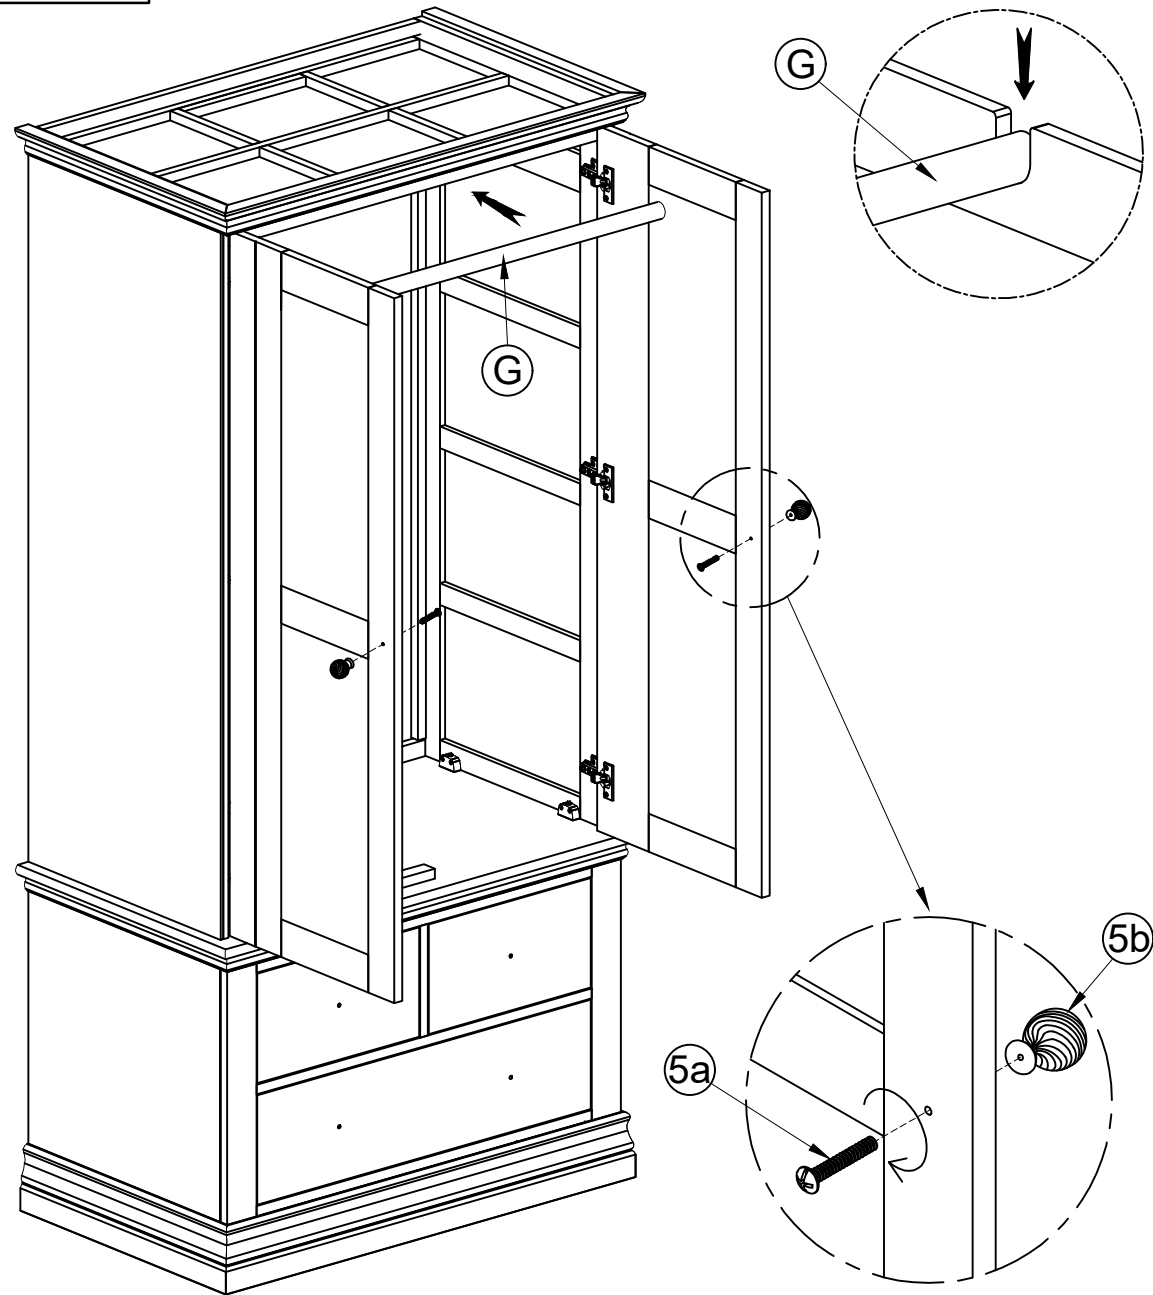


ASSEMBLY INSTRUCTION

GENTS WARDROBE 3 DRAWER

STEP 6

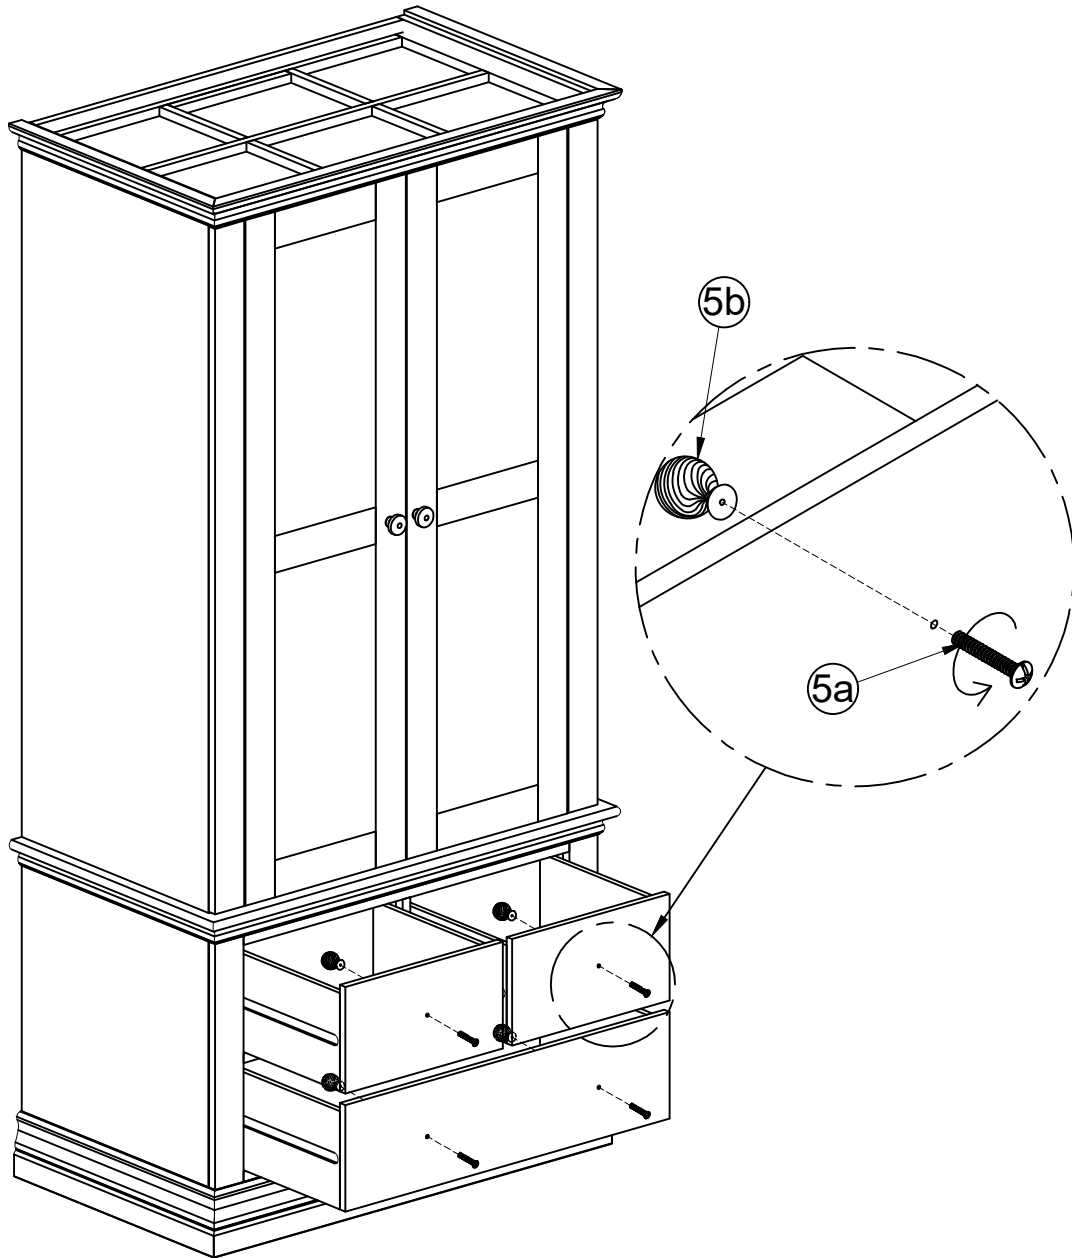


STEP 7

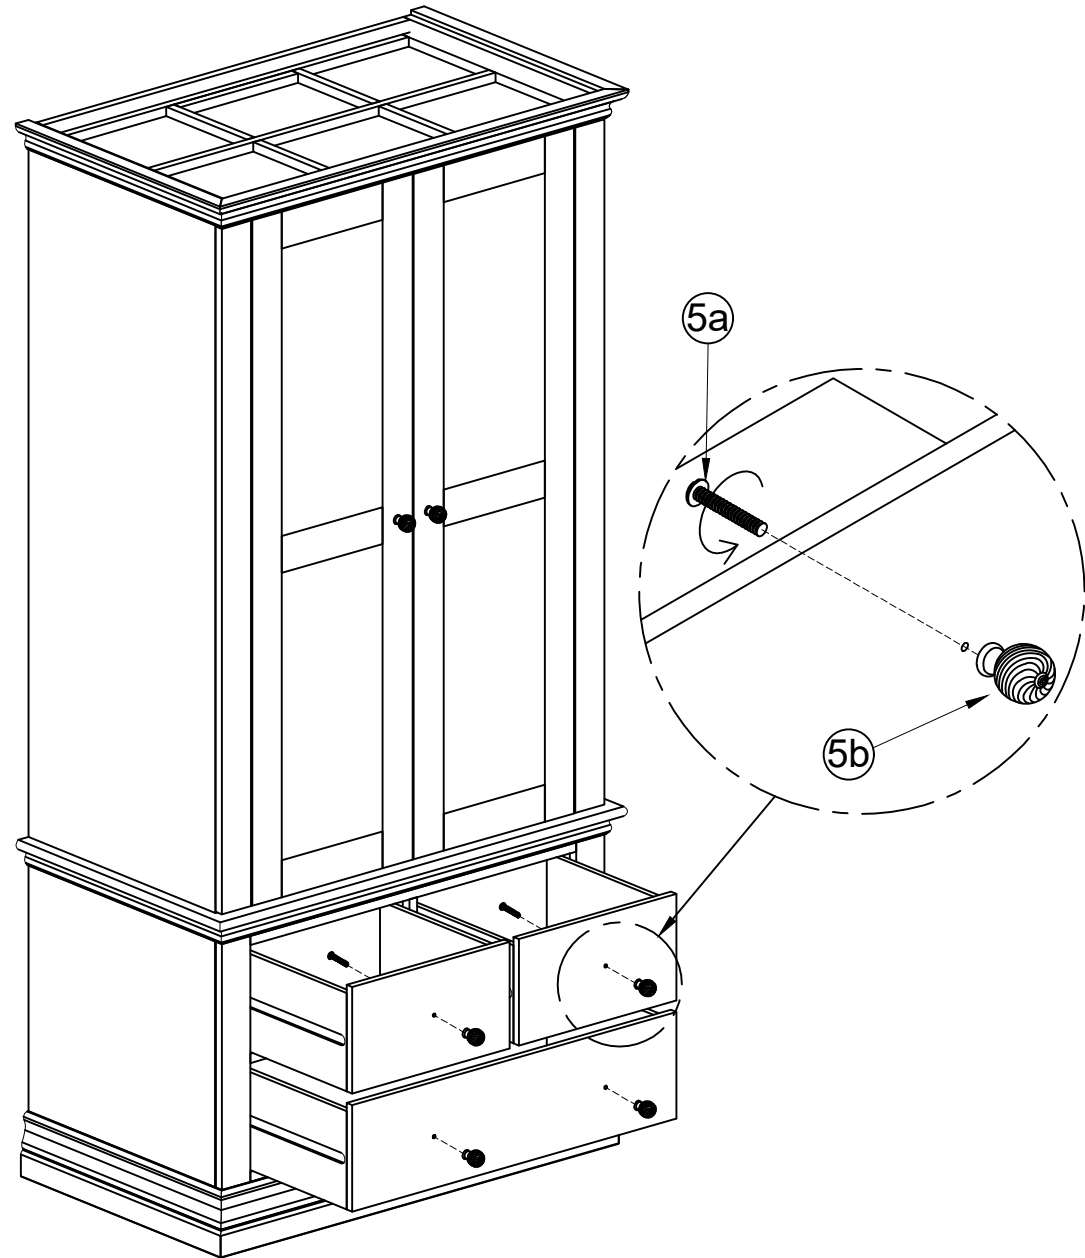


ASSEMBLY INSTRUCTION

GENTS WARDROBE 3 DRAWER

STEP 8

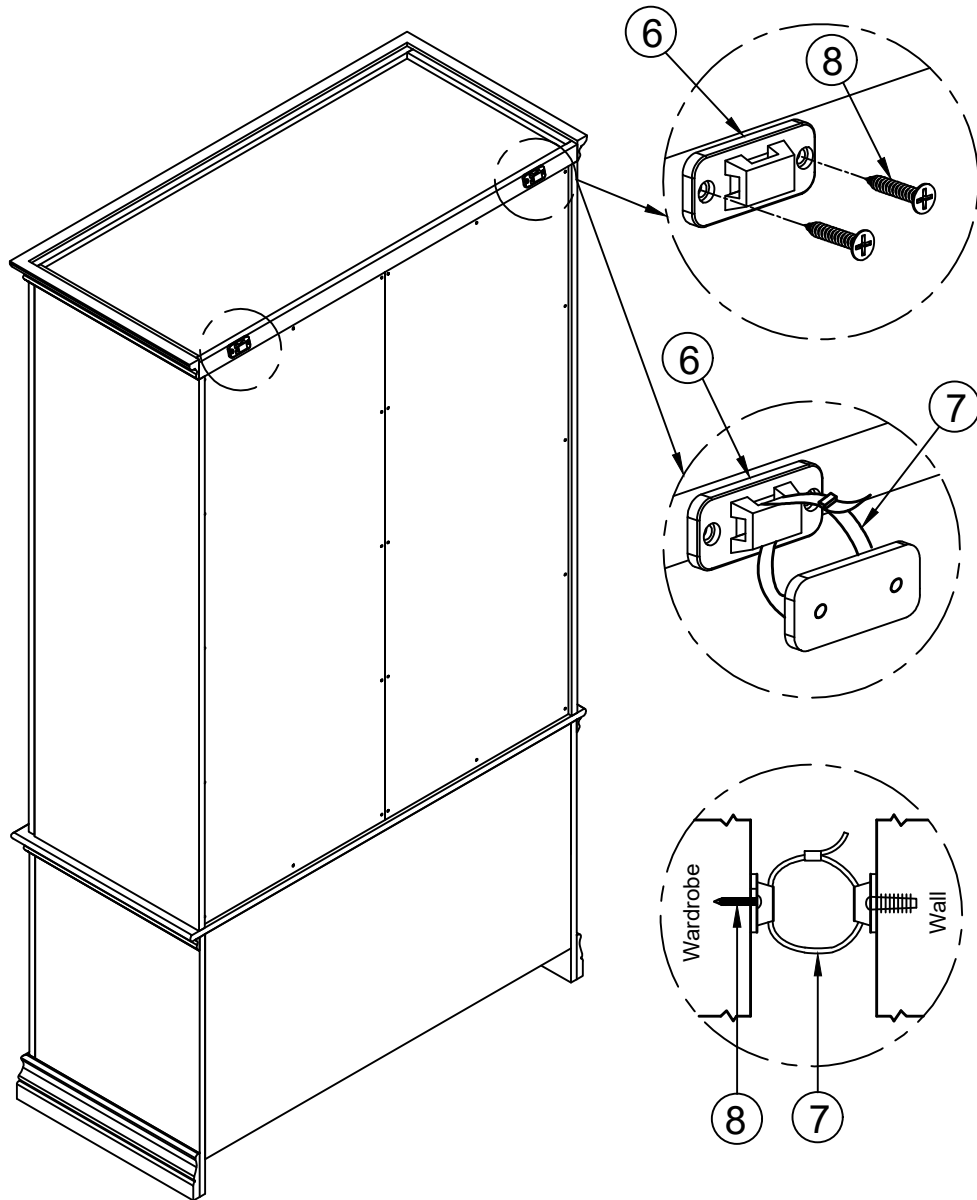


FINAL

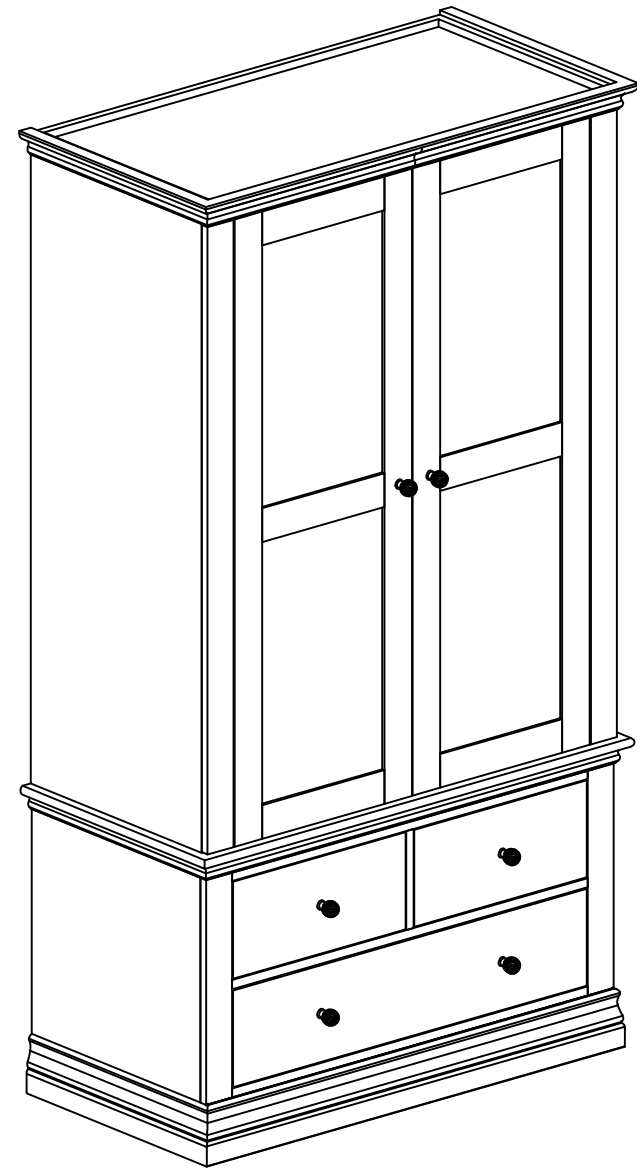

HINGE ADJUSTMENT INSTRUCTIONS


LATERAL ADJUSTMENT

by screw adjustment.

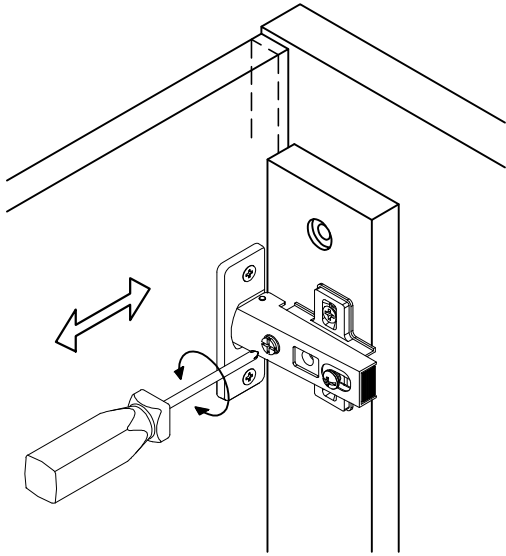


FRONT-TO-BACK

by slackening and retightening the hinge-arm mounting screw.

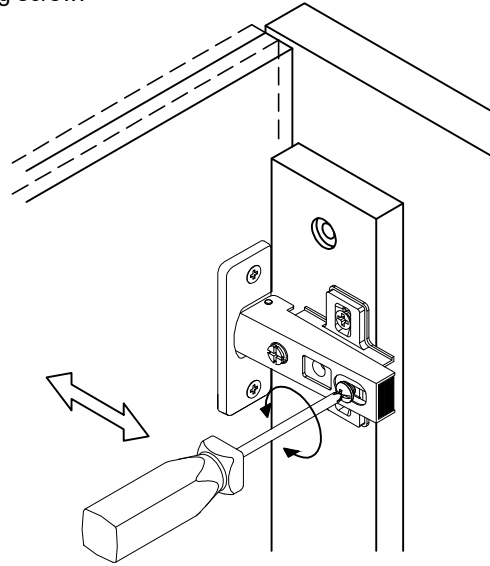


VERTICAL ADJUSTMENT

via slots on mounting plate by slackening and retightening the screws on mounting plate

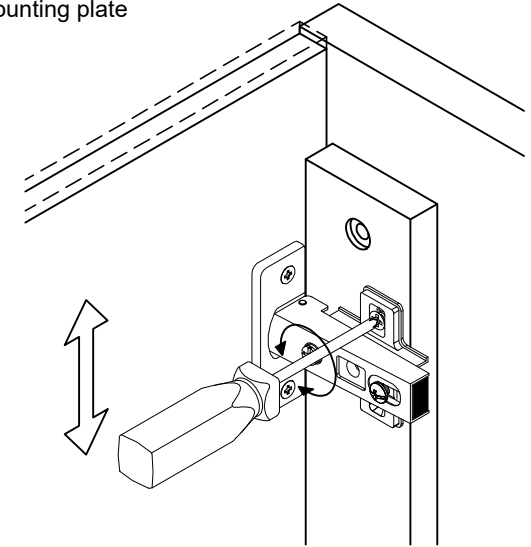

ASSEMBLY

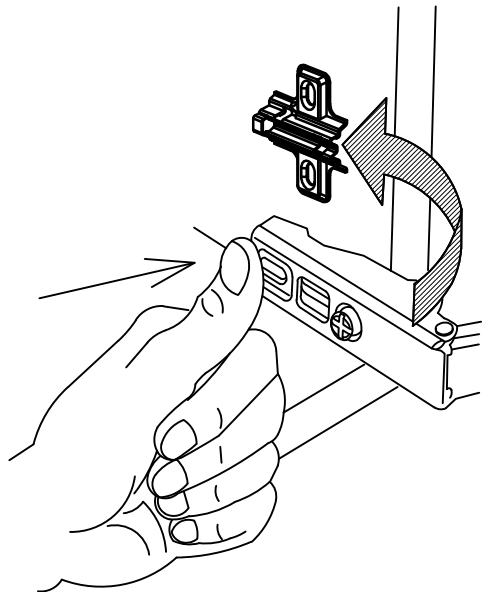

DISASSEMBLY

