

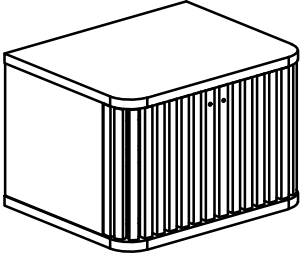
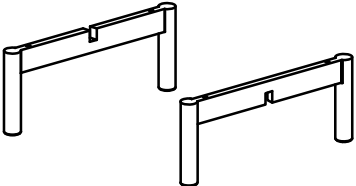
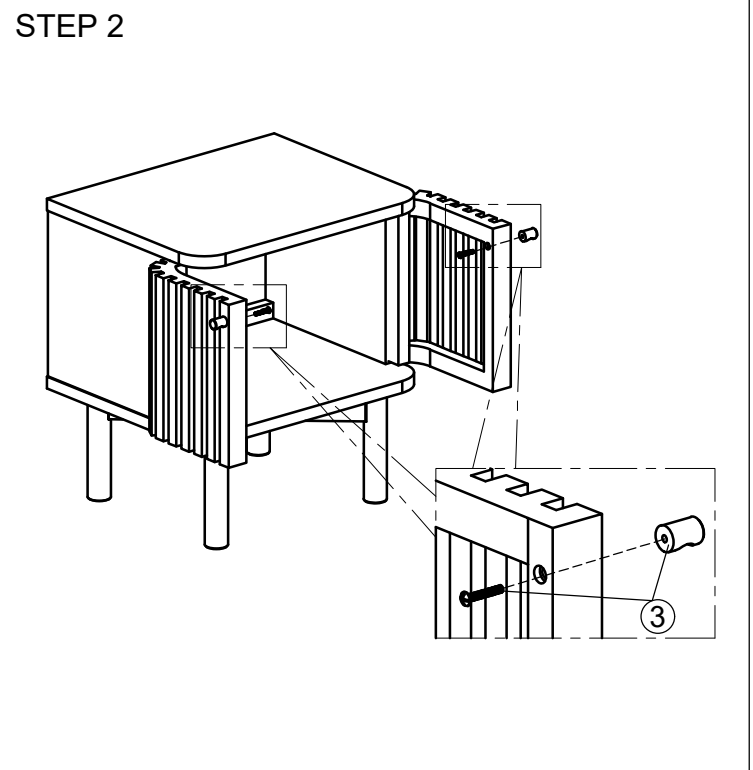


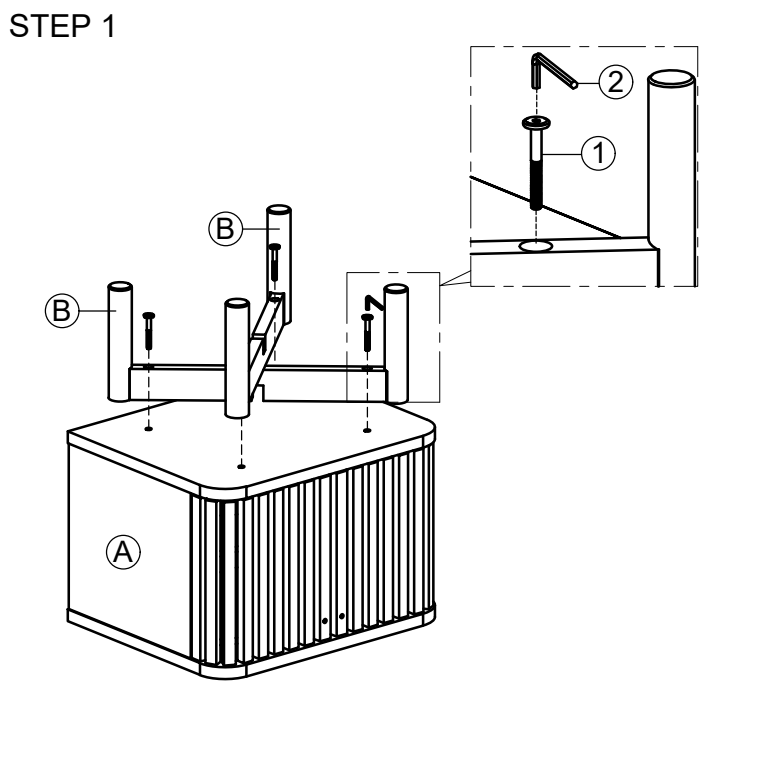

# ASSEMBLY INSTRUCTION

## G8068 - BEDSIDE

No	PARTS NAME	Q.ty (pcs)
A	 Cabinet	1
B	 Legs Frame	1 Set



No	LIST OF HARDWARE	Q.ty (pcs)
①	Bolts M6x55 	4
②	Allen key K4 	1
③	Handles with bolts 	2
Screwdriver (not included) 