

ASSEMBLY AND OPERATING
INSTRUCTIONS

LUGANO PREMIUM POLYCARBONATE
GAZEBO GREY 3x3m
MODEL: LUGGAZ3X3-GREY



www.royalcraft.co.uk

Produced in China for A. Mir & Co., Ltd.
© A. Mir & Co., Ltd.

LUGGAZ3X3-GREY

This Gazebo with curtains should only be used as a sunshade.

Make sure the product is fixed firmly to the ground or have a suitable weighted base to hold them in place. If not secured or weighted down they will move position in high winds.

Please be aware that this product is not a permanent structure and we recommend removing the curtains between October and March. These are the months when the weather will cause damage to the fabric.

Warning

1. It is the consumer's responsibility to comply with any relevant local planning requirements.
2. Two-Four persons are required for assembly. The tools required are a screwdriver or wrench, stepladder and other relevant safety items such as gloves. We recommend the use of protective equipment.
3. This gazebo will take at least 1-2 hours to set up. You must allow enough time to complete the assembly. Do not leave it unattended if not fully assembled, even if bolted to the ground.
 - A. Make sure that all components are in the box. Read instructions carefully before starting the assembly.
 - B. Follow all instructions carefully to assure the strength of the gazebo.
 - C. In order to avoid damage to the gazebo and its components, use appropriate tools. Do not use the structure as a support; a stepladder is recommended.
 - D. Check all screws on a regular basis to maintain the solidity of the structure.
 - E. Keep the instructions and parts list for further use.
4. The screws/bolts to anchor to a wooden deck and concrete patio are not included.
5. DO NOT REMOVE THE PROTECTIVE FILM ON THE POLYCARBONATE ROOF PANELS BEFORE INSTALLATION. MAKE SURE TO PUT THE UV PROTECTED SIDE FACING UP TO THE SUN. IT IS A VERY IMPORTANT PROCEDURE; IF NOT FOLLOWED AS DESCRIBED, YOUR ROOF WILL NOT BE COVERED BY THE GUARANTEE

Maintenance

1. In the event that your gazebo needs replacement parts, repairs or you require assistance with regards to assembly; please contact our customer sales team by email info@royalcraft.co.uk
2. For cleaning: Use a mild domestic soap or soft detergent and wash with warm water using a sponge or microfibre fabric. Rinse with clean water.
3. To preserve the fabric (curtains) we recommend the use of a UV protector spray like Fabsil. This will help block the harmful UV rays from damaging the fabric and will also keep the fabric protected from discoloration.

Attention

Your gazebo has been created for all four seasons and will resist snow accumulations of up to 5kg/m². You will need to remove any excess of snow on the roof at all times.

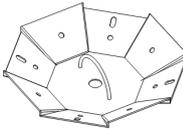
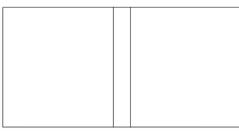
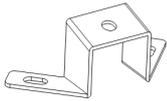
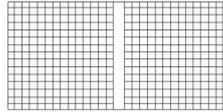
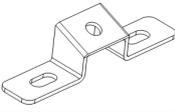

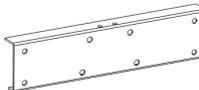
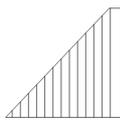
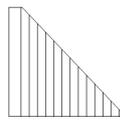
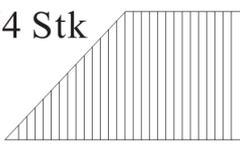
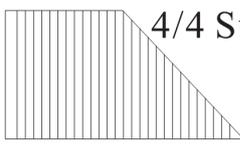
The mosquito netting and the curtains must be removed for winter storage.

Excluded

1. Damages due to vandalism, abuse and incorrect use of the product are not covered by the warranty
2. Damages due to extreme weather conditions such as thunderstorm, hail and high winds are not covered by warranty.
3. Canopy and/or Curtains will fade in the sunshine, the chemicals that make up the colours within the polyester fabric are broken down by ultraviolet light that is present in the sunshine, this is a natural process and is not covered by the guarantee or warranty. We do try to counteract this process by putting a UV resistant additive to the fabric however this only protects the fabric for a certain amount of time.

Note! This gazebo is meant to be used for decorative and sunshade purposes only and is not meant to withstand all elements of the weather. Please remove all FABRIC during adverse weather conditions.


Parts List

Parts #	Figure	Qty	Parts #	Figure	Qty
A		4	M		4
A1		4	N		4
A2		4	O		96+8
B		4	U		4
C		4	H	M6x12 	48+1
C1		8	H1	M6x12 	66+2
D1		4	H2	M6x35 	8+1
D2		4	H3	M5x15 	40
E		1	H4	M6x12 	8
F		1	W		4
G		4	X		4
I		4	Y		12
J1		4	S		1
J2		4	Z		1
K		4	1/4 Stk		2/4 Stk
L		8	3/4 Stk		4/4 Stk
					
					

STEP ONE:

BOLTS NEEDED: H1

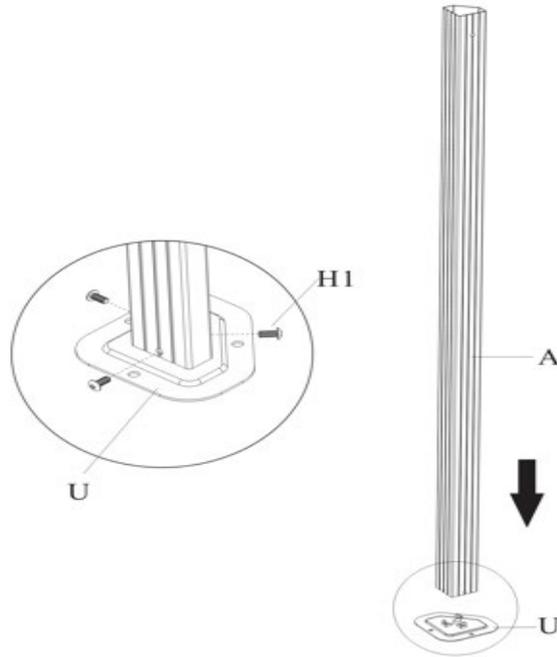CONNECT PART A WITH PART U




STEP TWO:

BOLTS NEEDED: H

2A. SLIDE 6 PART "O" INTO A1 AND 6 PART "O" INTO A2

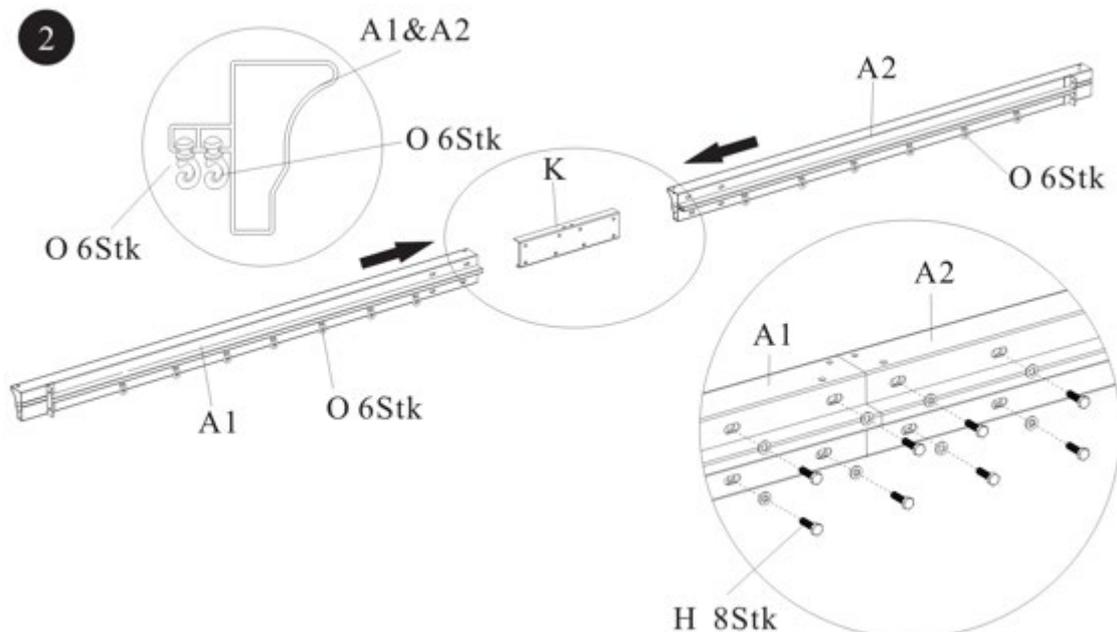2B. CONNECT A1 AND A2 USING PART K




STEP THREE:

BOLTS NEEDED: H, H1, H2

3A. CONNECT PARTS A1 AND A2 TO PART A USING H2 SCREWS ON THE OUTSIDE AND H1 SCREWS ON THE INSIDE

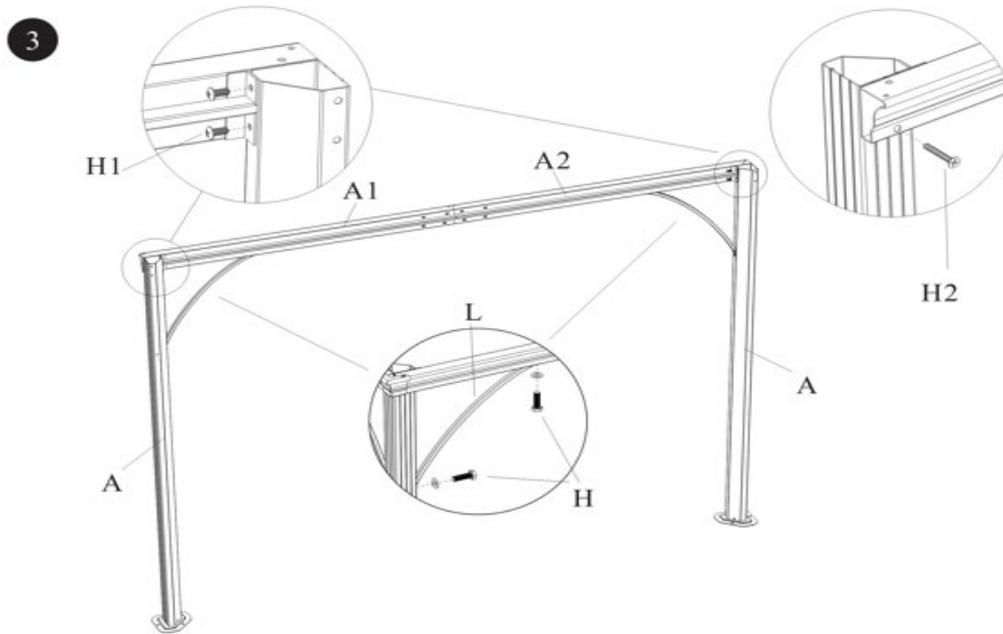3B. CONNECT PART L TO PART A AND A1 (A2) USING H SCREWS




STEP FOUR:

BOLTS NEEDED: H3, H

REPEAT STEP 3 TO COMPLETE YOUR FOUR SIDES


4A. CONNECT EACH SIDE USING PART J1 IN EACH CORNER

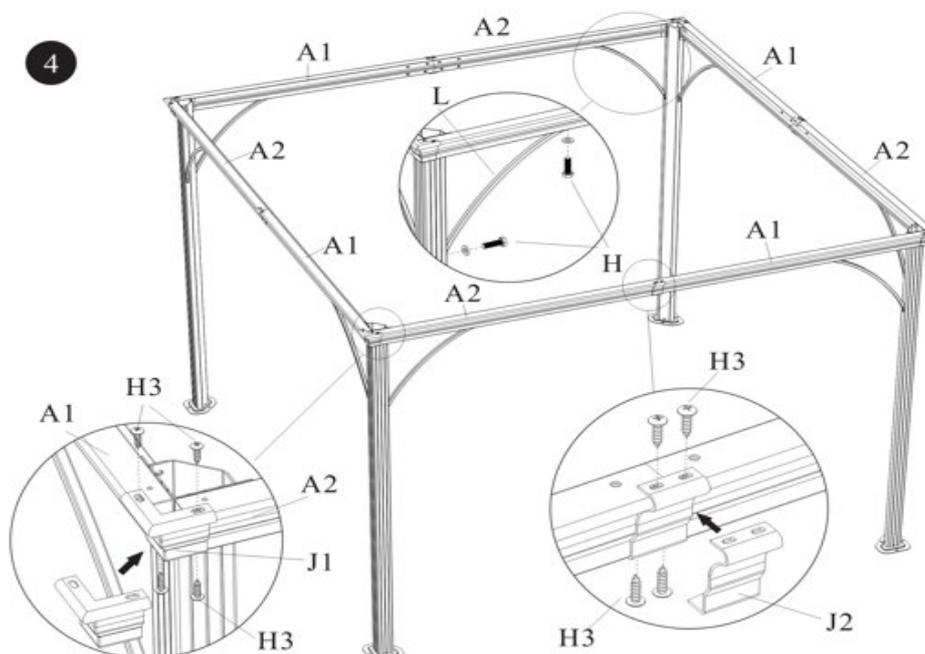4B. CONNECT PART J2 INBETWEEN A2 AND A1 USING H3 BOLTS




STEP FIVE:
BOLTS NEEDED: H1

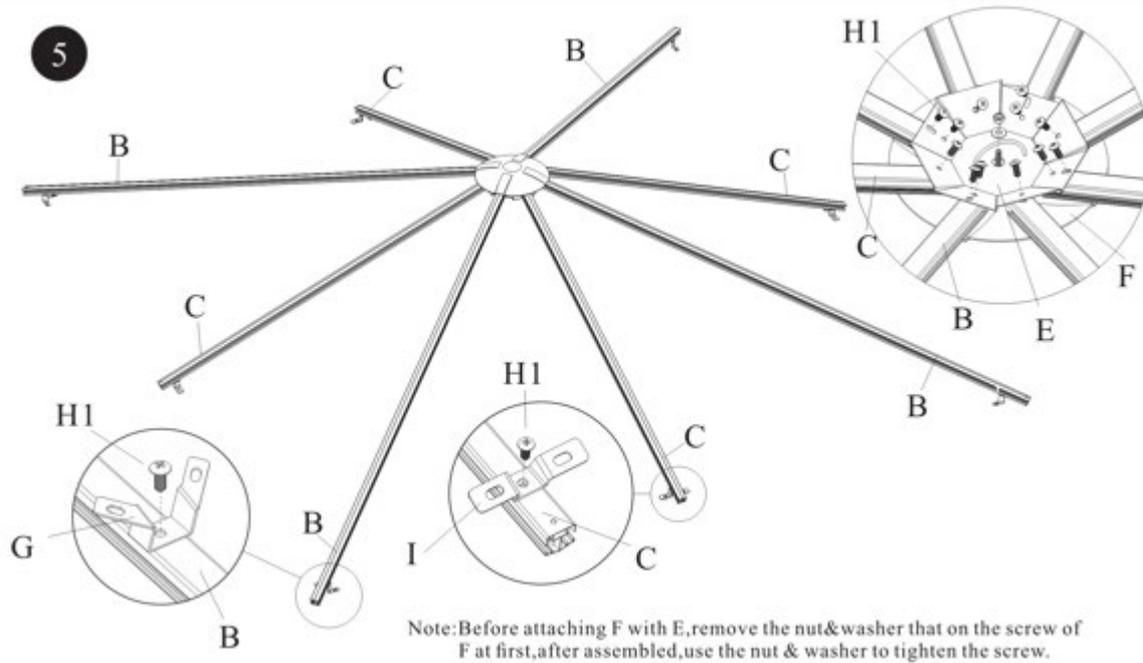- 5A. CONNECT PART I TO PART C**
5B. CONNECT PART G TO PART B
5C. CONNECT ALL PART C AND B TO PART F (TOP) & E (BOTTOM) ENSURING PART B IS IN ALL CORNERS




STEP 6
BOLTS NEEDED: H1

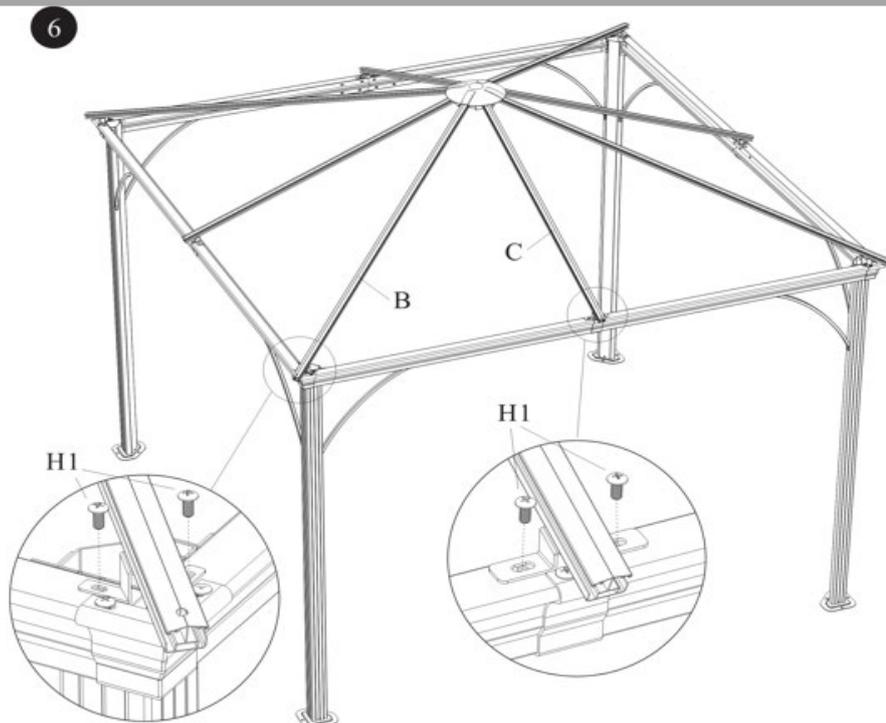CONNECT YOUR ROOF SECTION BUILT IN STEP 5 TO YOUR FRAME WITH PART B IN EACH CORNER USING H1 BOLTS (AS SHOWN IN BELOW DIAGRAM)



STEP 7
BOLTS NEEDED: H3, H4

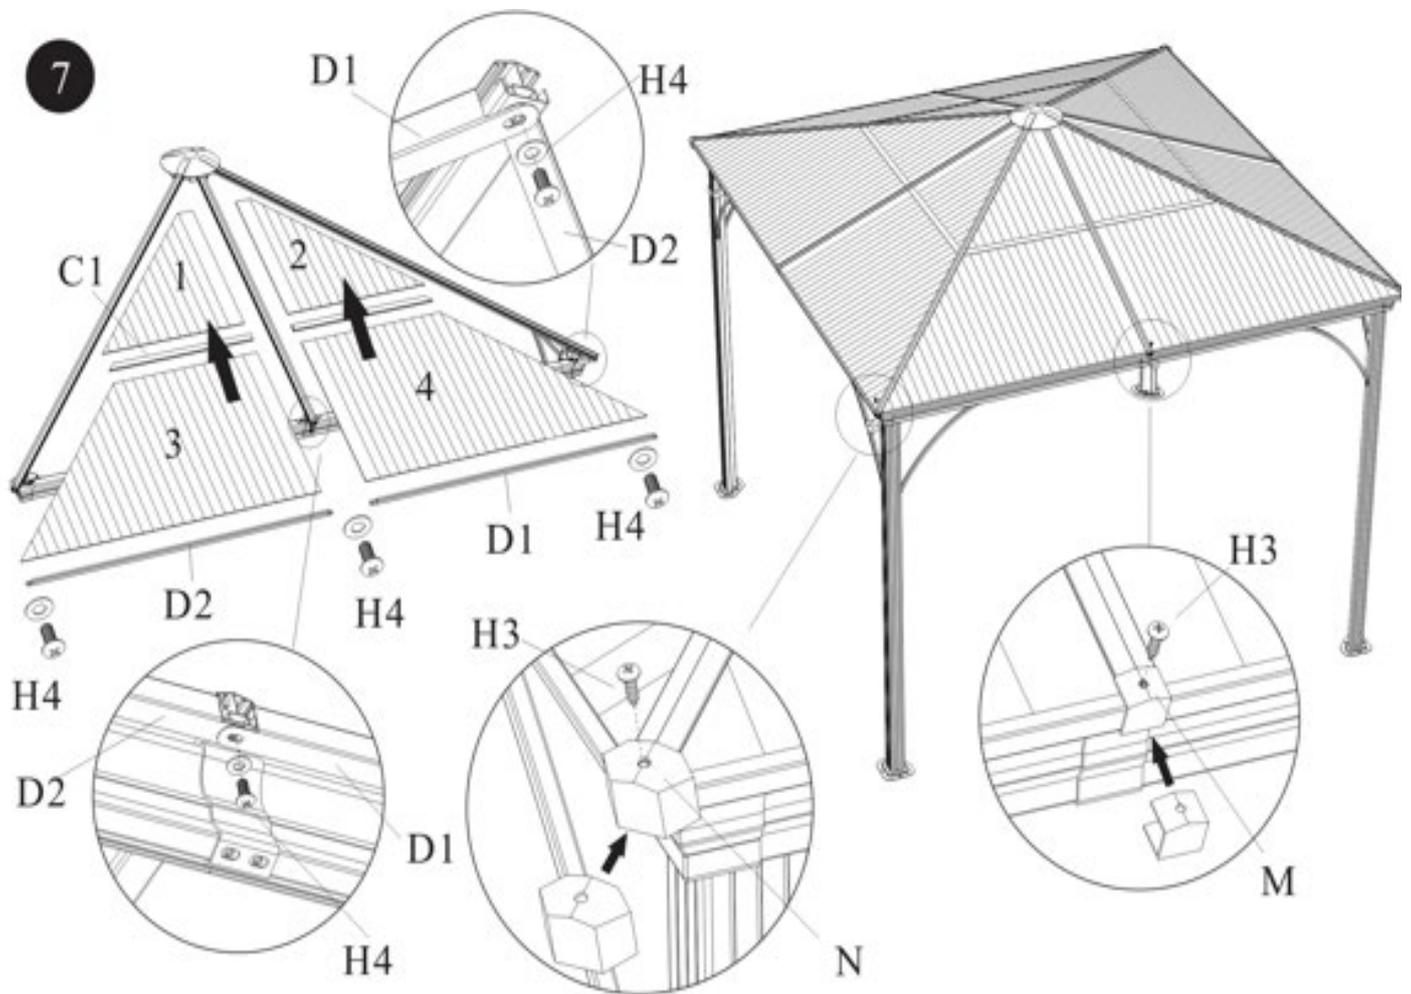- 7A. SLIDE PANEL 1 AND PANEL 2 INTO YOUR FRAME
- 7B. SLIDE PART C1 TO CONNECT TO PANELS 1 AND 2
- 7C. SLIDE PANELS 3 AND 4 INTO YOUR FRAME
- 7D. SLIDE D2 AND D1 BELOW PANELS 3 AND 4 AND SECURE THEM USING BOLT H4
- 7E. SECURE PART N IN EACH CORNER AND PART M IN THE CENTRE USING H3



STEP 8

8A. SLIDE PART X INTO THE INSIDE TRACK

8B. SLIDE PART W INTO THE OUTSIDE TRACK

8C. SECURE YOUR FRAME INTO THE GROUND USING PART Y (ONLY AVAILABLE FOR GRASS) IF YOU WISH TO SECURE TO CONCRETE YOU WILL NEED TO PURCHASE BOLTS FOR THIS.

