












ASSEMBLY INSTRUCTION

G7199 - SINGLE DOOR WARDROBE


No	HARDWARE LIST	Q.TY
①	Bolts M6x35 	16
②	Flat Washers 	16
③	Spring Washers 	16
④	Allen key K4 	1
⑤	Screw Ø4x35 	22
⑥	Screw Ø4x20 	4
⑦	Wooden Dowel Ø8x30 	1
⑧	Handle with bolt 	1 Set
⑨	Bracket 	2
⑩	Tie 	1



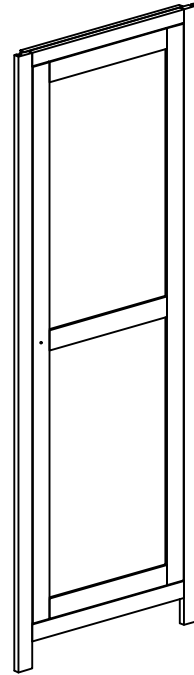
Ⓐ - FRONT FRAME WITH DOOR 1X




Ⓑ - SIDE FRAME: x 2 (Left - Right)

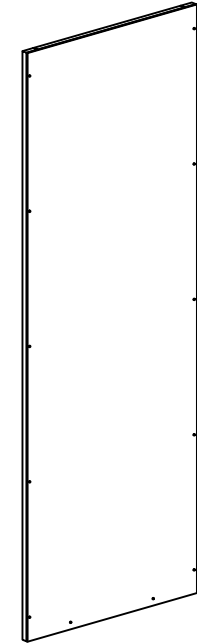

Ⓒ - BACK FRAME 1X

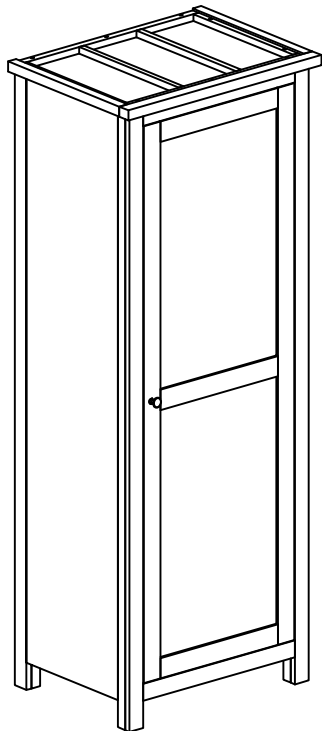

Ⓓ - TOP FRAME 1X

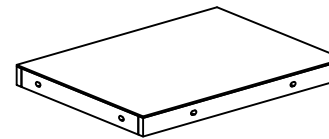


Ⓔ - BOTTOM FRAME 1X




Ⓕ - HANGING RAIL 1X

ASSEMBLY INSTRUCTION G7199 - SINGLE DOOR WARDROBE

STEP 1

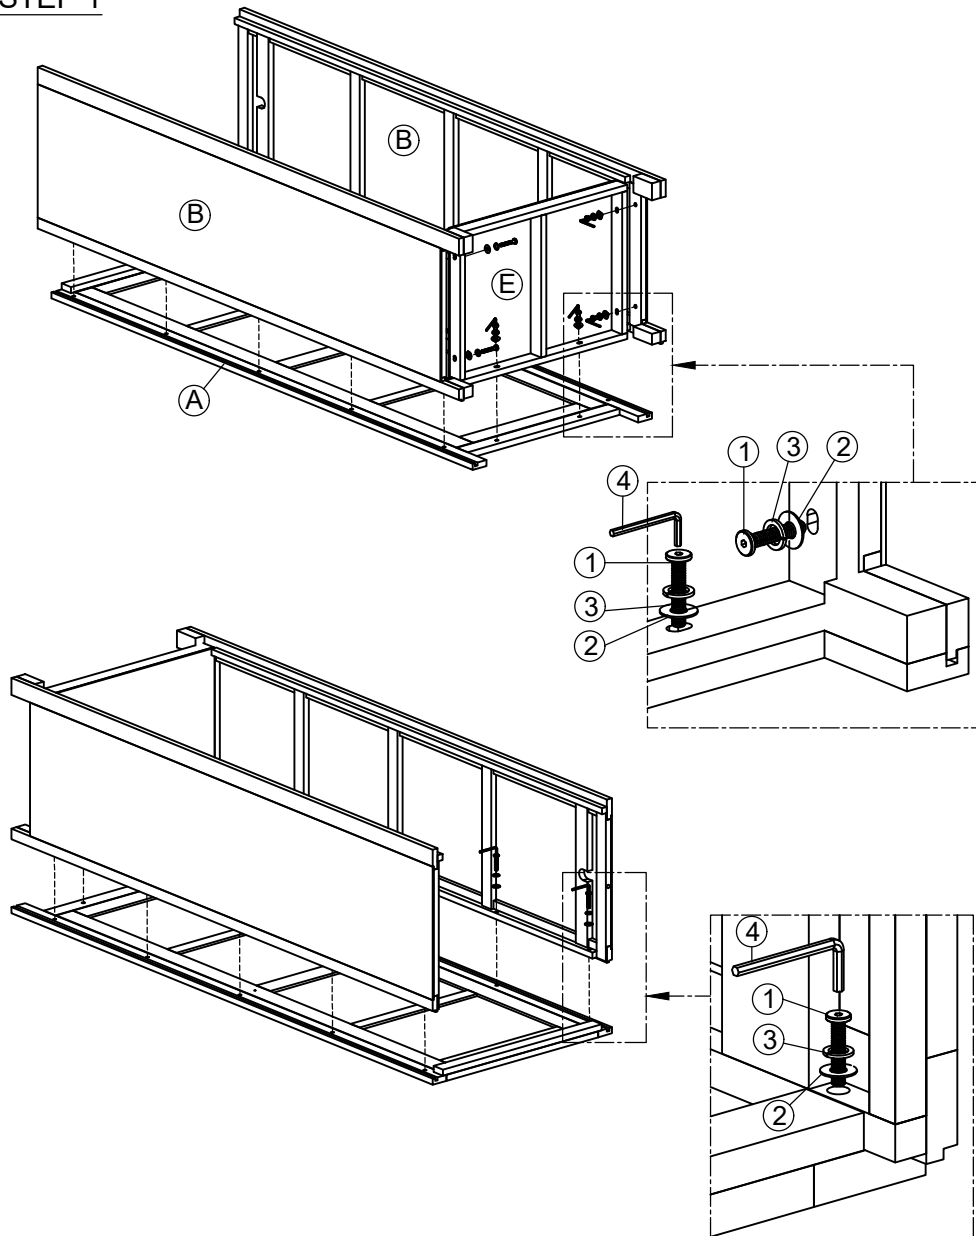


STEP 2

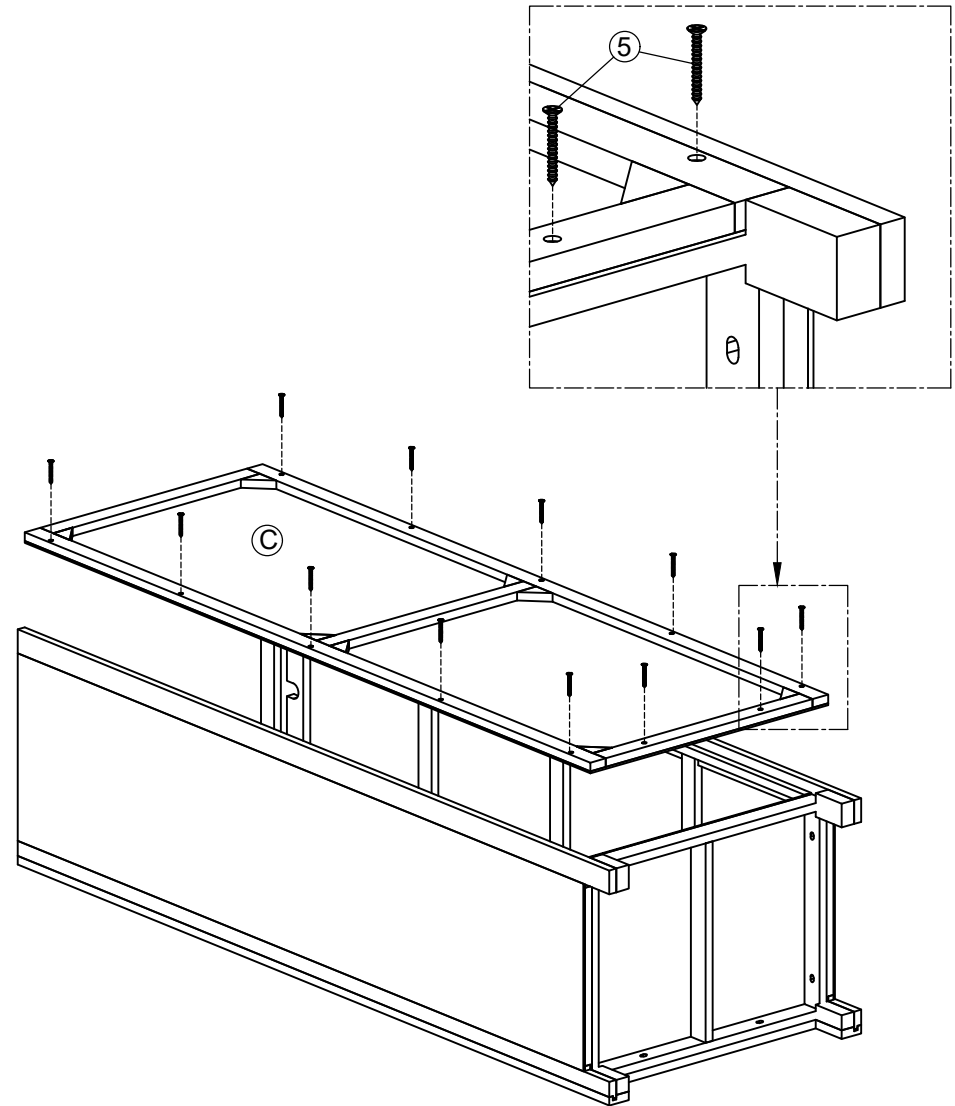


ASSEMBLY INSTRUCTION

G7199 - SINGLE DOOR WARDROBE

STEP 3

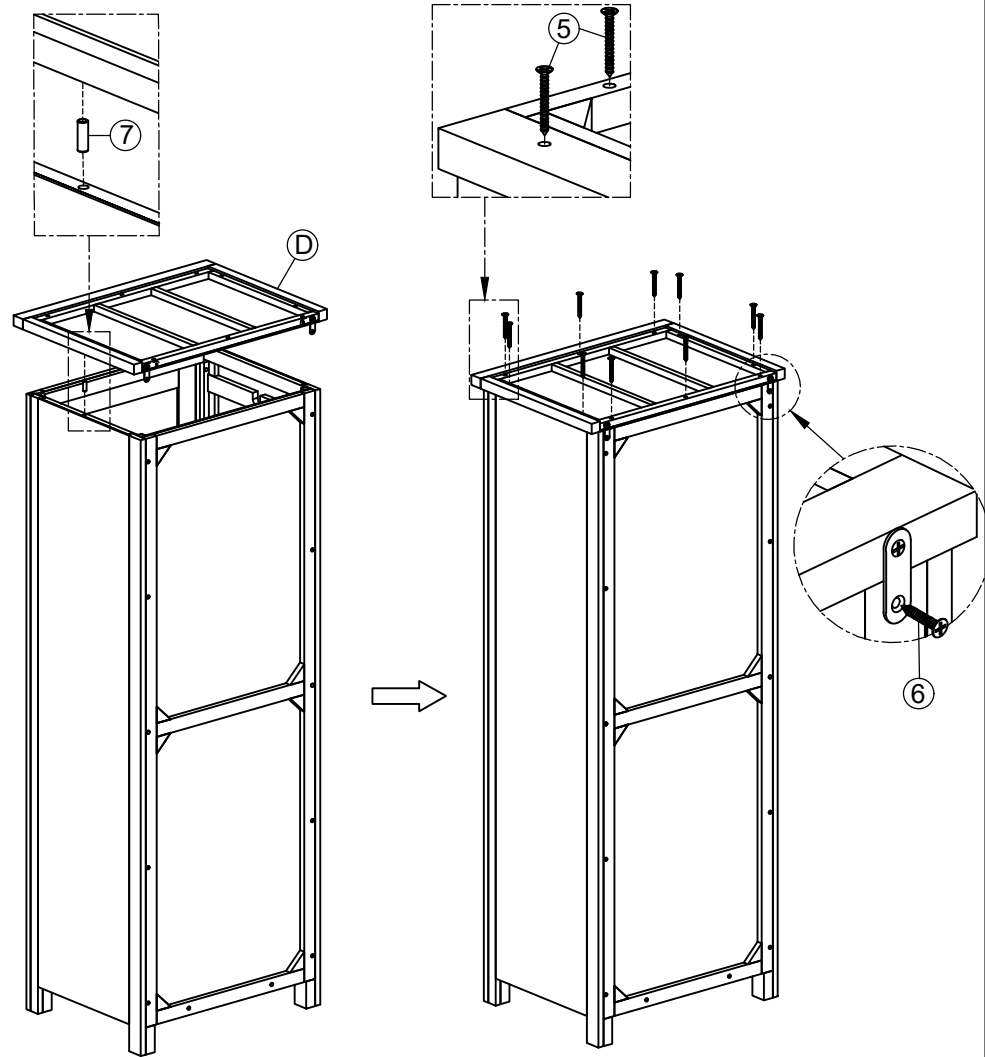


STEP 4

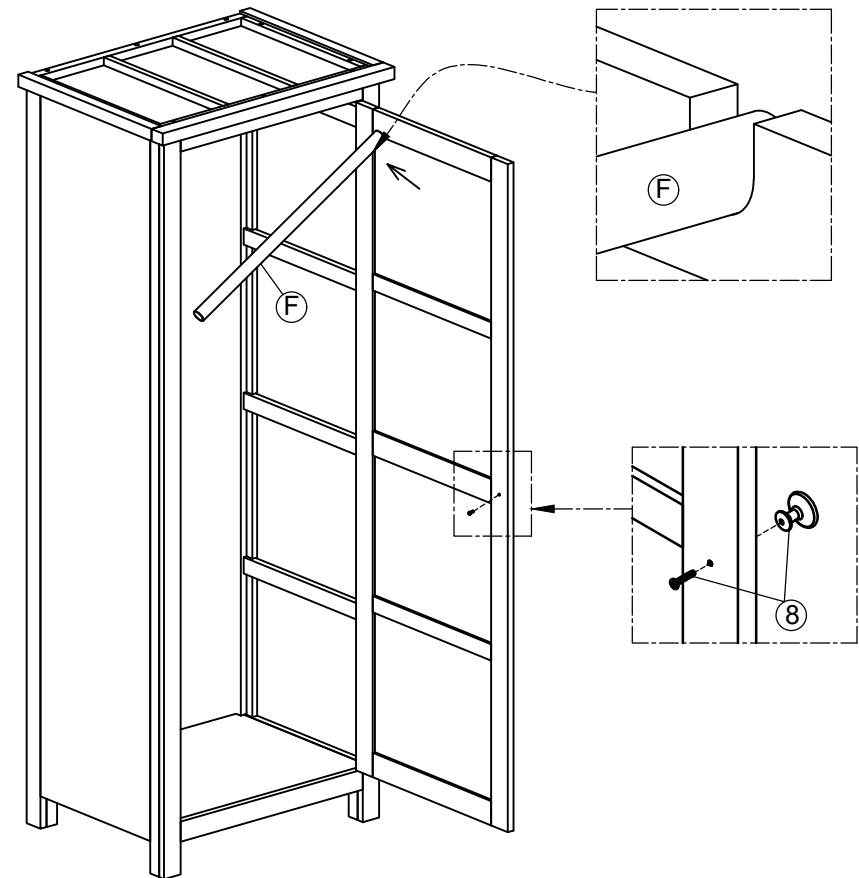

ASSEMBLY INSTRUCTION
G7199 - SINGLE DOOR WARDROBE

STEP 5

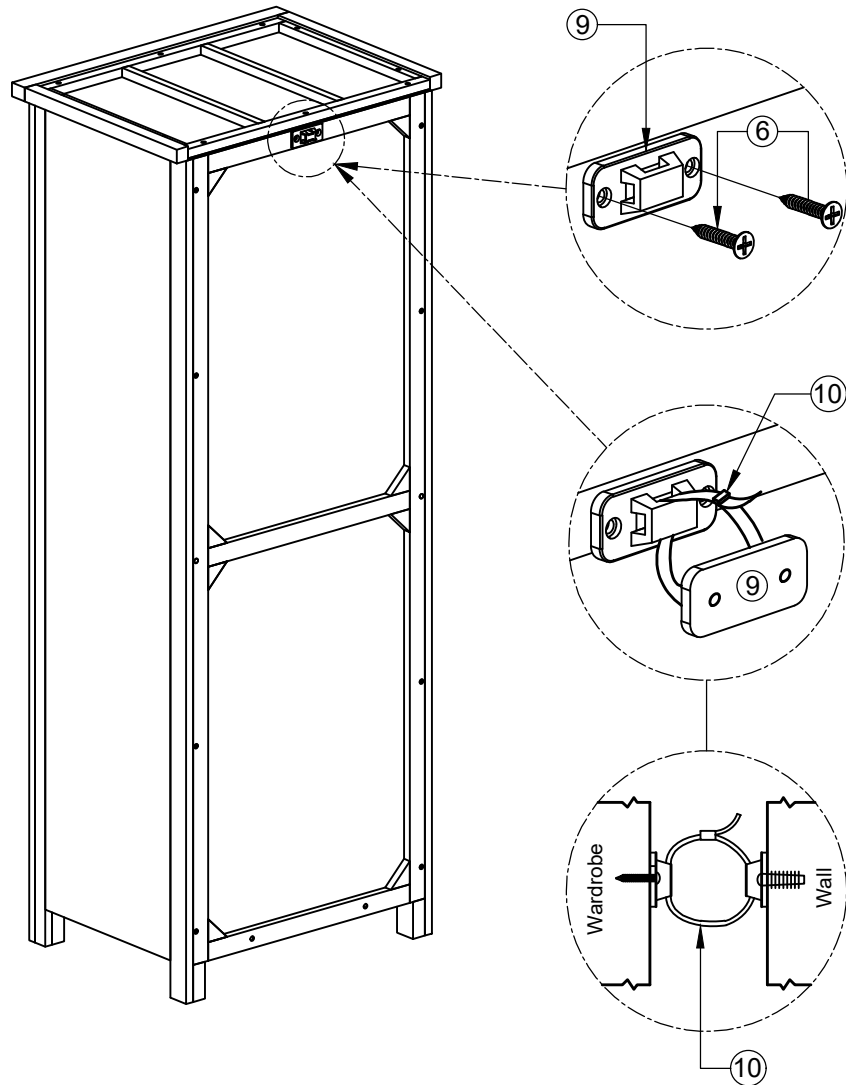

FINAL

