




## 2020 GT500 Aux Idler instructions

Covers adjustable and fixed

1. Remove Left side blower drive snout bolts
2. Install the Idler with supplied allen bolts, torque to 25 LB FT

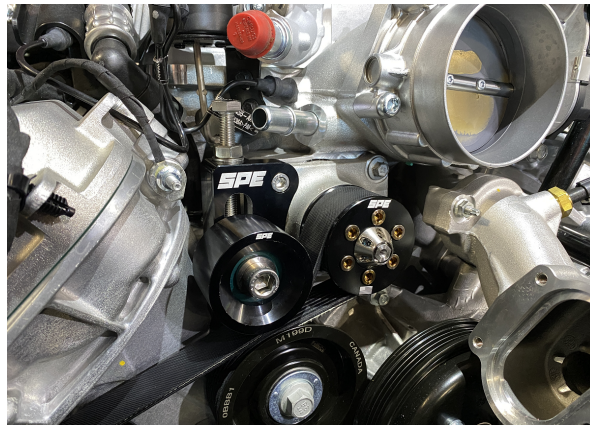



3. Torque Idler pulley bolt to 55-60 LB FT

**\*\* Note**

The adjustable idler also comes with a shorter allen bolt if its full travel is not needed. This allows for better aesthetics when using mid travel.