




6.7 Powerstroke CCV ICC Instructions

Patent Pending

1. Remove your current CCV outlet 2 bolt hose flange.



2. Install the Internal catch can below the 2 bolt flange. Install the O ring and use the supplied longer hardware. Push the ICC towards the front of the vehicle and tighten the bolts.

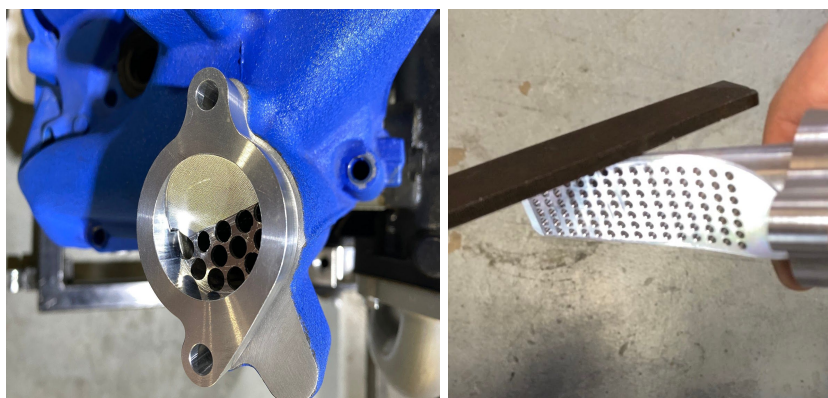

Note. It may be necessary to file or sand the edges to get the baffle to drop all the way in. This is due to casting irregularities from Ford. It's usually not necessary to remove much material if any. Try to remove an even amount from both sides with a file or angle grinder. You can normally see where the rubbing is occurring. Remember to take small amounts off at a time.

