





SPE Air Intake System

2017-2019 6.7L Superduty

Installation Instructions:

1. Remove Factory intake setup including the air box.

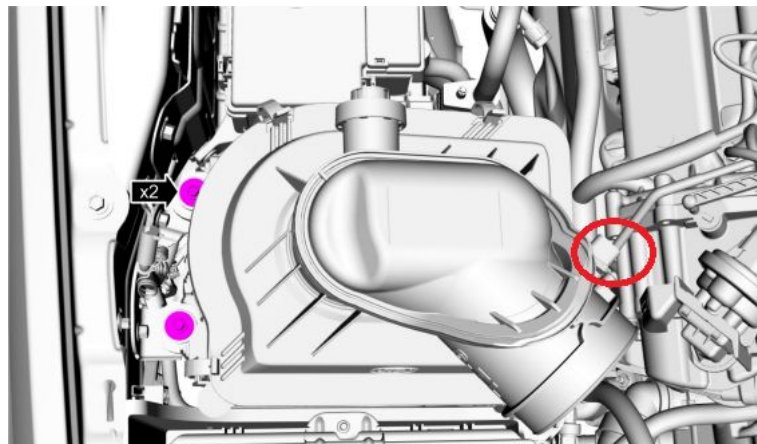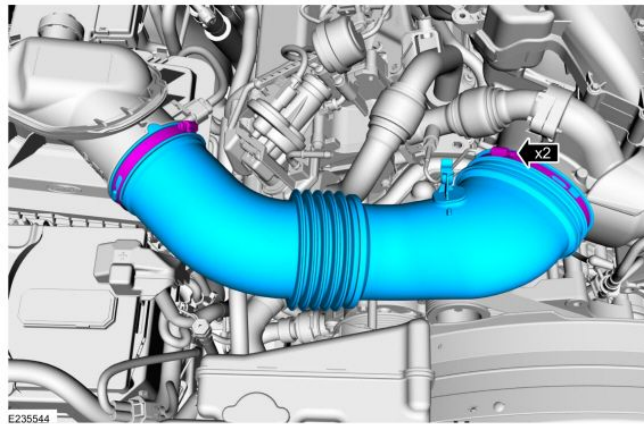

2. Remove the MAF sensor.

3. Install the MAF sensor with the provided bolts into the SPE intake. The sensor will only fit one way.
4. Install the filter onto the end of the SPE Intake. Install the silicone coupler and scroll clamps loosely on the oval end. Slide it all the way on the intake tube as shown below.



5. Loosen and twist the battery terminal and push toward the front of the truck, as shown.



6. Install the intake assembly on the truck, push the intake mounting stud into the factory grommet, push the silicone coupler on to the lower intake manifold, take care positioning the intake tube making sure there is adequate clearance at the maf and battery cable positions as shown.



*****Tuning will be required to optimize the intake due to the large diameter. Contact SPE for an update if you're already an SPE Customer. If not contact your tuner.

***** This is designed as a performance intake system.