




LeatherZ Z3/M Coupe Sunroof Sunshade


The LeatherZ Z3/M Coupe Sunroof Sunshade mounts to the metal frame of the sunroof. The front edge is a compression fit between the sunroof and the headliner, the rear edge is secured to the metal frame of the sunroof with Velcro. The Sunshade will work with the sunroof open or closed.

Installation


Open the Sunroof to the full open position. Using the supplied alcohol swab, clean the rear edge of the sunroof frame (1). This will ensure that the adhesive on the Velcro will adhere properly.

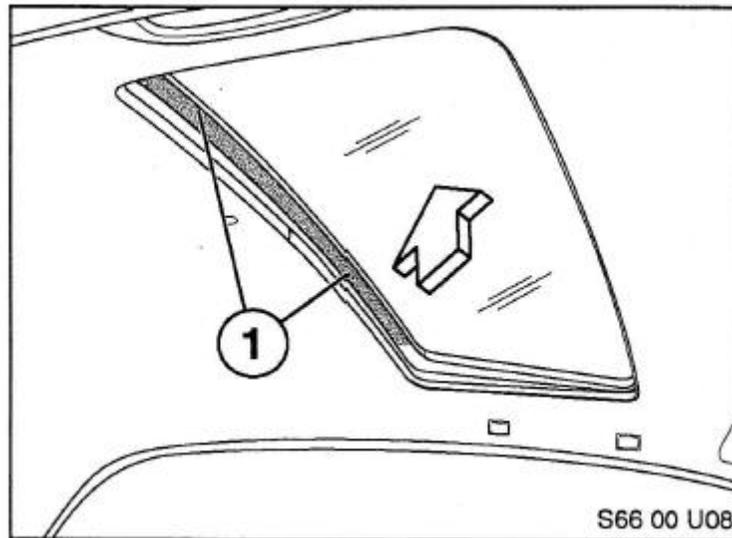


Remove the protective backing from the three Velcro Strips on the rear edge of the Sunshade (1) to expose the adhesive. Do not separate the loop/lock Velcro strips on the rear edge of the sunshade at this time. The Velcro Strips on the front edge (2) of the Sunshade are ready for installation.

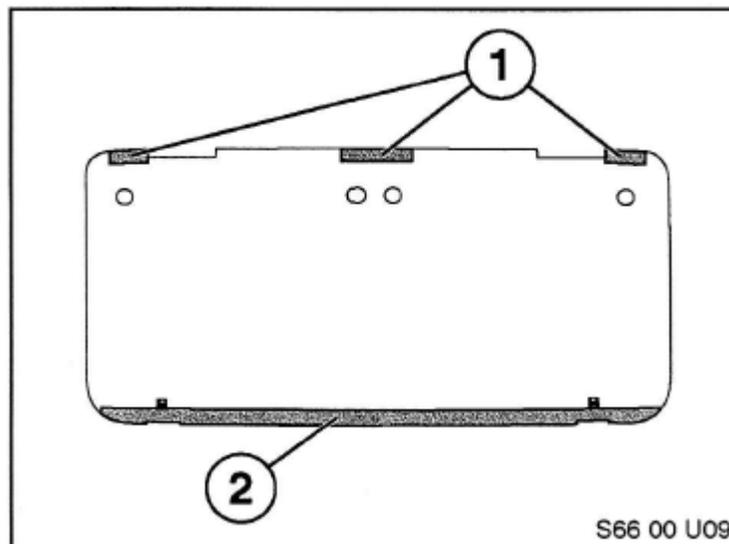

Insert the Sunshade (1) (black side facing the inside of the cabin and white side facing the glass) into the sunroof opening by sliding the rear edge (the edge with the 4 finger holes (2)) into the rear of the sunroof opening. USE CARE to prevent the exposed Velcro strip adhesive from attaching itself to the rear edge of the sunroof panel.

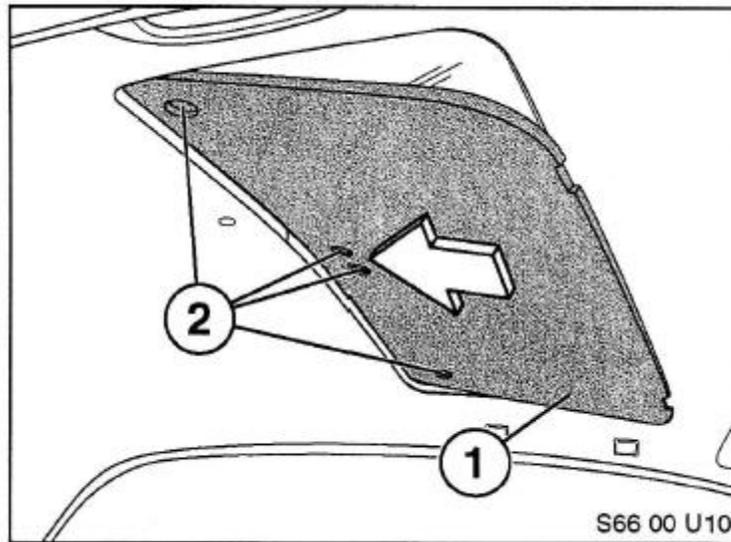

Slide the sunshade forward (1) into the gap between the headliner and the sunroof panel. There are 2 stops on the top of the sunshade that will rest against the front edge of the sunroof panel.

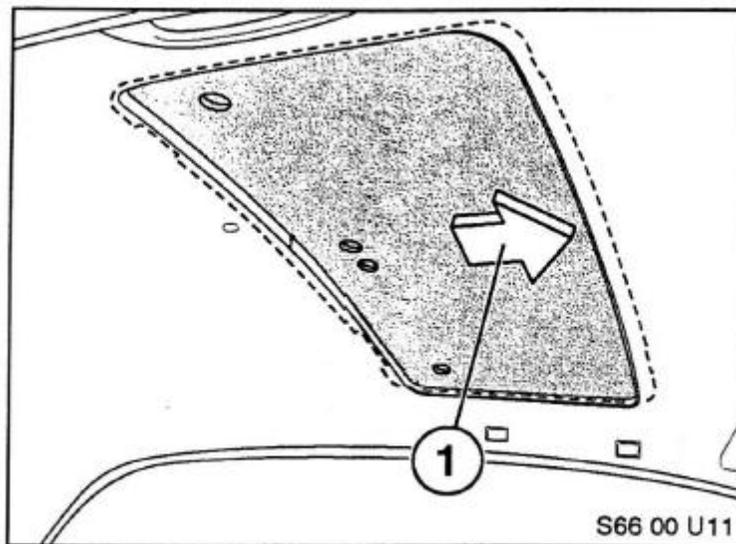

Center the sunshade side-to-side in the sunroof opening. Note that there may be a slight gap between the side edges of the sunshade and the sunroof. This gap is necessary for installation/removal as well as heat expansion. With the sunshade properly positioned and centered, close the sunroof to the full closed position. Doing this will allow the rear edge of the sunroof panel to engage the exposed adhesive on the Velcro.

Open the sunroof to check fit of the sunshade. Close the sunroof with the sunshade attached and leave closed for at least 24 hours to insure that the adhesive on the Velcro has properly adhered to the sunroof frame.

Sunshade Removal

1. Open the Sunroof to the full vent position.
2. Using the four finger holes in the sunshade, pull down on the back edge of the sunshade to separate the Velcro.
3. Slide the sunshade toward the rear of the car until the front edge of the sunshade clears the front edge of the sunroof opening.
4. Pull the front edge of the sunshade down and into the cockpit while sliding the rear edge forward.
5. Installation is the reverse of removal.

Customer Satisfaction

If you like my work, please drop me a line and let me know. Tell other Z3 and M Coupe owners. If you are not happy with my work, let me know. Let me make it right for you. -- Andy Maddux