


3" Valance Installation

For Curved (shown here)
or Straight face Valances

Leviosa Motor Shades

Left bracket

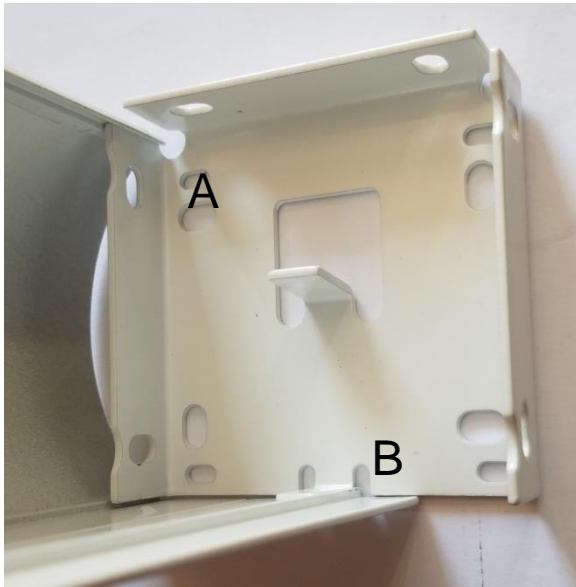


Standard Roll

Fabric rolls to back of bracket

1. Hang valance from Upper front tab (A).
2. Swing valance down so it 'clips' behind bottom tab (B).

Right bracket

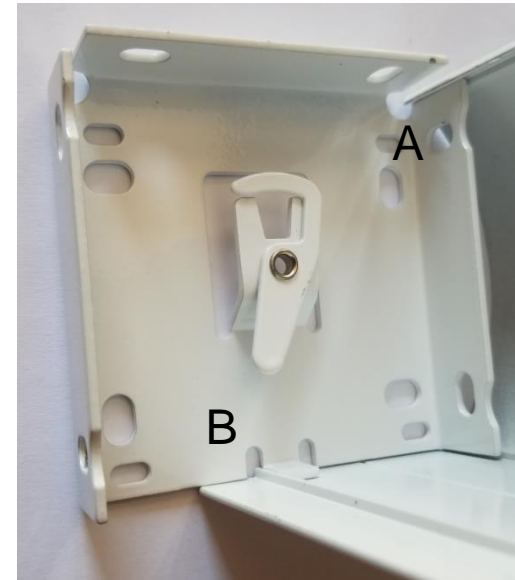

Reverse Roll

Fabric rolls to front of bracket

1. Hold valance from Lower front tab (C).
2. Swing valance UP so it 'clips' into upper slot (D).

Notes:

1. Special bracket modifications needed – please contact us.
2. 1/4" space necessary at top to insert valance and fasten.

