



## 2021+ Ford Bronco Limb Riser Installation Instructions



### Tools Required:

- Trim tool or flathead screw driver
- 10mm socket
- 7/16" socket
- T30 Torx bit
- 4mm Hex bit
- 1/8" Hex bit

- 1) Using a trim tool (or flathead screw driver) press on the tab to remove the accessory ready mount covers above the windshield on both sides (Fig.1).
- 2) Using a 10mm socket, remove the two nuts and plastic cover mounts on both sides. (Fig. 2)
- 3) Install the limb riser top brackets. Reinstall the plastic cover mount and nuts on top (Fig.2). Torque to 7.7 lb.ft. (10.5 Nm). Repeat for the other side.
- 4) Reinstall the accessory ready mount covers. (Fig.1)

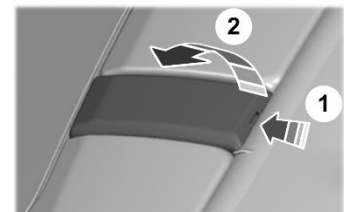


Figure 1

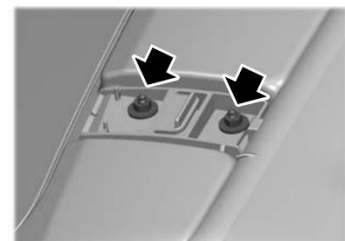


Figure 2

- 5) Remove the factory M6 fasteners on the fender anchor points (Fig.3) using the T30 Torx bit.

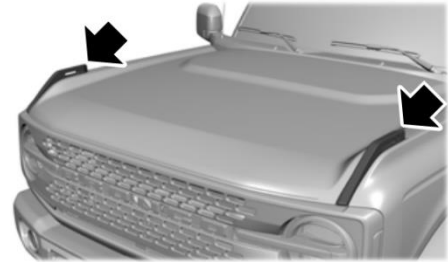


Figure 3

- 6) Using a 4mm hex on the fasteners and T30 Torx on the factory nut, install the lower limb riser brackets on the outer sides using the supplied screws and fender washers (Fig.4). Torque 7.7 lb.ft. (10.5 Nm)

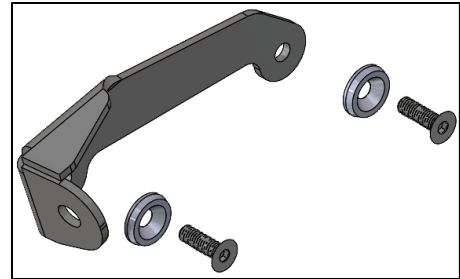


Figure 4

- 7) With both the upper and lower brackets installed, use a 7/16" socket and 1/8" Hex bit to connect the limb risers on the top. The washers go on either side of the upper brackets.



Figure 5

- 8) Install the lower end of the limb risers as shown in Figure 6. Screw the tension knob in till the cable is tight.

- 9) Check that all fasteners are secure after driving 100 miles and periodically afterward.

Notes:

- Use the tension knobs to loosen the limb riser cables when you need to lift the hood.
- The upper brackets are ready to mount lights. Read your owner's manual for wiring lights



Figure 6