


LONDON COLLECTION CABINET PULL


- 4" 248704
- 6" 248706
- 8" 248708
- 12" 248712
- 20" 248720

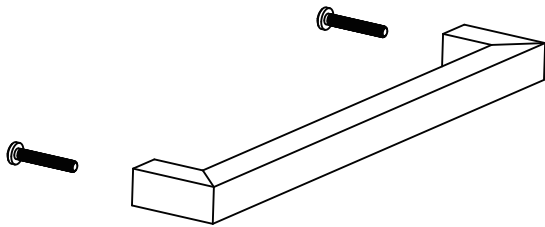

Tools required for installation



Level



Drill



Pencil



Screwdriver



Hammer

Step 1
Measure the Center to Center distance of pull with tape.

Step 2
Mark the holes position with pencil, make sure the holes are level.

Step 3
Drill holes on the board.

Step 4
Fix the screws onto pull and tighten it.